



20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft-bristle brush. Hose down to rinse.

POLYWOOD

 
Assembly Instructions




L1D83, L1R83, L1B83

For Use With Rectangle Plank Table-PL83

TOOLS






3/8" wrench
(not included)

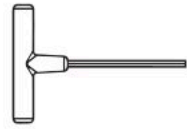 


4mm T-handle
hex key (included)

   PARTS

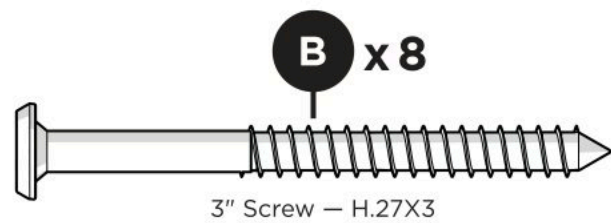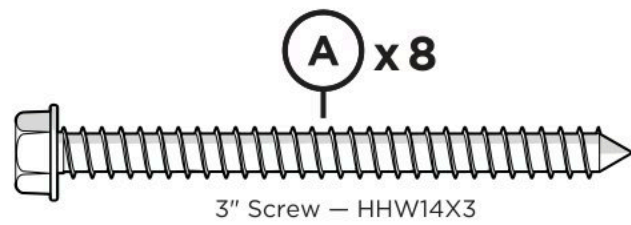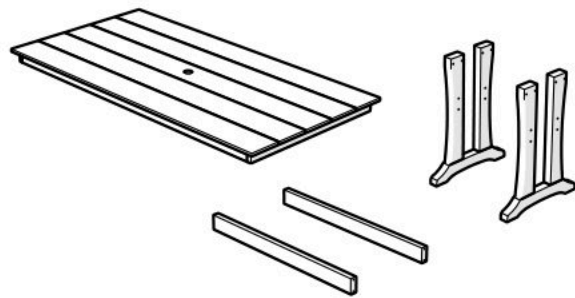


1

 
Align each screw with a
pilot hole and partially
thread by hand before
fully tightening

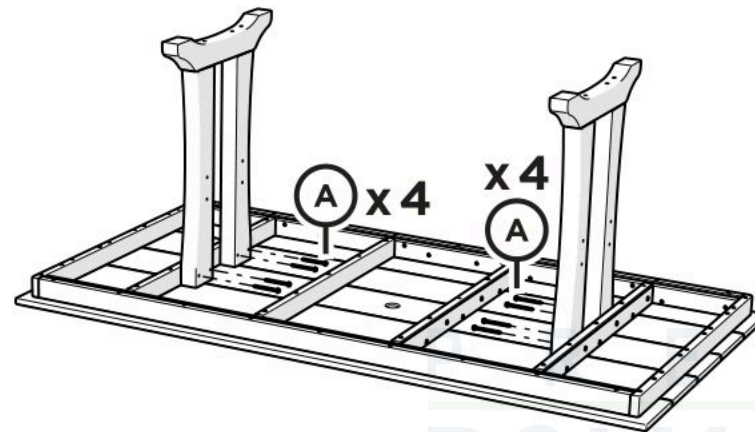

 If legs have
relaxed during
transit, they
may be guided
into pilot hole
alignment

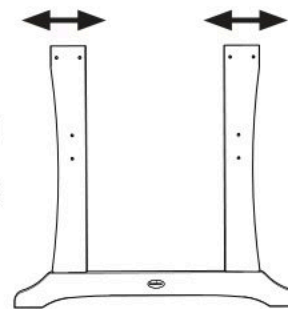

2

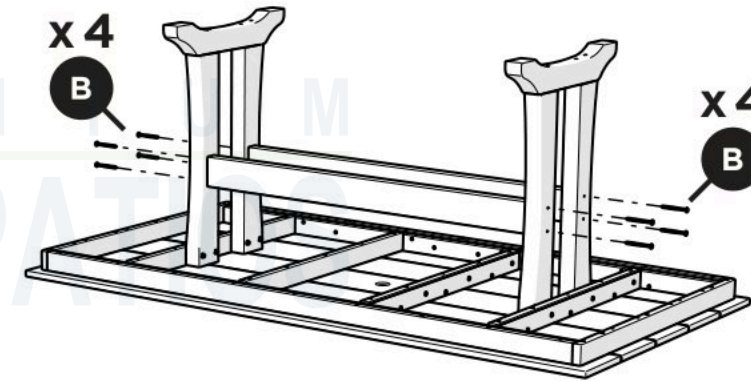 

Removable
table plug



POLYWOOD

Assembly Instructions



20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

 
Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft-bristle brush. Hose down to rinse.

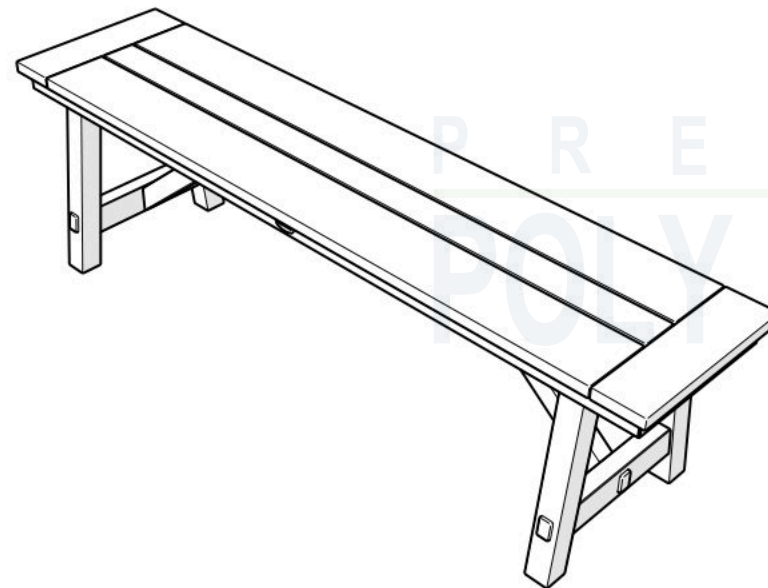


PL36-T3L2 Rustic Farmhouse 60" Backless Bench

 TOOLS




3/8" wrench
(not included)

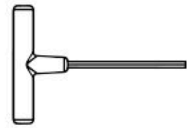 


4mm T-handle
hex key (included)

 PARTS

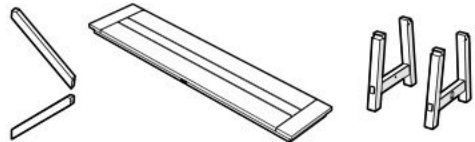


A x 4

 


3" Screw — HHW14X3

 B x 2




2.5" Screw — HHW14X2.5

 C x 2




2" Screw — H.27X2

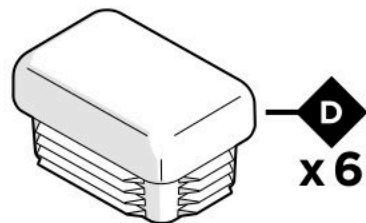 


D
x 6

1.5" Cap — HFTNIX1.5-TENON

 
1

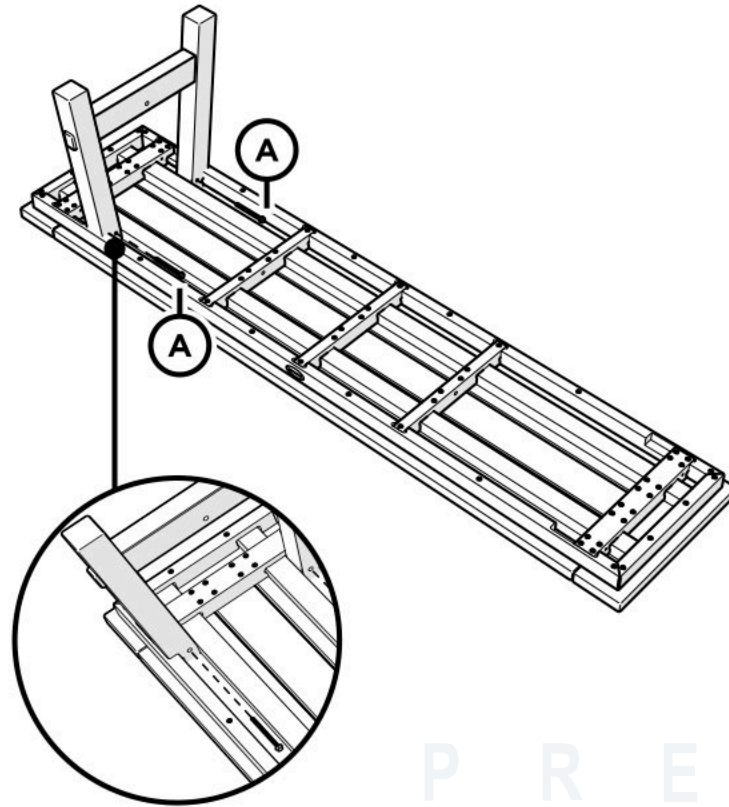


2

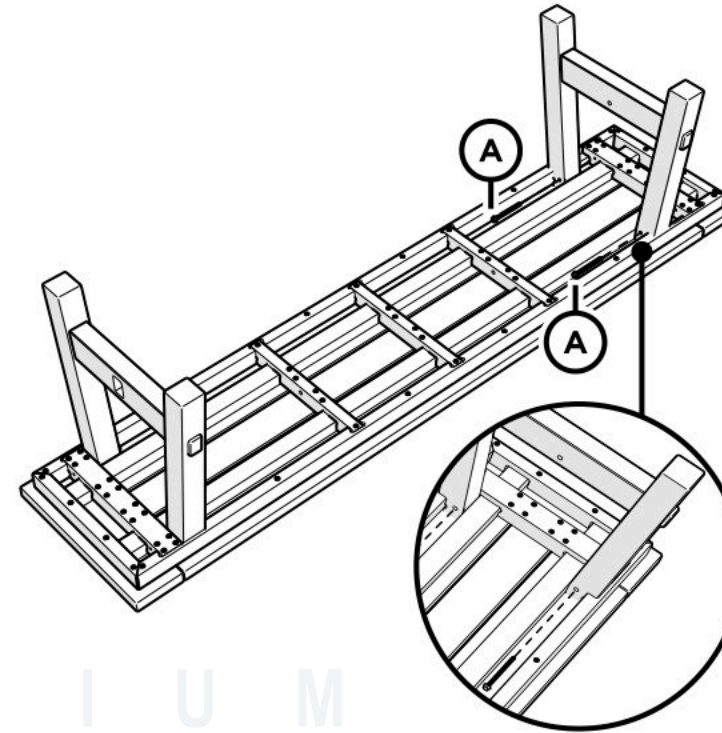 


3

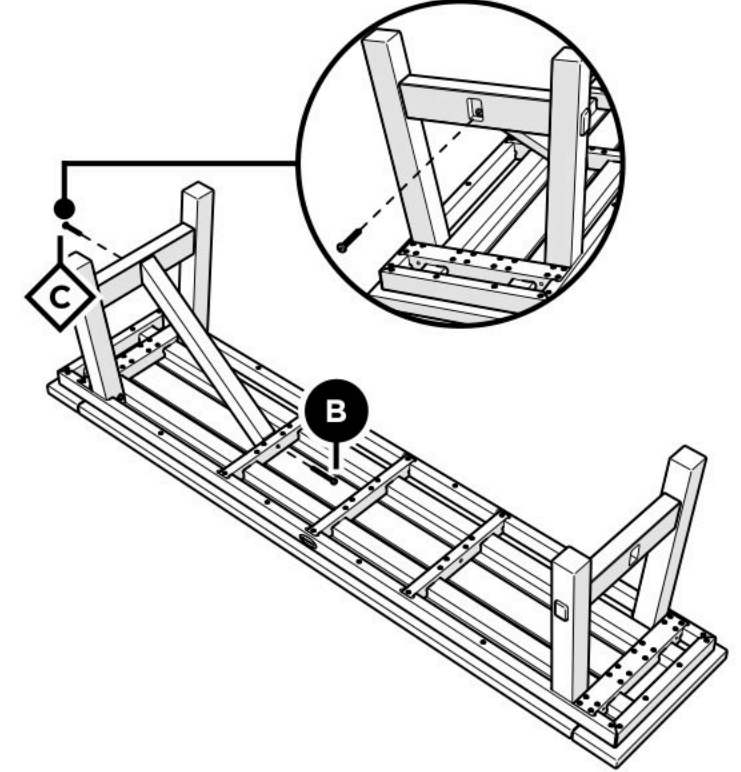 


4

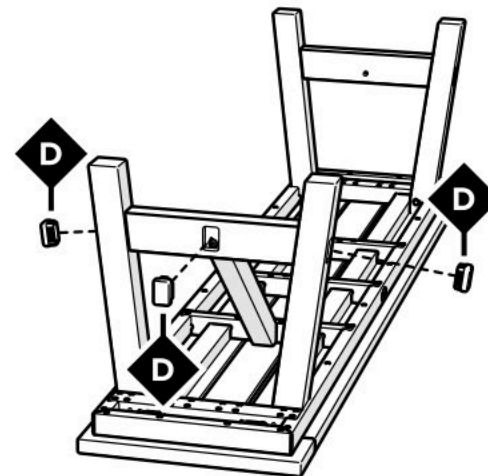 

5

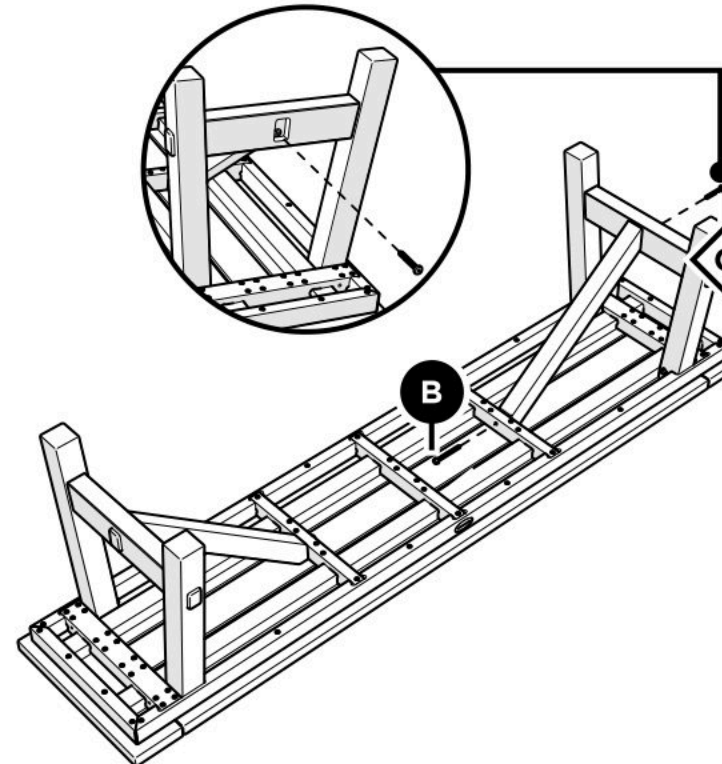 

6

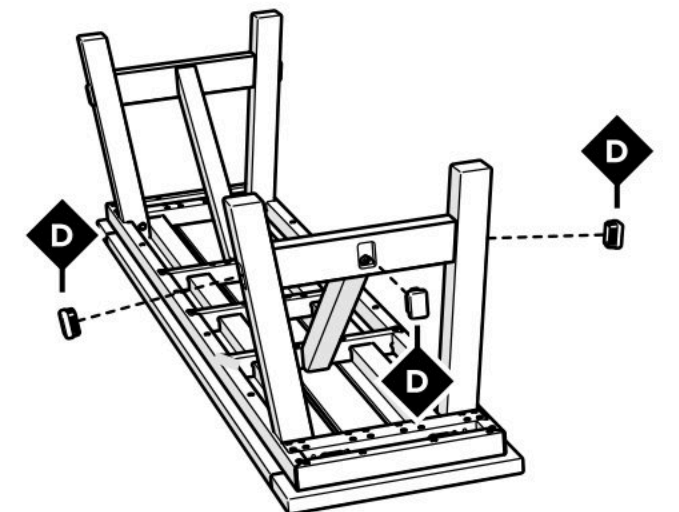 

POLYWOOD

Assembly Instructions



20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

 
Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft-bristle brush. Hose down to rinse.

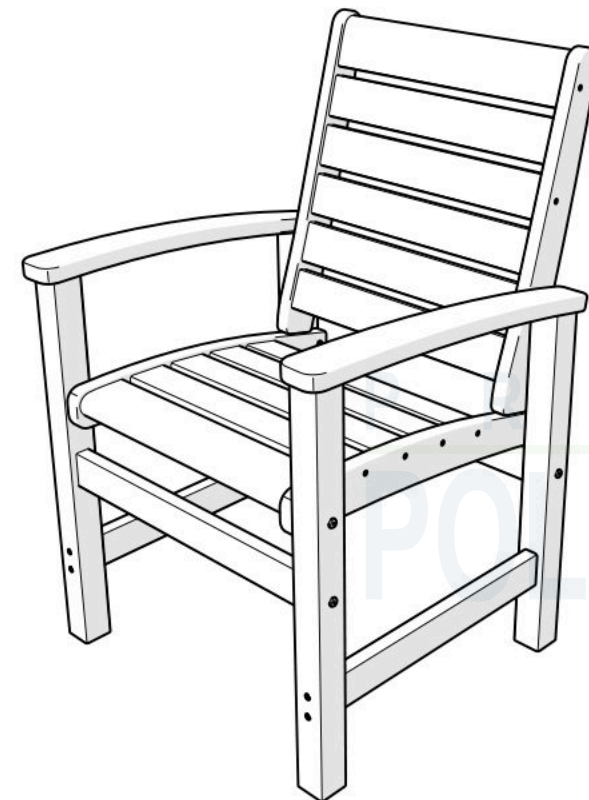


1910 Signature Dining Chair

 TOOLS

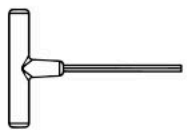


4mm T-handle
hex key (included)

 PARTS

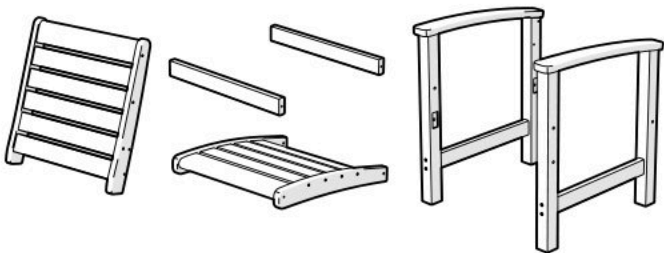


A x 6

 

2.5" Screw — H.27X2.5

 B x 4




3" Screw — H.27X3

C x 2




4" Screw — H.27X4

 1

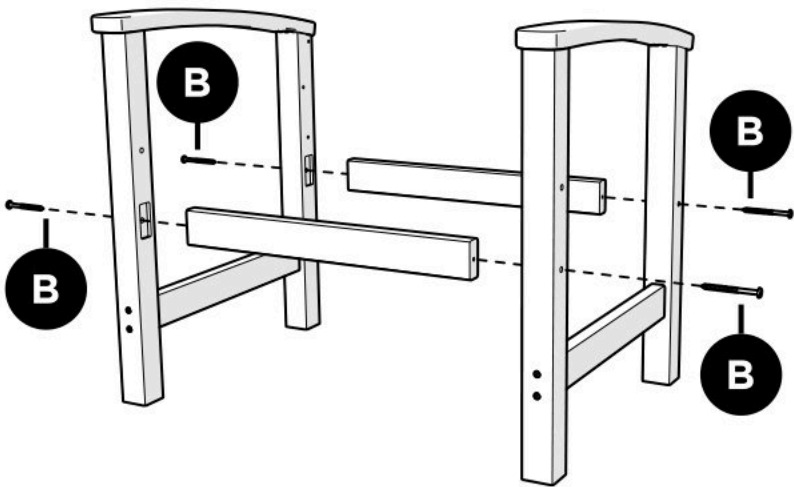


Do not tighten screws until last

 
2

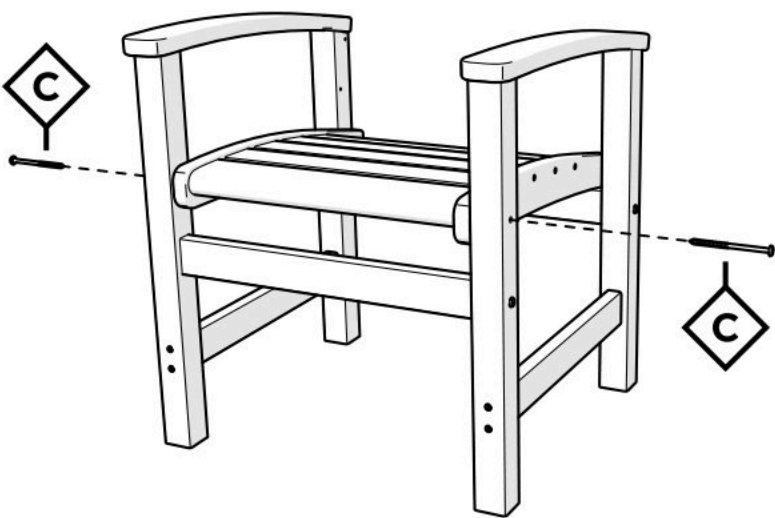


3

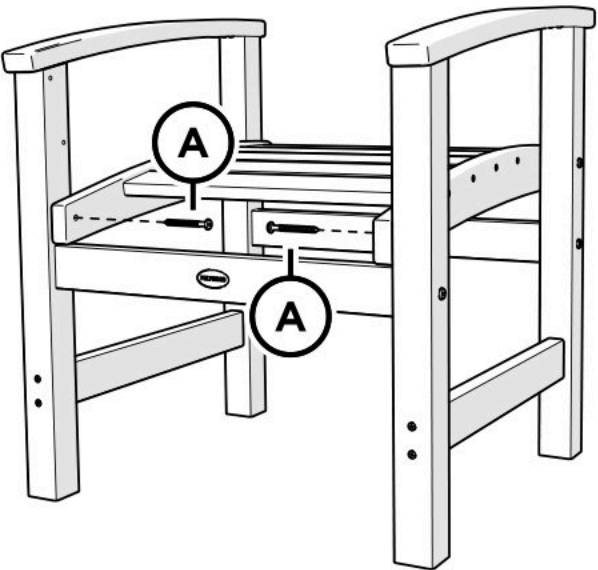 

4

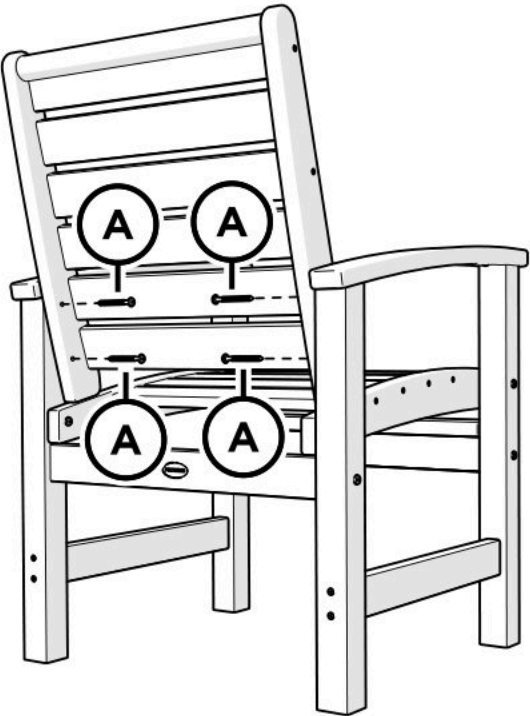 

Tighten all

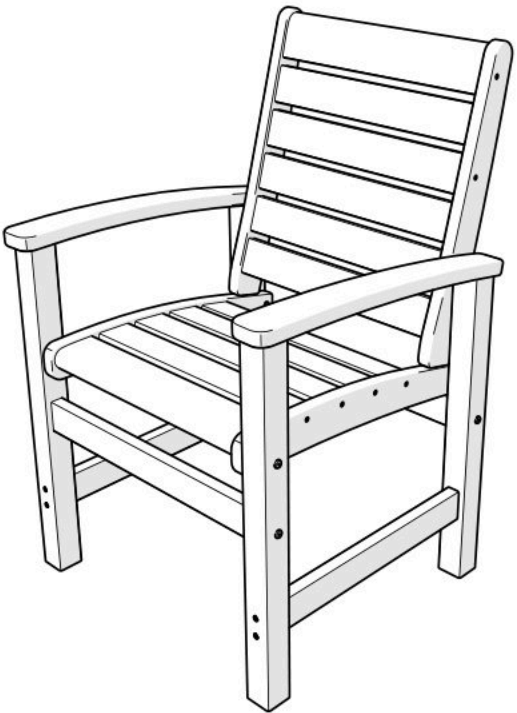 

POLYWOOD