



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please visit

with our Customer Experience



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions



 
L1B48

For Use With 48" Nautical Round Table Round Table

TOOLS




3/8" wrench
(not included)

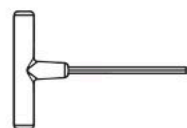


4mm T-handle
hex key (included)

 PARTS

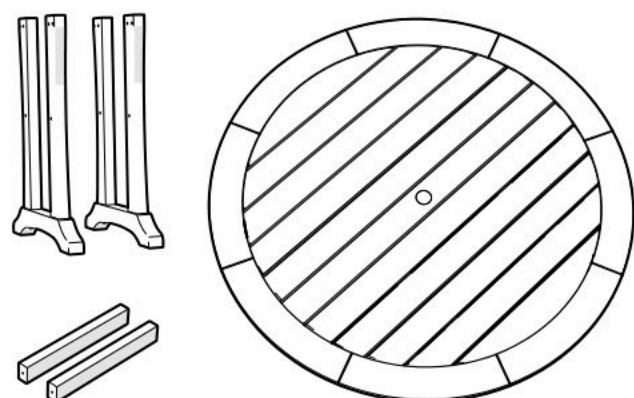


A x 8

 

2.5" Screw — HHW14X2.5


 
B x 4



3" Screw — H.27X3


1

  Align each screw with a
pilot hole and partially
thread by hand before
fully tightening

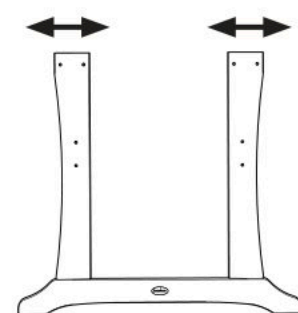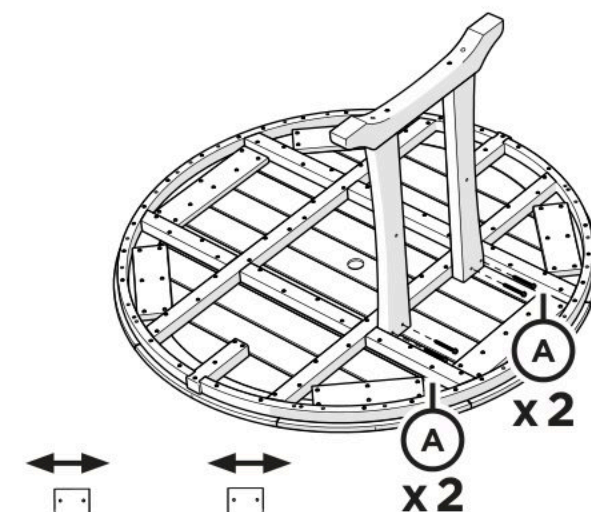


If legs have
relaxed during
transit, they
may be guided
into pilot hole
alignment

 2

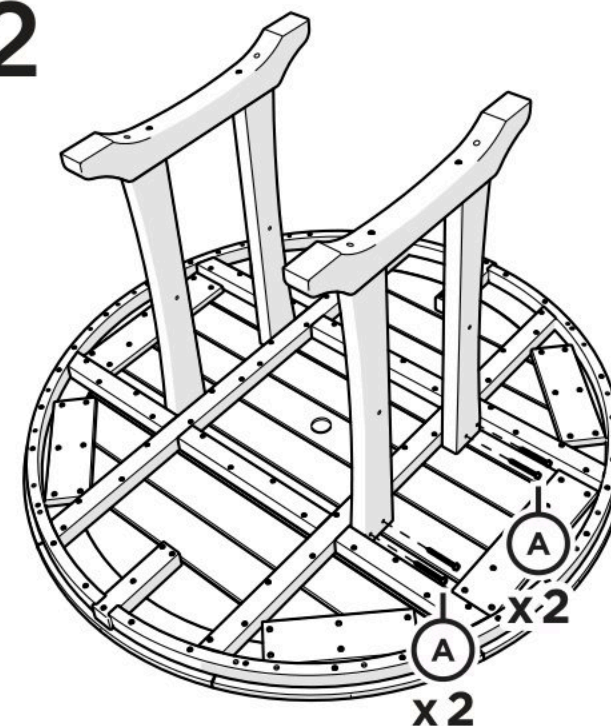

3

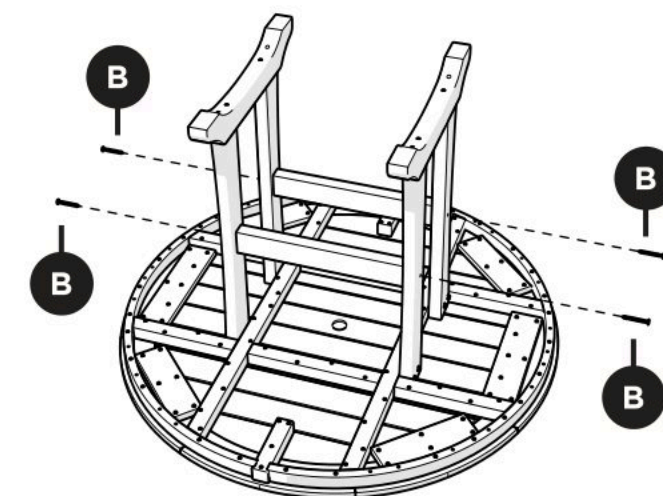 

4

Removable
table plug





20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



Cleaning Tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions



CLTGD240
Cottage Dining Arm Chair




CLTGD241
Cottage Counter Arm Chair




CLTGD242
Cottage Bar Arm Chair

 TOOLS




3/8" wrench
(not included)

 PARTS

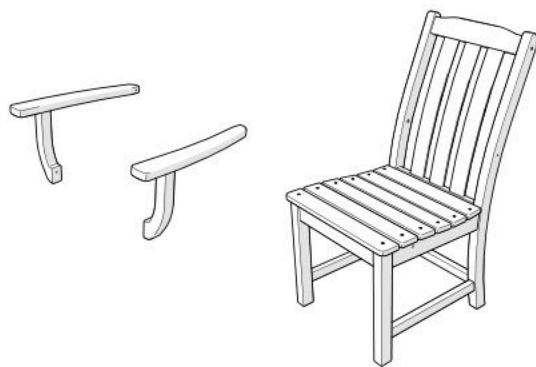

A x 2

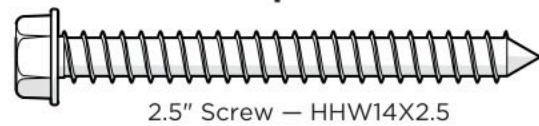 

2.5" Screw — HHW14X2.5

 
B x 2




Cap Dowel Screw — HD.25X2+P11420

1


Twist dowel screw into arm until
finger-tight, remove protective cap

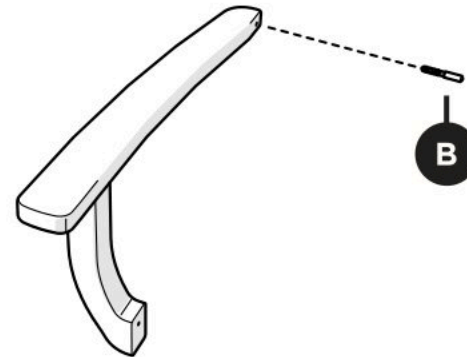


2

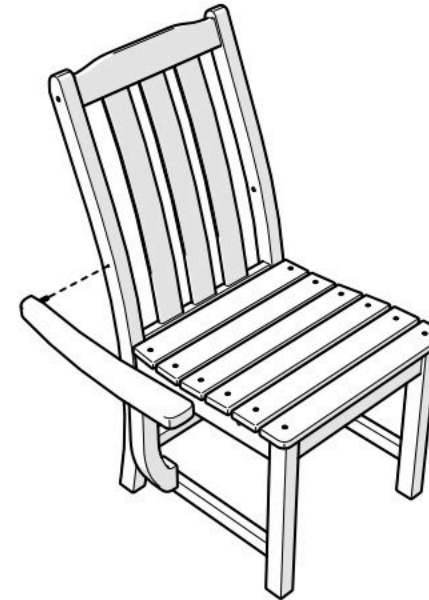 

3

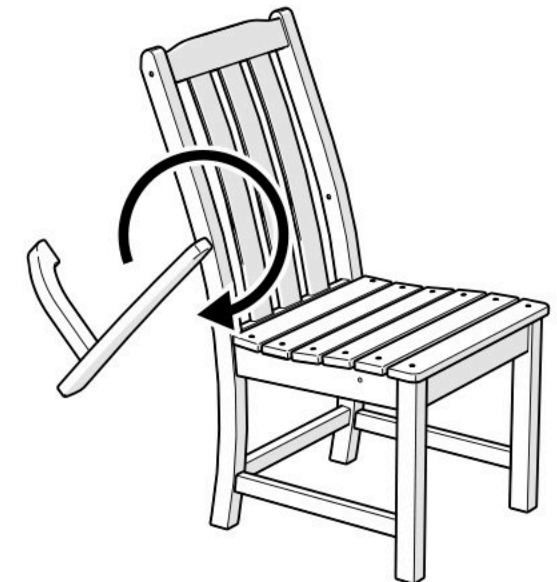 

4

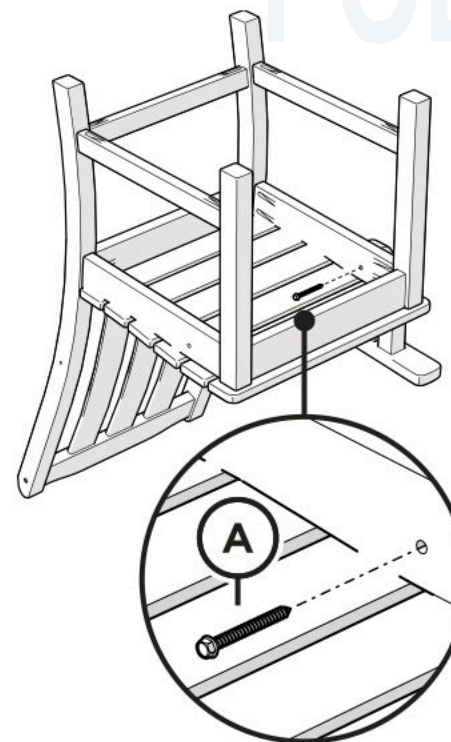 


Repeat Steps 1 Thru 4
On Opposite Side




Remove protective plastic
film from the logo medallion.



 CLTGD240

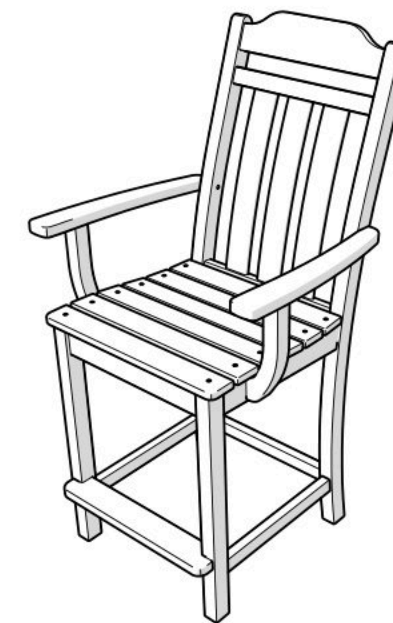

CLTGD241

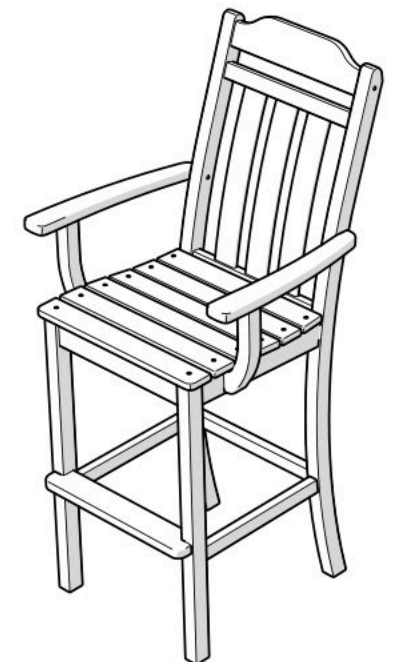 

CLTGD242