



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD

Assembly Instructions




FDT3772, S72FDT3772
Farmhouse 37" X 72" Dining
Table



NCT3772
Nautical 37" X 72"
Dining Table

TOOLS

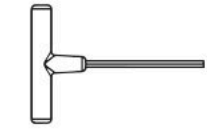


4mm T-handle
hex key (included)



3/8" wrench
(not included)


PARTS

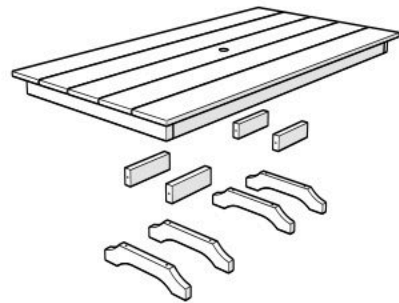

Separate box



 A x16




2.5" Screw — HHW14X2.5

B x16




3" Screw — H.27X3

1

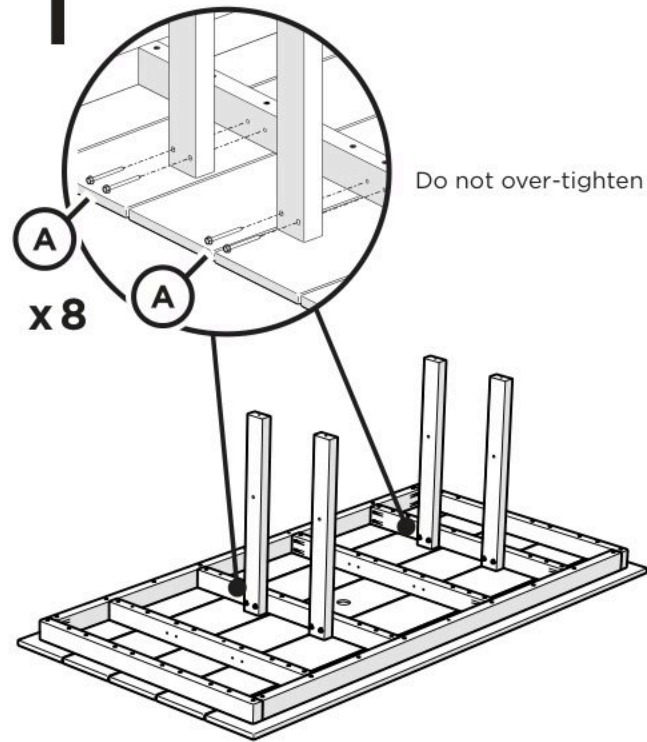


FDT3772 shown for parts and assembly


2

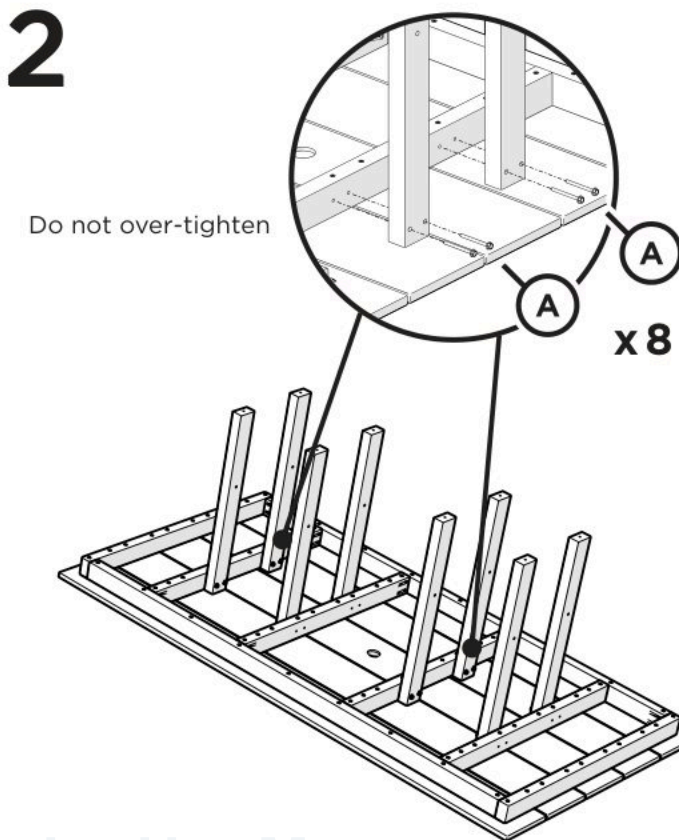


3

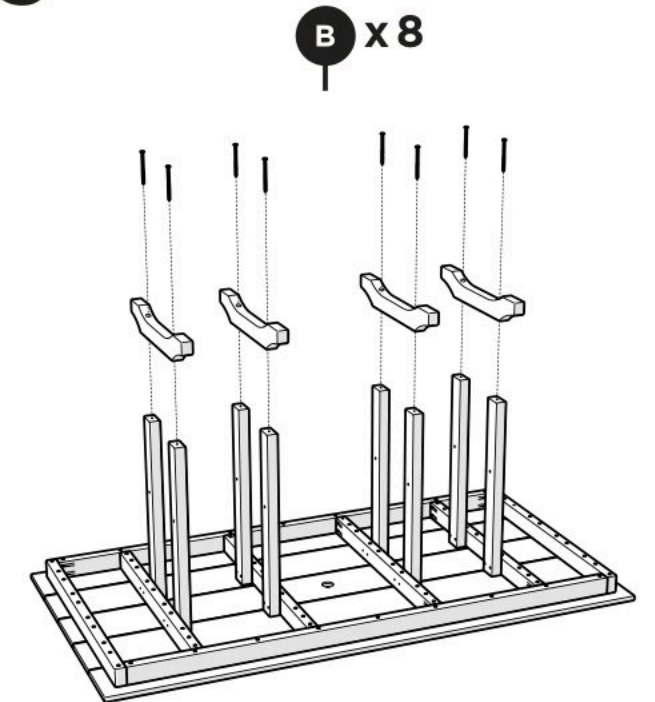


4

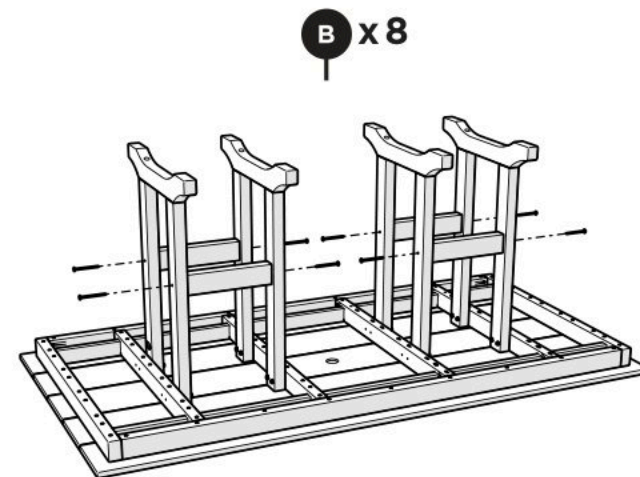

Removable
table plug

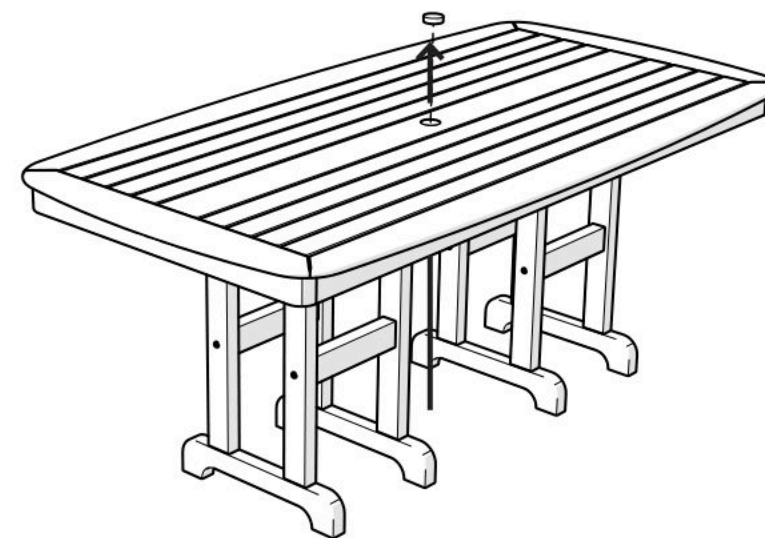

NCT3772

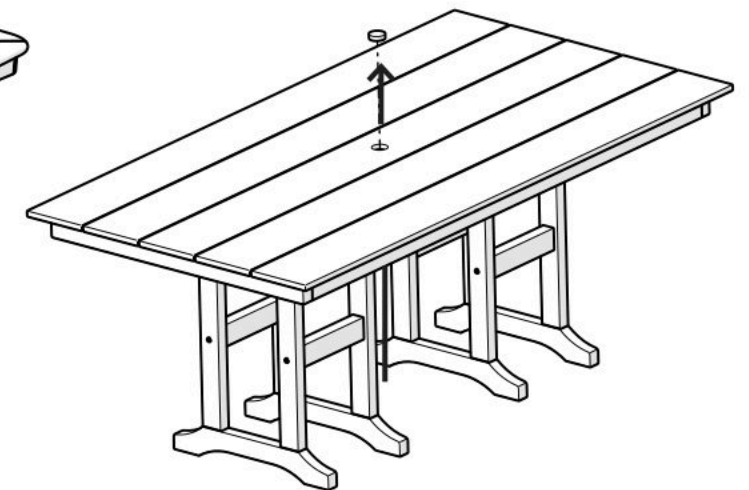

FDT3772



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please visit

with our Customer Experience



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.


POLYWOOD®

Assembly Instructions

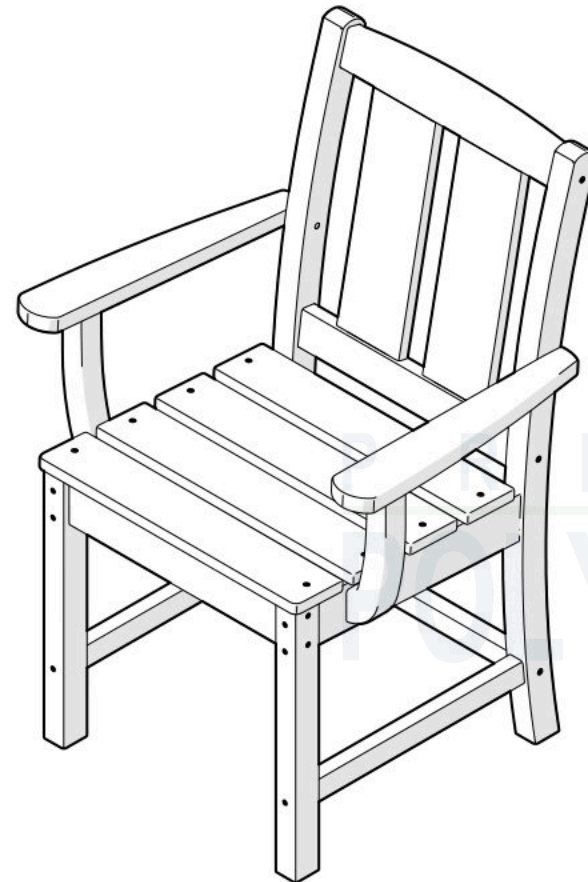


TLD240 Mission Dining Arm Chair

 TOOLS



3/8" wrench
(not included)

PARTS

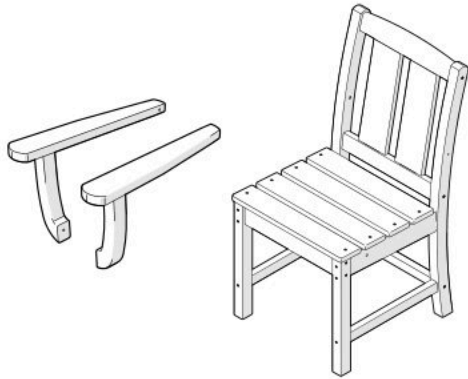

A x2



2.5" Screw — HHW14X2.5


B x2




Cap Dowel Screw — HD.25X2+P11420

1


Twist dowel screw into arm until
finger-tight, remove protective cap

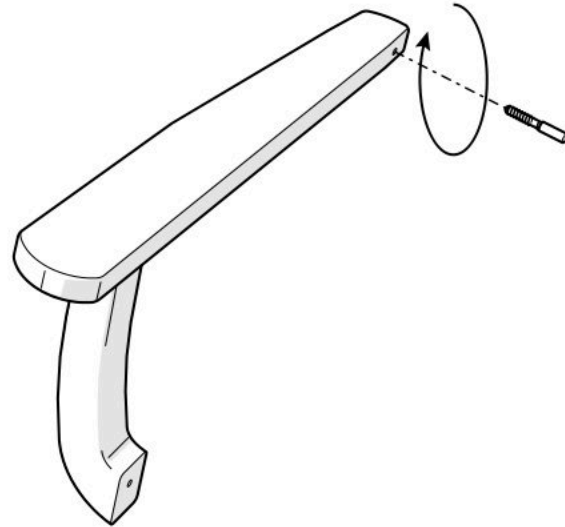


2

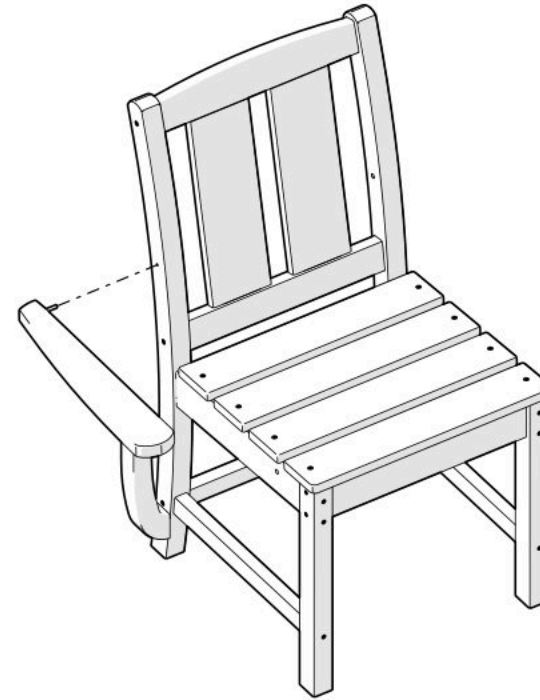


3

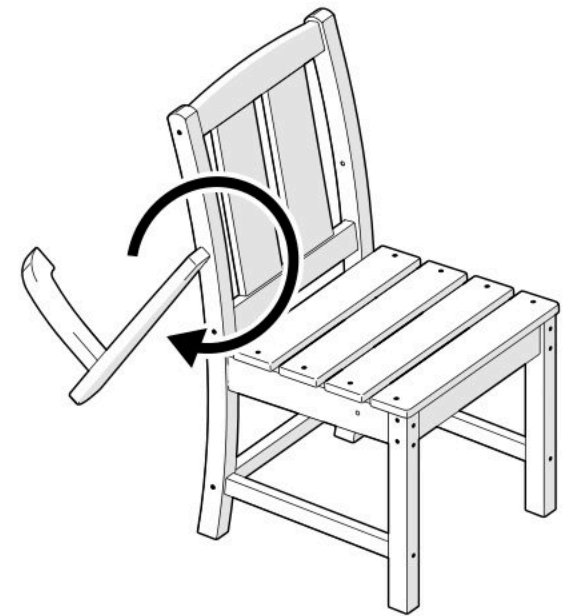


4

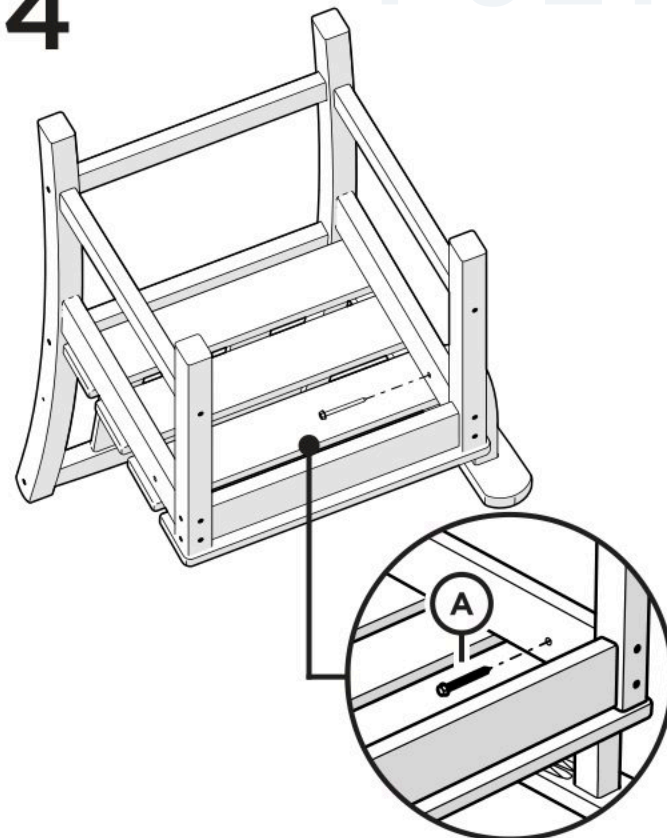

5

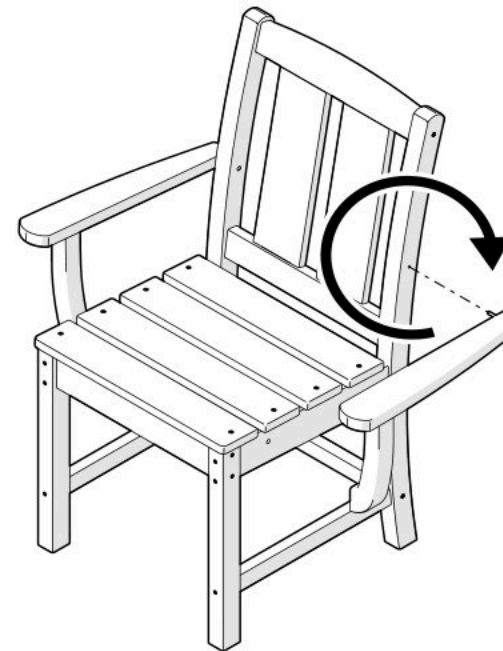

Repeat Steps 1 Thru 4
On Opposite Side

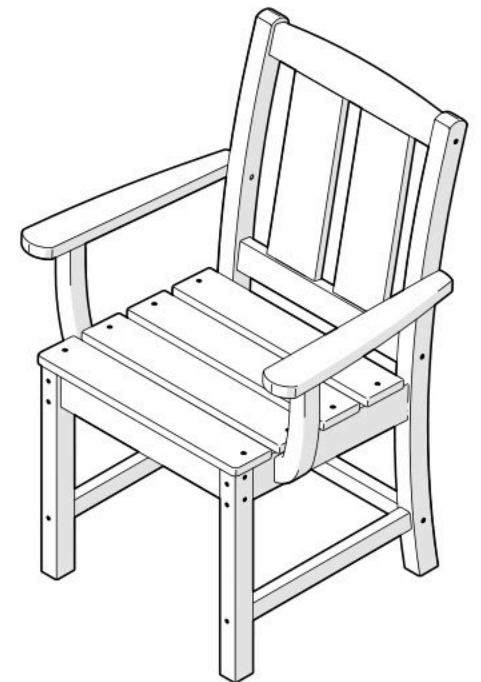

POLYWOOD®