



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD

Assembly Instructions



FDT37
Farmhouse 37"
Dining Table



RT236
36" Round
Farmhouse
Dining Table


RT248
48" Round
Farmhouse
Dining Table




NCT37
Nautical 37"
Dining Table

NCT44
Nautical 44"
Dining Table

TOOLS

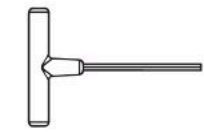

4mm T-handle
hex key (included)

 


3/8" wrench
(not included)


PARTS



Separate box

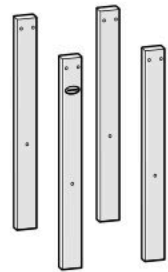


A x 8

 


3" Screw — H.27X3

 B x 8




2.5" Screw — HHW14X2.5

1

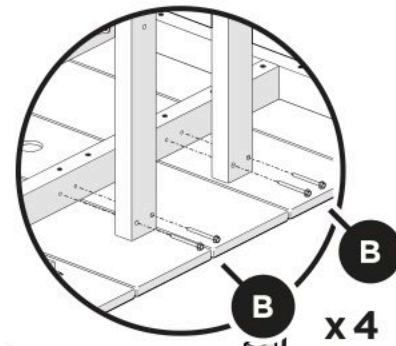


Do not over-tighten

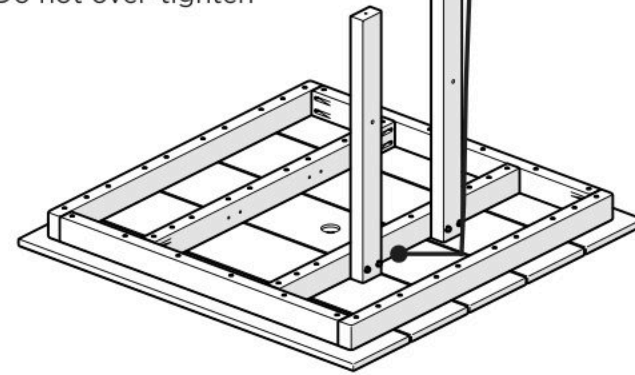


FDT37 shown for parts and assembly

2

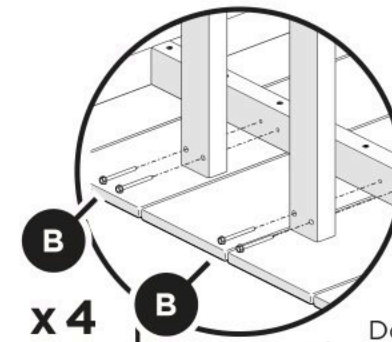


Do not over-tighten

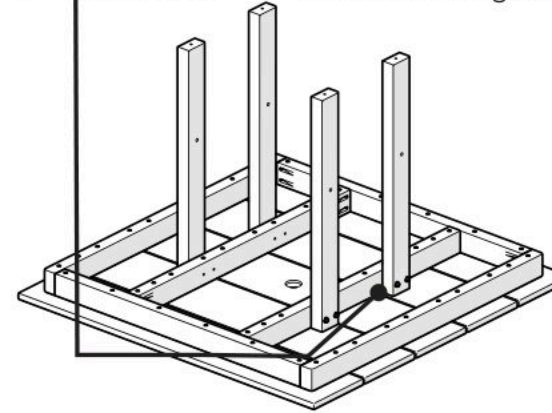



3

A x 4

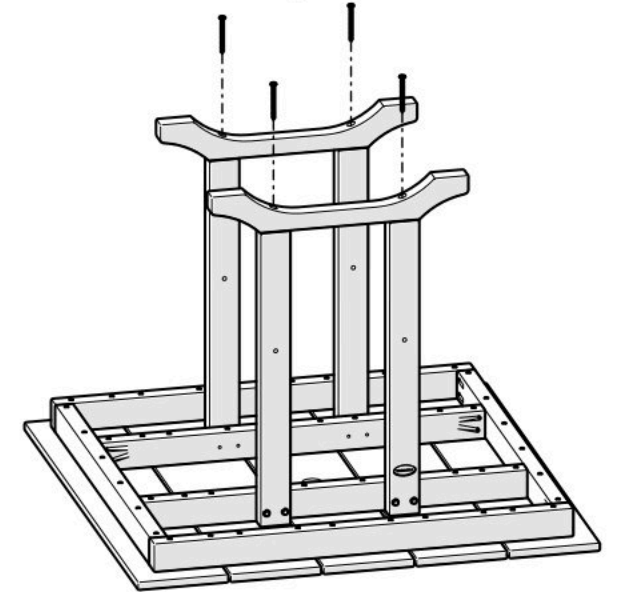


4


A x 4

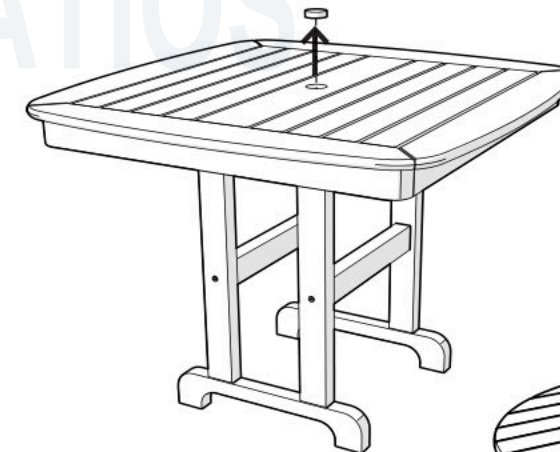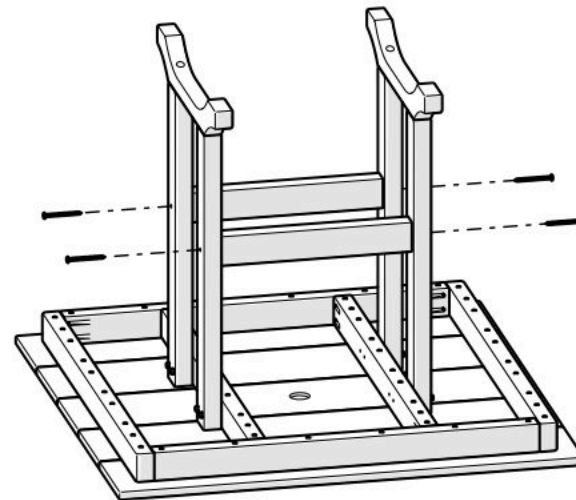

NCT37, NCT44

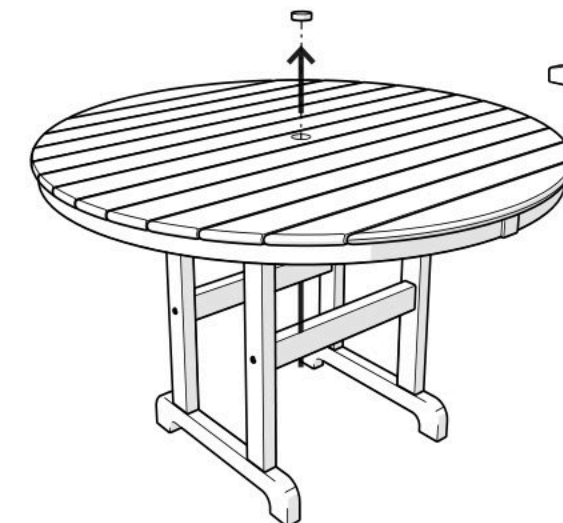

RT236, RT248

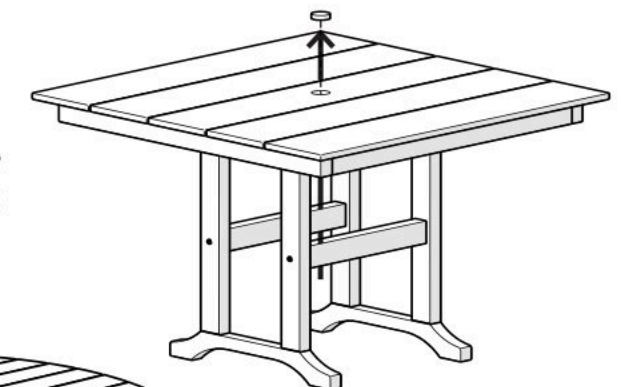

FDT37

Removable
table plug



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please visit

with our Customer Experience



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.


POLYWOOD®

Assembly Instructions

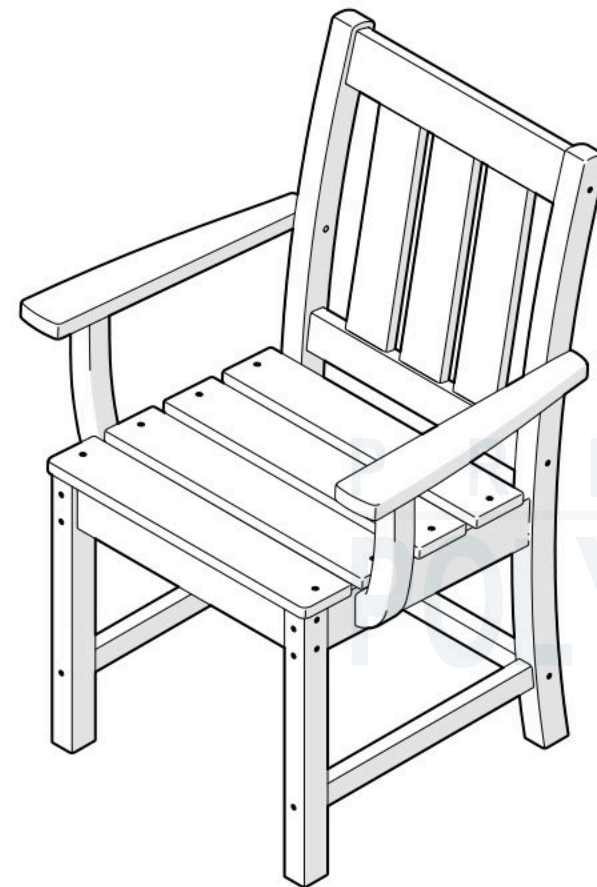


TLD250 Oxford Dining Arm Chair

 TOOLS




3/8" wrench
(not included)

PARTS

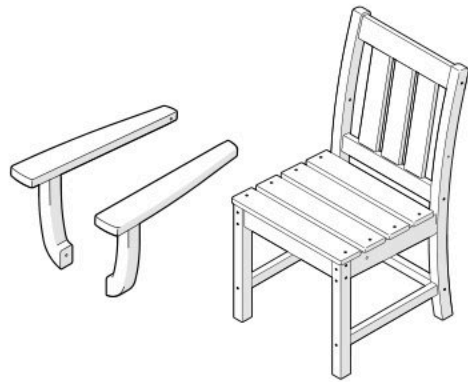

A x2

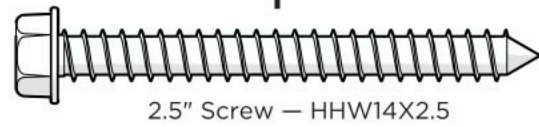

2.5" Screw — HHW14X2.5


B x2




Cap Dowel Screw — HD.25X2+P11420

1


Twist dowel screw into arm until
finger-tight, remove protective cap

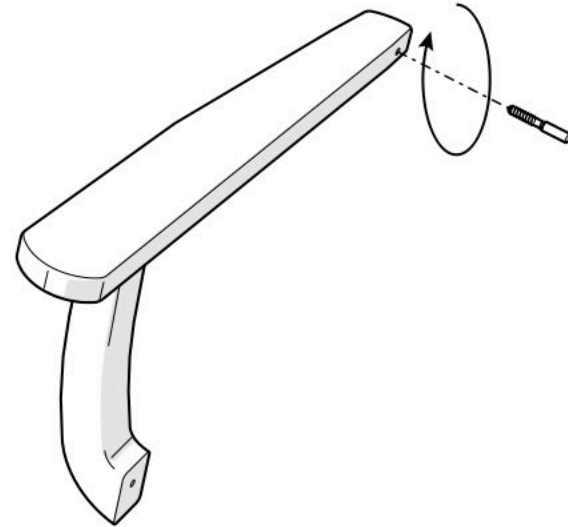


2

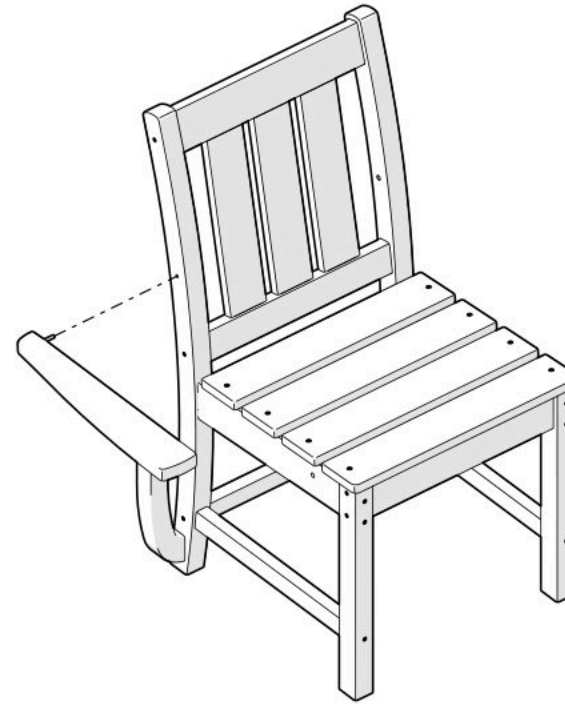


3

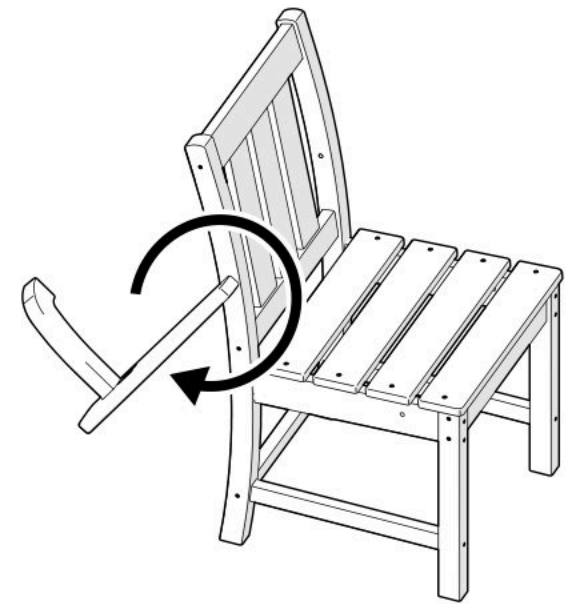


4

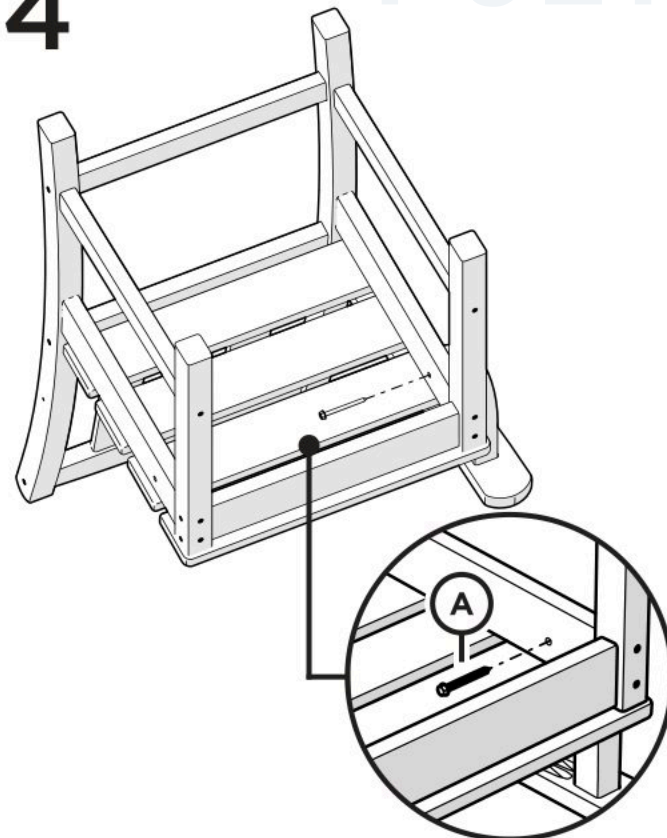

5

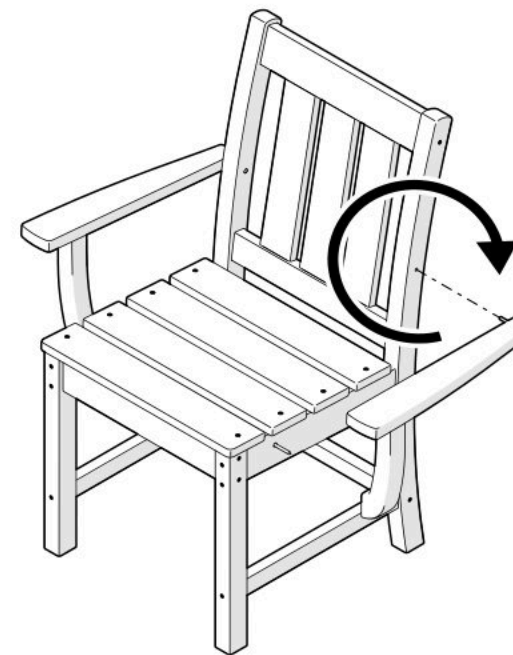

Repeat Steps 1 Thru 4
On Opposite Side

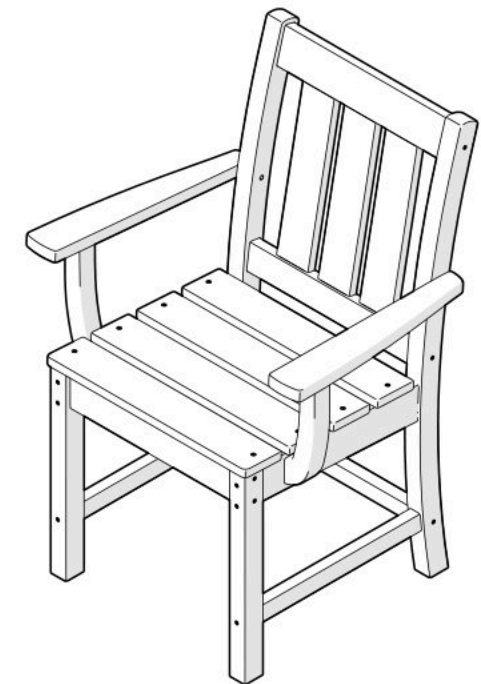

POLYWOOD®