

# Assembly Instructions

## Model: ADREC

### Step 1

Unfold the Seat assembly (FIG.1)

### Step 2

Attach the front legs to the seat assembly using (4) 2¼" bolts, washers and nuts.

### Step 3

Attach the Arms using (4) 2¼" bolts washers and nuts.


### Step 4

Attach the Back assembly using (2) 1½" bolts, washers and nuts.





- \_\_\_ 1 Front leg assembly
- \_\_\_ 2 Arms
- \_\_\_ 1 Seat
- \_\_\_ 1 Back
- \_\_\_ 1 Hardware pack

### TOOLS NEEDED

7/16" Wrench  
Phillips head screw driver or  
4mm hex key: Included




Qty.	Description
------	-------------

2	 A - 1½" Bolt
8	 B - 2¼" Bolt
8	 1/4-20 Lock Nut
8	 1/4" Washer

All bolts are 1/4-20

FIG. 1

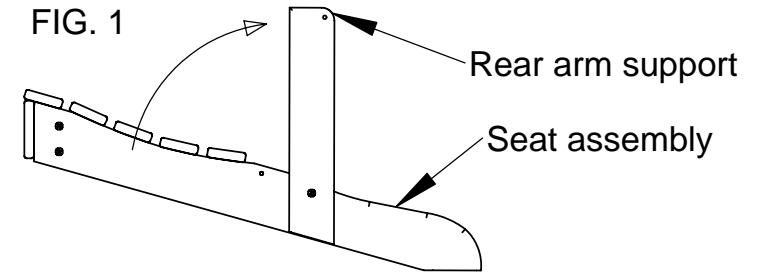

Back assembly

