

Assembly Directions for Comfo-Back Chaise Lounge

#PCCL7400



PACKAGE CONTENTS


- 1 Seat
- 1 Back
- 3 Leg Assemblies
- 2 Arm Assemblies
- 1 Reclining Brace
- 2 Wheels
- 2 Arm Braces
- 1 Hardware Package

HARDWARE PACKAGE

- 2 1/4" x 2 1/4" Machine Bolts
- 2 1/4" x 2 3/4" Machine Bolts
- 6 1/4" x 3" Machine Bolts
- 2 5/16" x 3" Machine Bolts
- 12 1/4" x 3 1/2" Carriage Bolts
- 12 1/4" Flange Nuts
- 10 1/4" Lock Nuts
- 28 1/4" Washers
- 2 5/16" Lock Nuts
- 6 5/16" Washers


TOOLS NEEDED:

- Hammer
- 1/2" Wrench
- 7/16" Wrench




Use to measure bolts




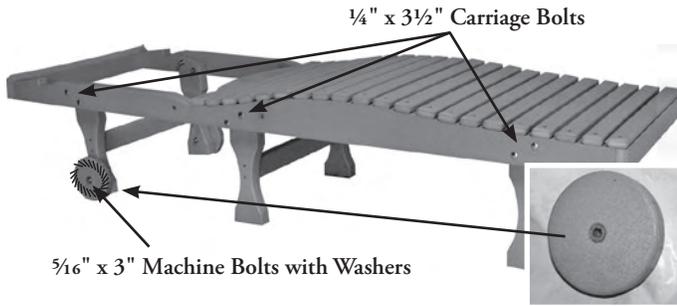


STEP #1 - Fasten the three leg assemblies to the seat using $\frac{1}{4}$ " x $3\frac{1}{2}$ " carriage bolts. Then attach the wheel using $\frac{5}{16}$ " x 3" machine bolts and washers. (See motion point diagram.)

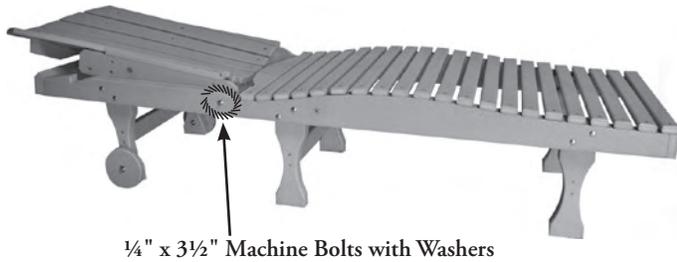


STEP #2 - Fasten the back to the seat using $\frac{1}{4}$ " x 3" machine bolts with two washers. (See motion point diagram.)

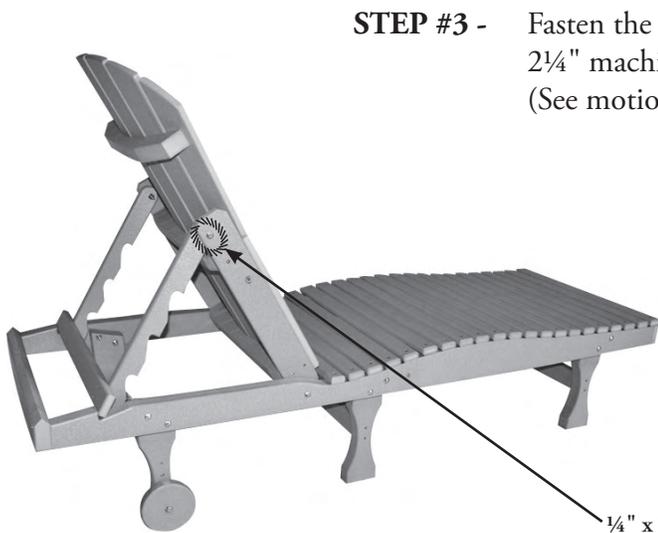

STEP #3 - Fasten the reclining brace using $\frac{1}{4}$ " x $2\frac{1}{4}$ " machine bolts with two washers. (See motion point diagram.)

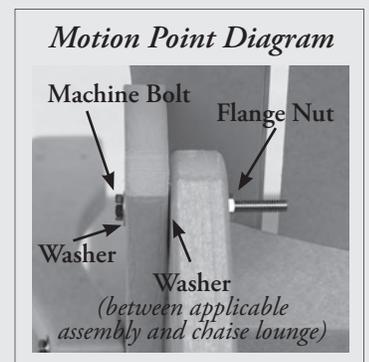

*Insert extra washer between **motion points** and **chaise lounge**. Fasten with washer and lock nut.*

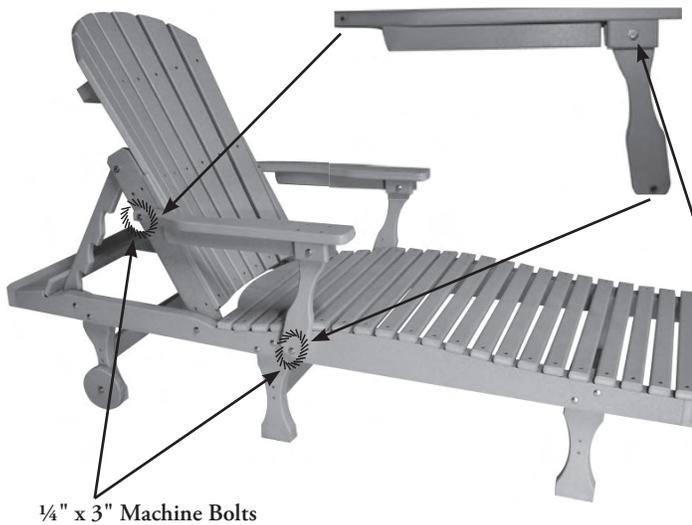

STEP #4 - First assemble the arm assembly using $\frac{1}{4}$ " x $2\frac{3}{4}$ " machine bolts and one washer. Then fasten the arm assembly to the seat support and the back using $\frac{1}{4}$ " x 3" machine bolts and washers. (See motion point diagram.)