




## 2' Plain Poly Bench


- (A) - Seat Assembly  
 (B) - Back Assembly  
 (C) Armrest Assembly right side  
 (D) Armrest Assembly left side

### Hardware

- 2 - 4" Bolt  
 2 - 3" Bolt  
 4 - 2 1/2" Bolt  
 16 - Washers  
 8 - Nuts  
 8 - 2" Screws

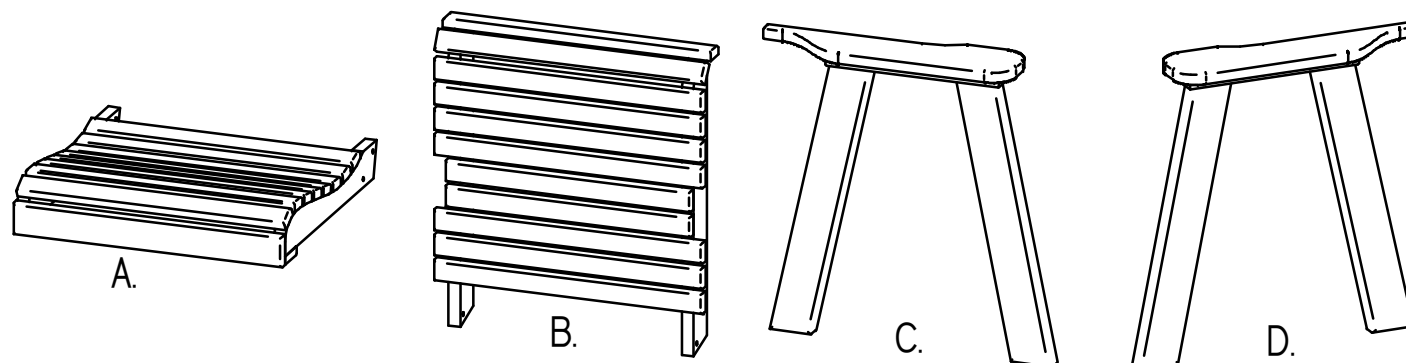


1. Attach (A) Seat Support to (B) Back Assembly using 2 1/2" Bolts in top hole only. "Always match letters and/or numbers"

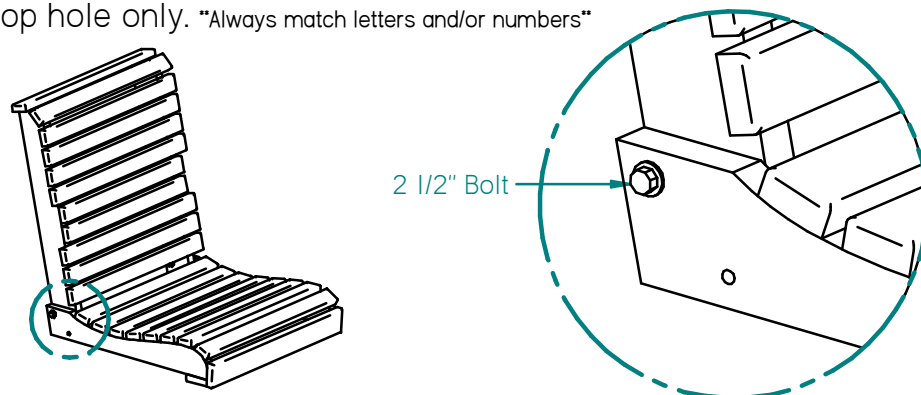



\*Hex Head Bolt require 2 Washers - between bolt head - product & nut - product.\*

2. Attach Armrest Assembly to each side using 3" Bolt in front leg, 4" Bolt in back leg, and 2 1/2" Bolt in armrest. "Always match letters and/or numbers"

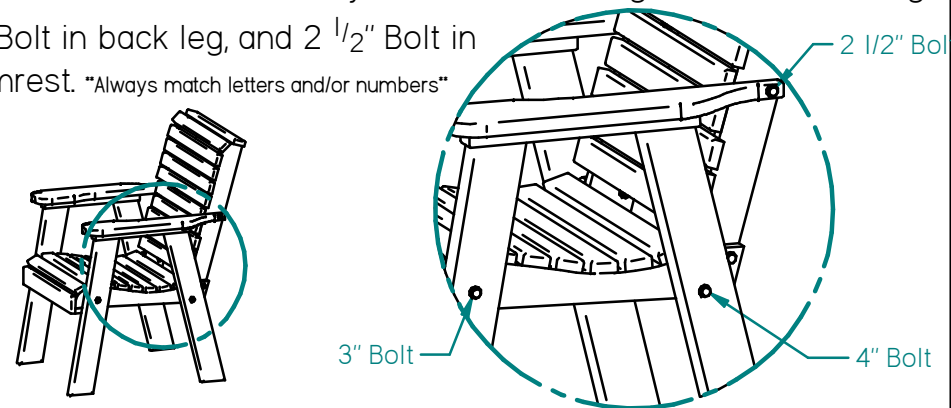

\*Hex Head Bolt require 2 Washers - between bolt head - product & nut - product.\*

3. Install 2" Screws in predrilled holes on each leg.

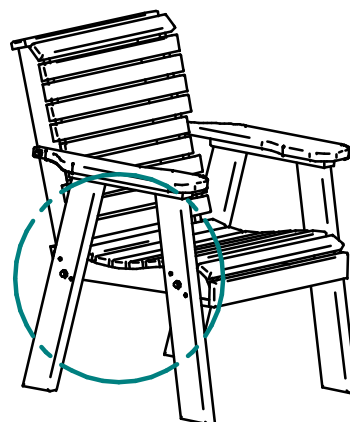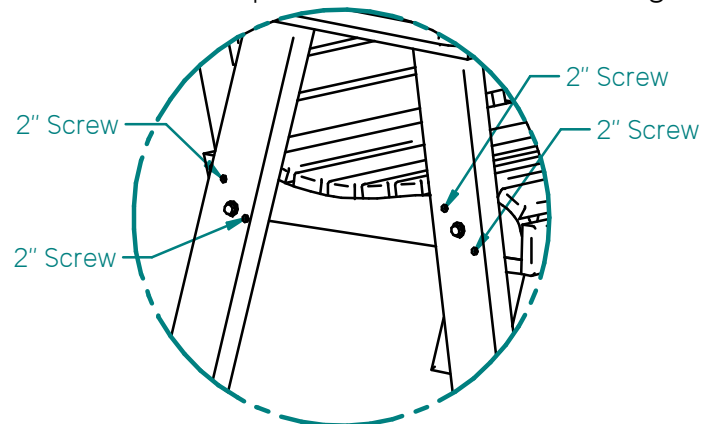

## Premium Poly Patios

Eco-Friendly Furniture For a 'World of Difference!'

Toll Free 1-877-904-1234

[www.Poly-Lumber-Furniture.com](http://www.Poly-Lumber-Furniture.com)