


## 2' Swivel Adirondack Poly Glider


1 - (A) Swivel Base  
1 - (B) Seat  
1 - (C) Back  
1 - (D) Armrest Assembly left side  
1 - (E) Armrest Assembly right side  
2 - (F) Lintels

**Hardware**  
2 - 4" Bolt  
2 - 3" Bolt  
4 - 2 1/2" Bolt  
4 - Large Nuts  
8 - Small Nuts  
24 - Washers  
12 - 2" Screws


1. Attach Armrest Assemblies to (A) Swivel Base in following order: Washer - Armrest - Washer - Large Nut.  
"Always match letters and/or numbers"

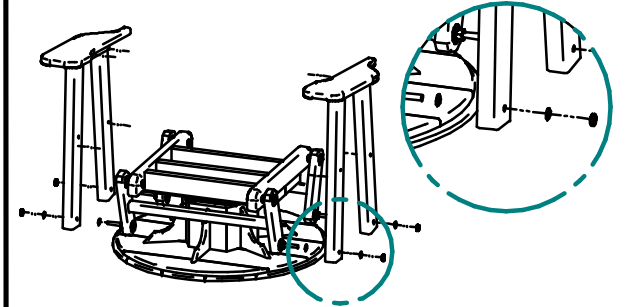

2. Attach (B) Seat to (C) Back using a 2 1/2" Bolt in top hole of each side.  
"Always match letters and/or numbers"

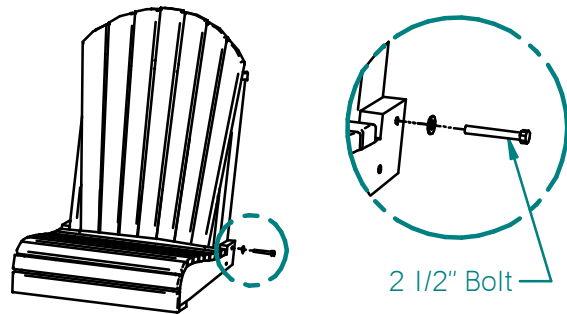


3. Slide assembled Seat & Back between armrests and attach with 4" Bolt on both sides through bottom hole of Seat & Back.  
"Always match letters and/or numbers"

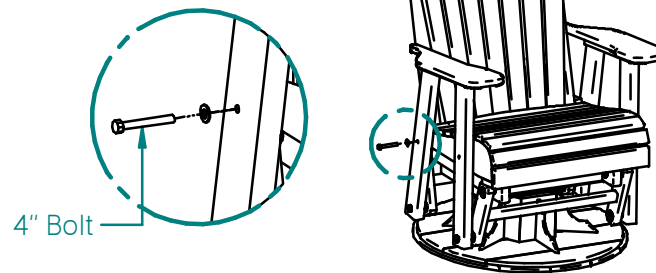


4. Insert 3" Bolts on both sides of seat. Attach Armrests to Back using 2 1/2" Bolts.


Install 4 - 2" Screws on inside of seat into armrest uprights.  
"Always match letters and/or numbers"

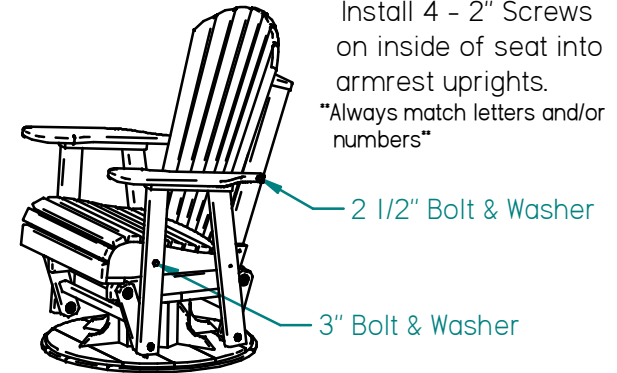

5. Attach (F) Lintels to each side of Glider using 2" Screws.  
"Always match letters and/or numbers"

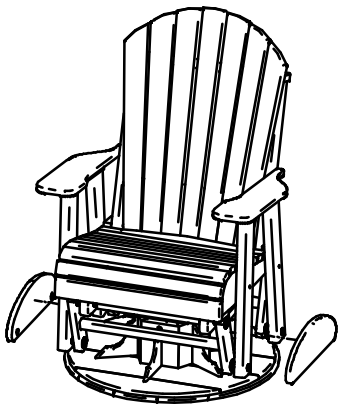

6. ENJOY

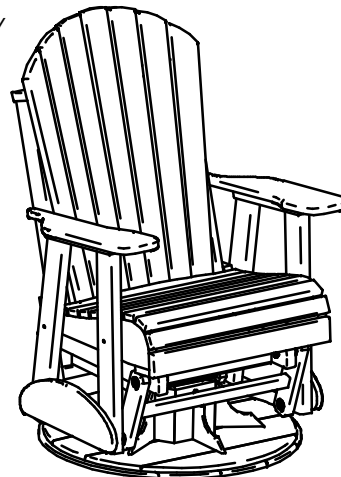

**Premium Poly Patios**

Eco-Friendly Furniture For a 'World of Difference!'

Toll Free 1-877-904-1234

[www.Poly-Lumber-Furniture.com](http://www.Poly-Lumber-Furniture.com)