


## 4' Plain Poly Swing

(A) Seat Assembly

(B) - Back Assembly

(C) - Armrest Assembly left side

(D) - Armrest Assembly right side

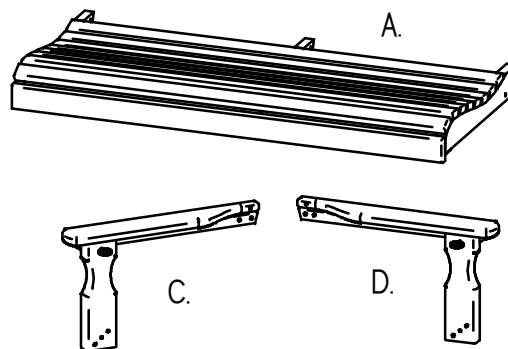

### Hardware

2 - 5/16" x 3 1/2" Bolt

2 - 5/16" x 3" Bolt

6 - 5/16" x 2 1/2" Bolt

14 - Nuts (5/16")

28 - Washers


4 - 2" Screws

4 - 1 1/2" Screws

1 - Set Swing Chains




1. Attach (A) Seat Assembly to (B) Back Assembly using six 2 1/2" Bolts.

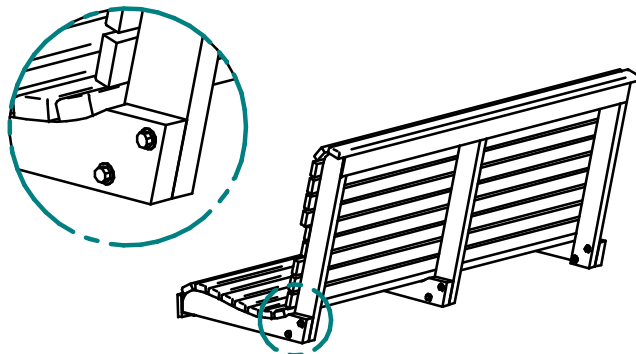


\*Hex Head Bolt require 2 Washers - between bolt head - product & nut - product\*

2. Attach Armrest Assemblies to each side using 3 1/2" Bolts in front hole.  
\*\*Insert bolt from inside out\*\*

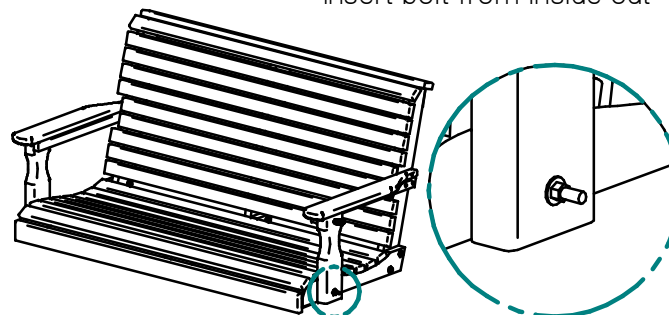


\*Hex Head Bolt require 2 Washers - between bolt head - product & nut - product\*

3. Attach Armrest to Back Support using 3" Bolt on each side.  
\*\*Insert bolt from inside out\*\*

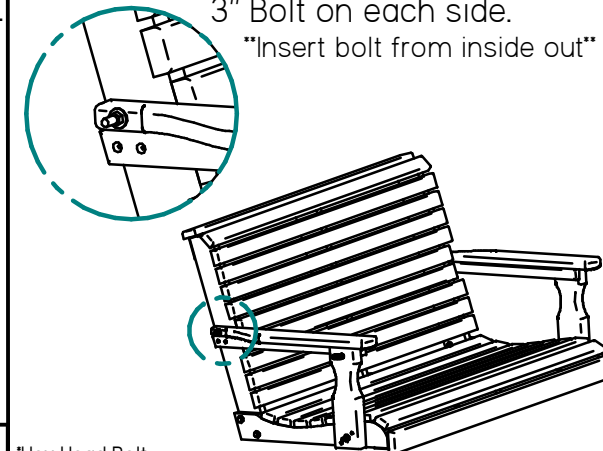


\*Hex Head Bolt require 2 Washers - between bolt head - product & nut - product\*

4. Install 2" Screws to Front Upright and 1 1/2" Screws to back of Armrest.

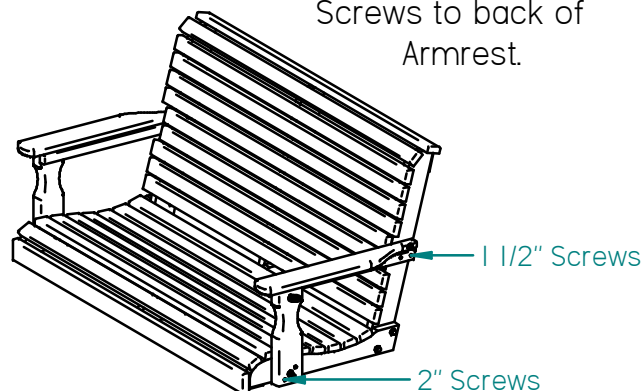

5. Attach short end of Chain to Back and other end through screw eye to bottom of front upright.  
Washer - Chain - Washer - Nut

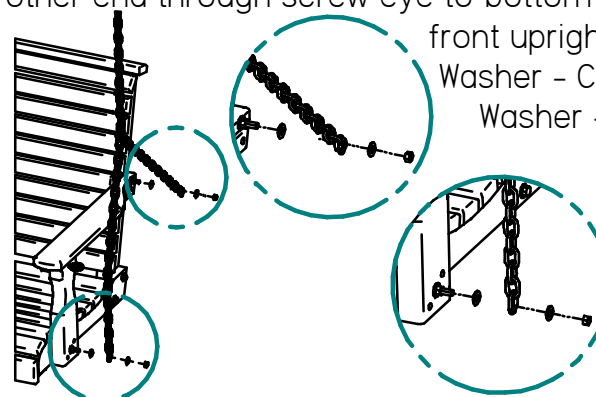

## Premium Poly Patios

Eco-Friendly Furniture For a 'World of Difference!'

Toll Free: 877-904-1234

Email: [customerservice@poly-lumber-furniture.com](mailto:customerservice@poly-lumber-furniture.com)

[www.Poly-Lumber-Furniture.com](http://www.Poly-Lumber-Furniture.com)