



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please visit

with our Customer Experience



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.


POLYWOOD®

Assembly Instructions



Adirondack Chair

TOOLS





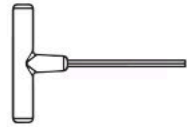


4mm T-handle
hex key (included)



7/16" wrench
(not included)


PARTS

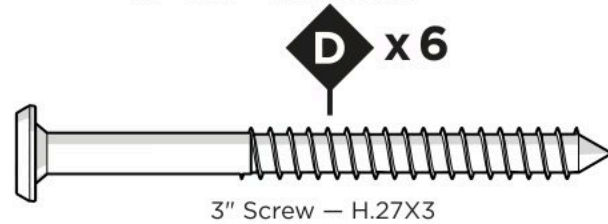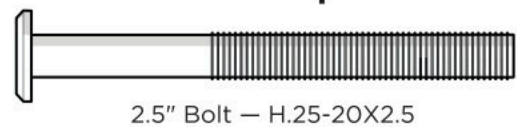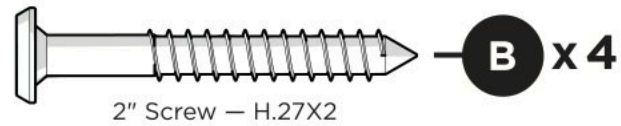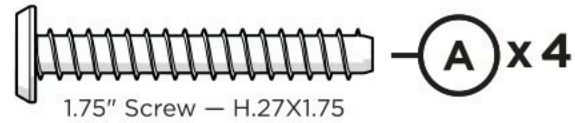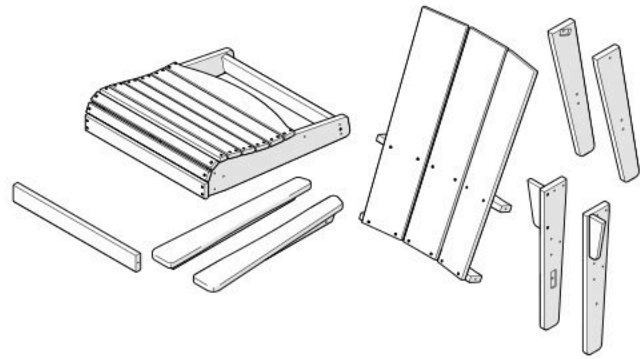


Flange Nylon Lock Nut

View this product online at [Premium Poly Patios](https://www.premiumpolypatios.com)


1

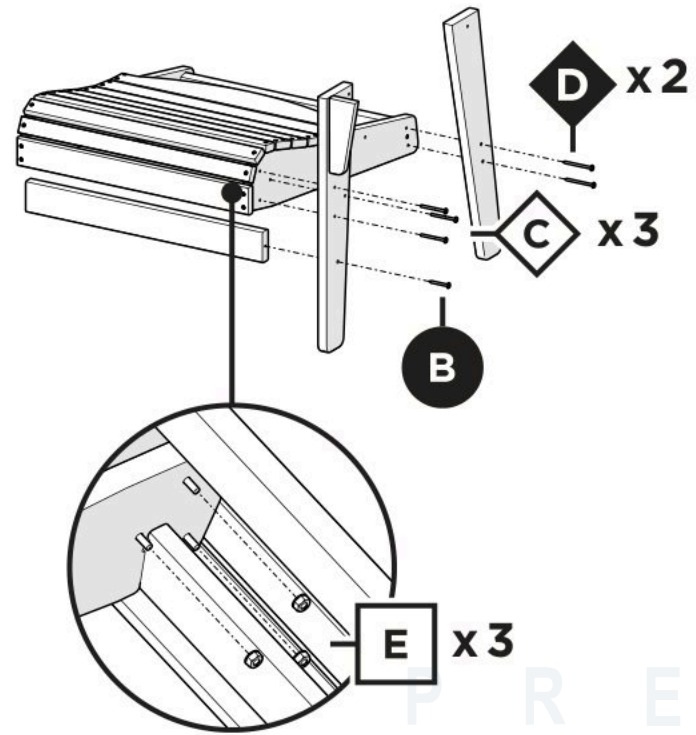


2

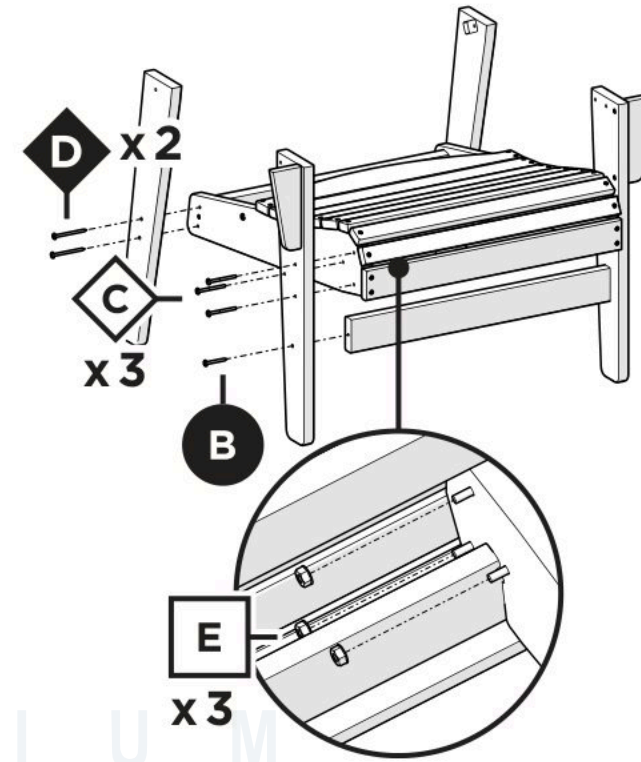


3

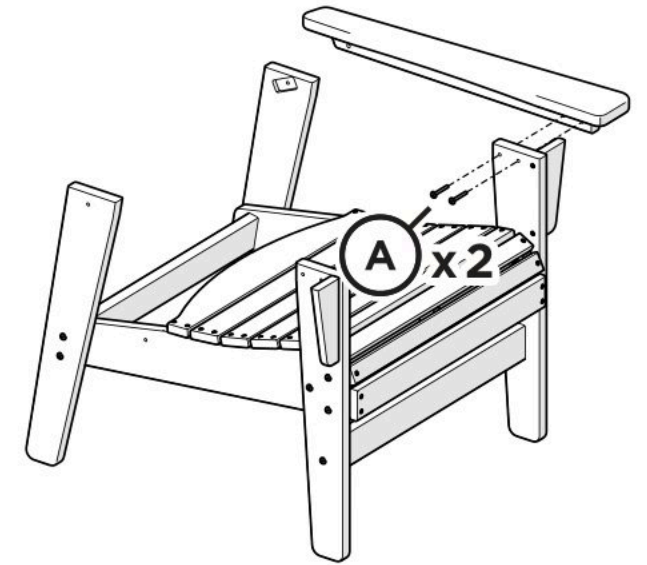

4

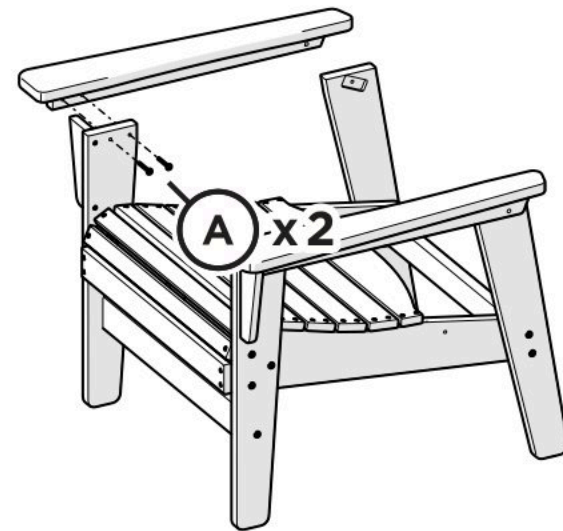

5

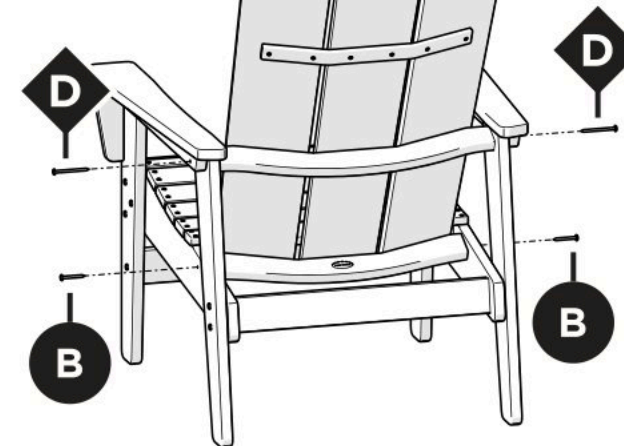

POLYWOOD®



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please visit

with our Customer Experience



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions

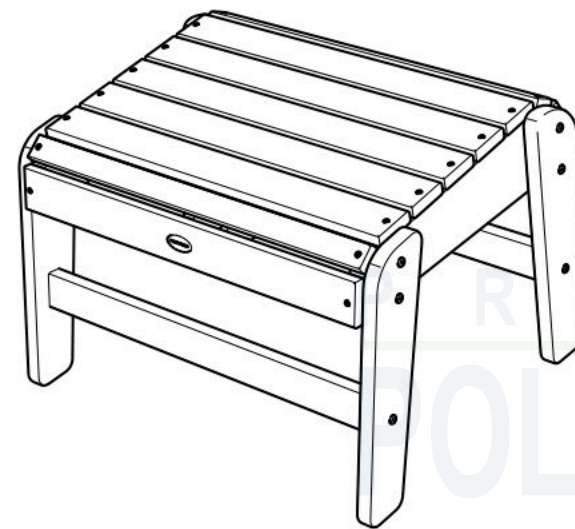

Grand Upright Adirondack Ottoman

TOOLS




4mm T-handle
hex key (included)



7/16" wrench
(not included)

PARTS

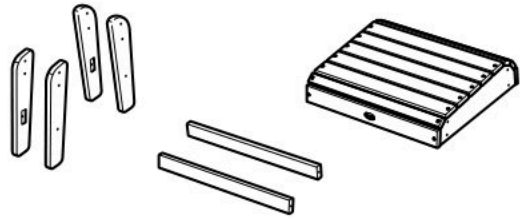


A x 8



2.5" Bolt — H.25-20X2.5

B x 4




2" Screw — H.27X2

C x 8




Flange Nylon Lock Nut
HN.25-20FN


1

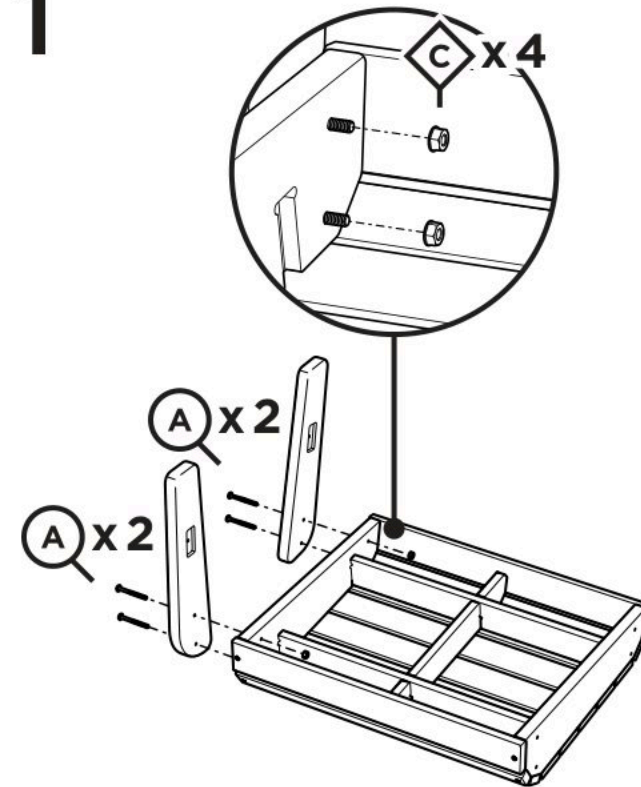

2

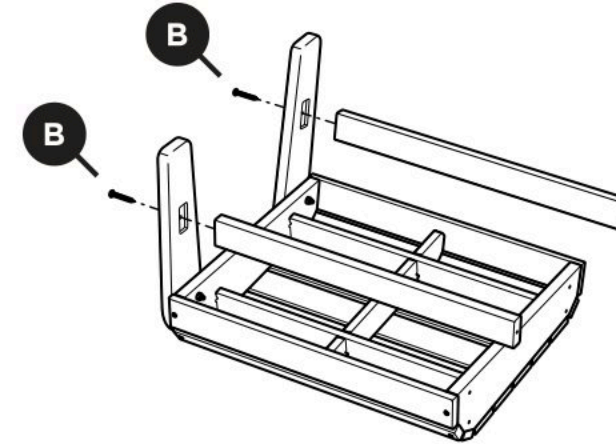

3

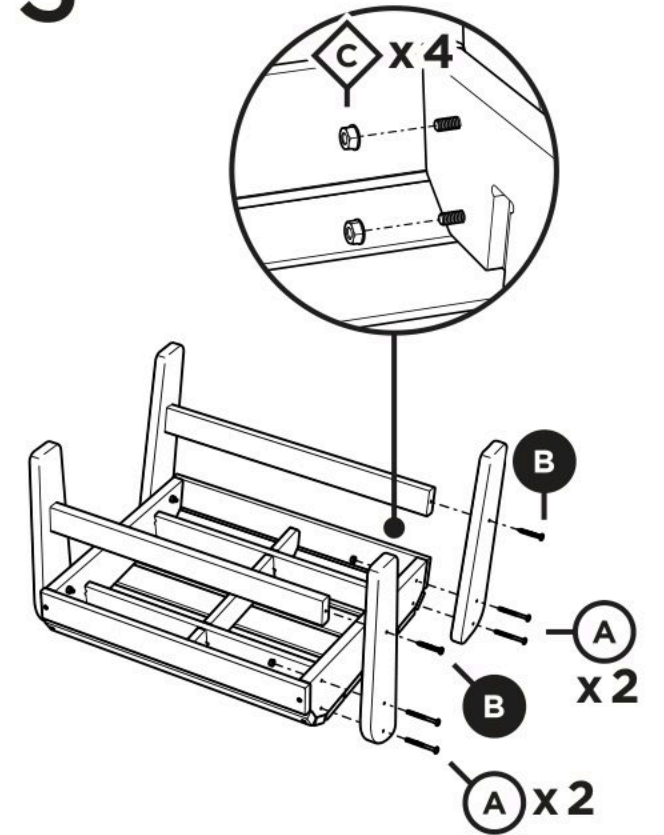

4

