


# POLYWOOD

## Assembly Instructions

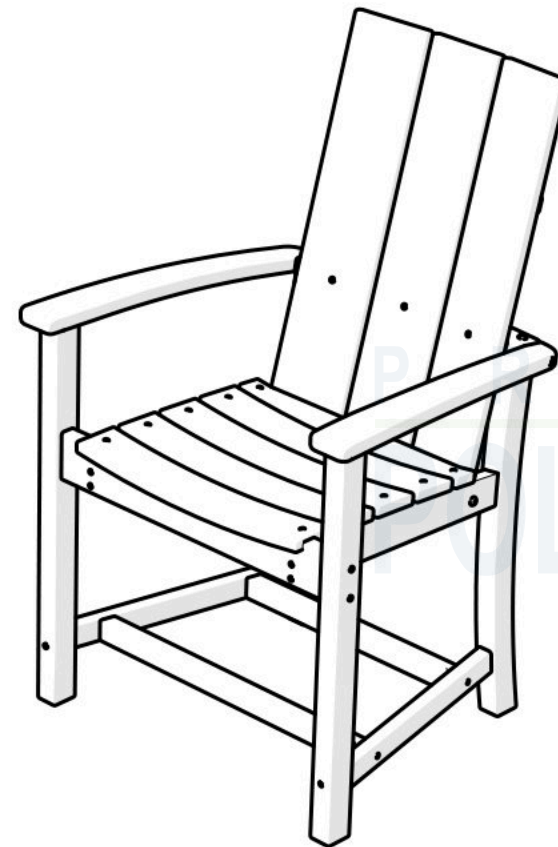

**MLD200, MLD202**  
Modern Adirondack  
Chair



### 20-Year Warranty

To view our full warranty, please visit

Easily register your product using  
one of the methods below:

**A** Text **POLYWOOD** to **71403**  
Receive a link to register online

or

**B** Register on our website

or

**C** Send a Picture  
Take a photo of the icon below  
and text it to 71403 (US only)



### Cleaning Tips

Even POLYWOOD gets dirty — here  
are some ways to help keep it clean:

#### For a quick clean:

Simply wipe down with soap and water.


#### For a deeper clean:

You'll need:









- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth  
and let it sit on the lumber for a few  
minutes (this will not affect the color).  
Then, loosen any dirt and debris that  
may catch in surface grooves with a  
soft bristle brush; hose down to rinse.


## TOOLS

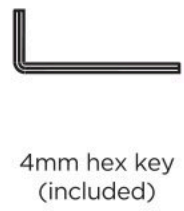

## PARTS

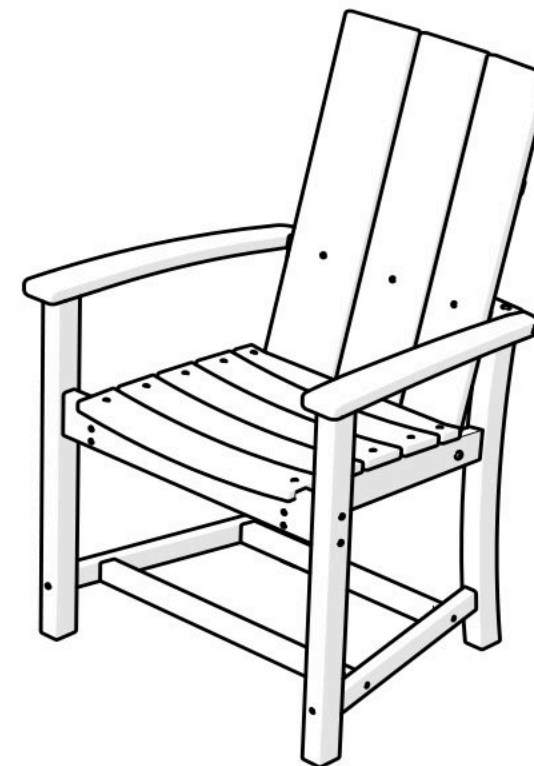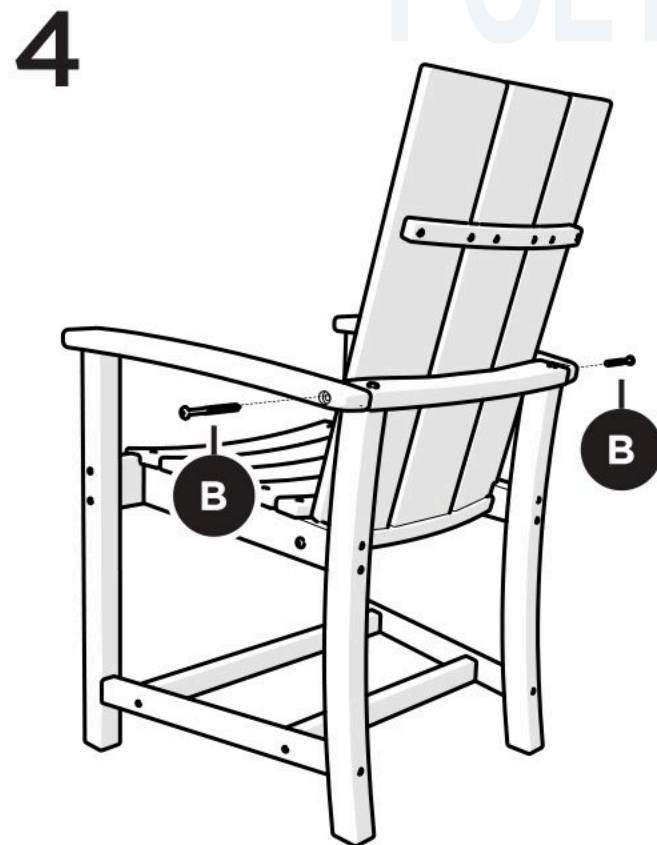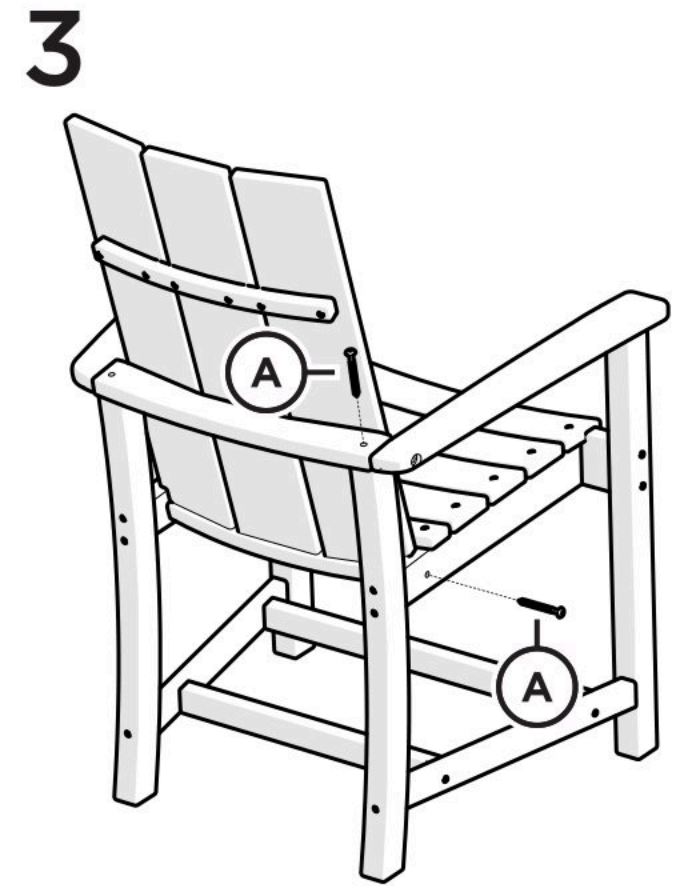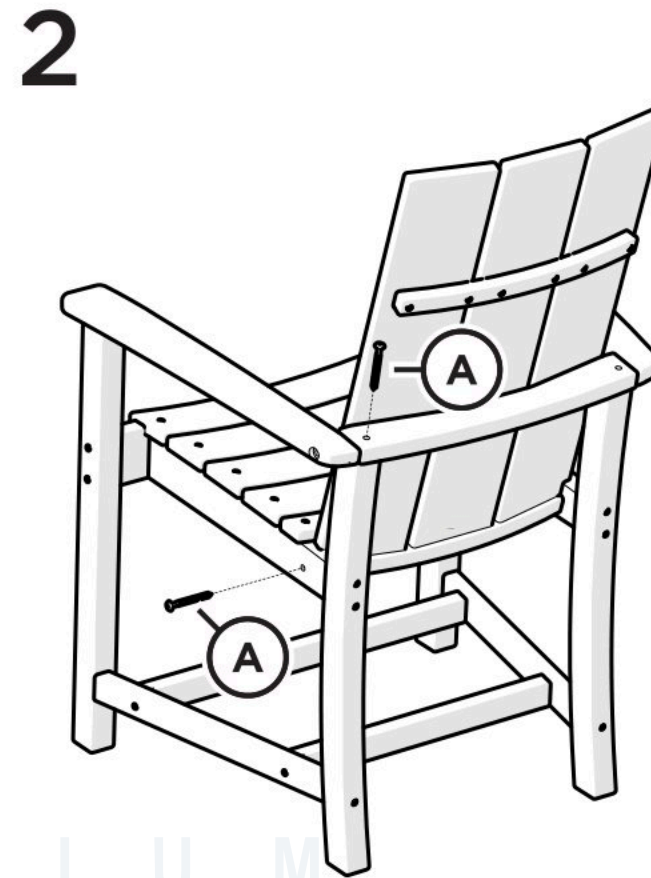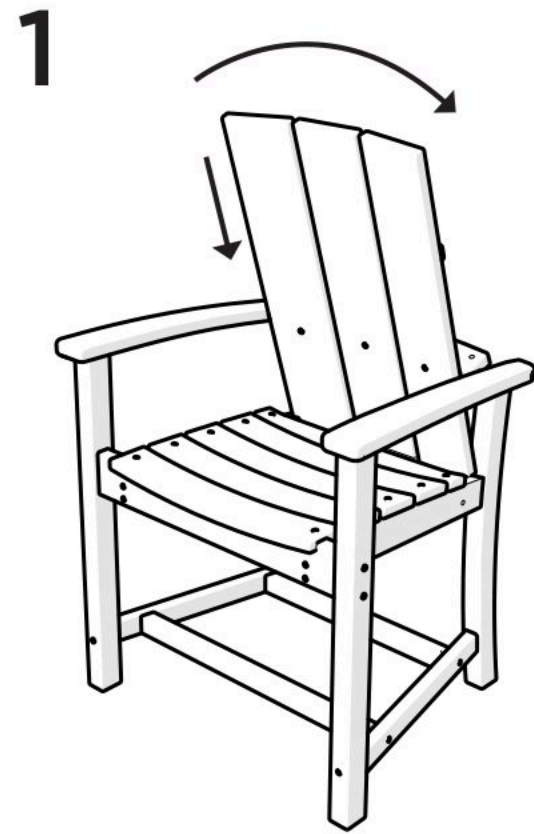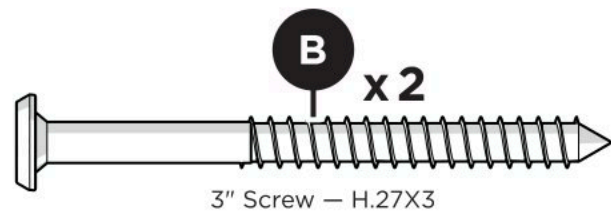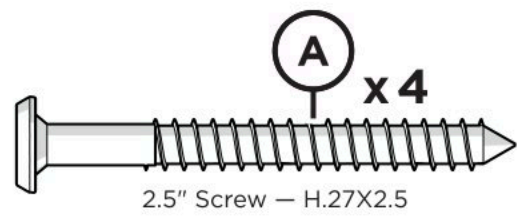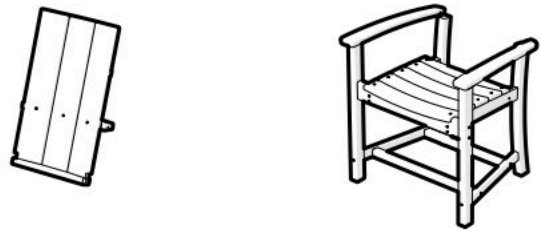

MLD200

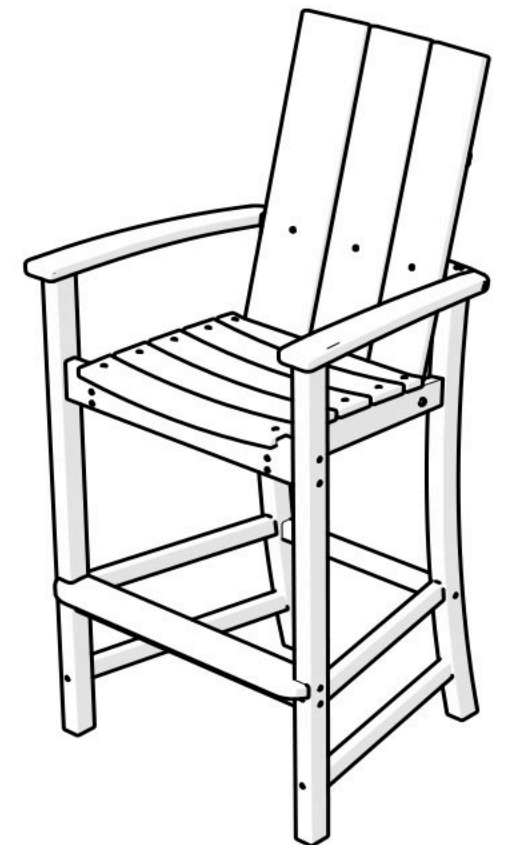

MLD202



All Weather Furnishings

**Model:**  
RT448

- (1) Table top
- (2) Leg Assemblies
- (2) Brace
- (1) Hardware pack


### TOOLS NEEDED



- 3/8" Wrench  
(not included)


### Step 1

Attach leg assemblies to table top using (8) 2-1/2" chair bolts.

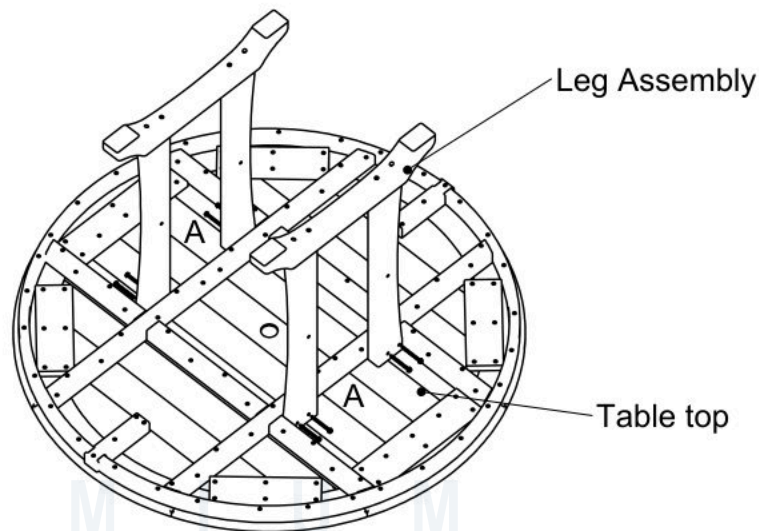


### Step 2

Attach braces to leg assemblies using (4) 2-1/2" screws.

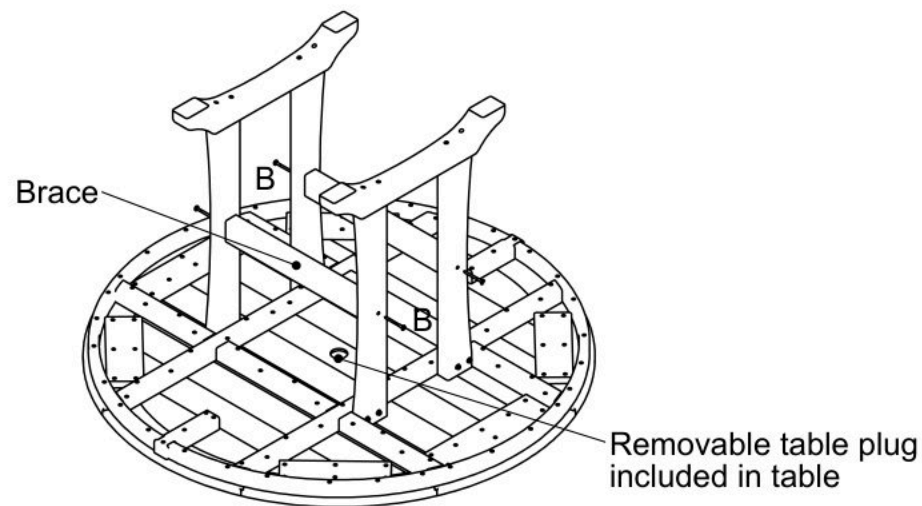

| Qty. | Description                        |
|------|------------------------------------|
| 8    | A - 14 X 2.50 HEX WASHER T-A ALCHM |
| 4    | B - .273 X 2.50 SOCKET WAFER A     |



P R E M I U M  

---

POLY PATIOS

[View this product online at Premium Poly Patios](#)