



20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



Cleaning Tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions

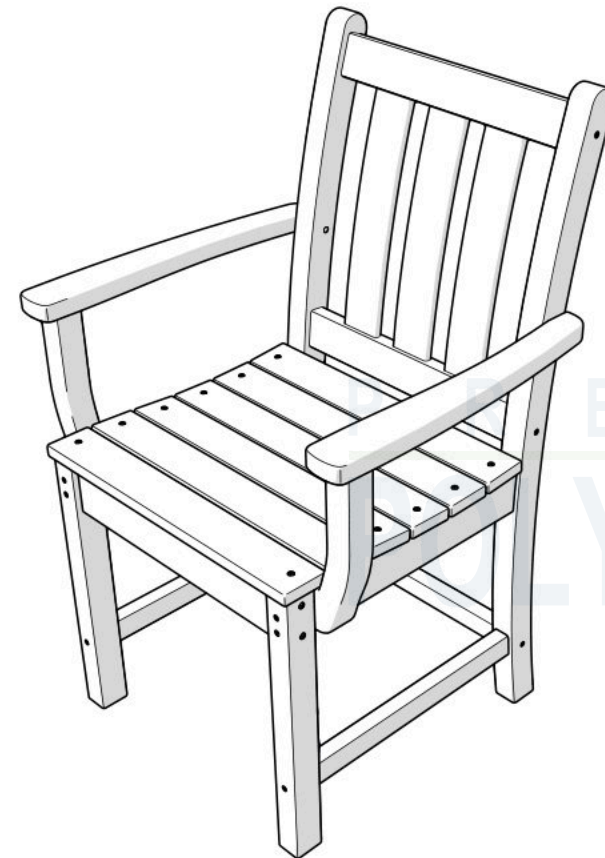



TGD200, TGD201, TGD202 Traditional Garden Arm Chair

TOOLS




3/8" wrench
(not included)

PARTS

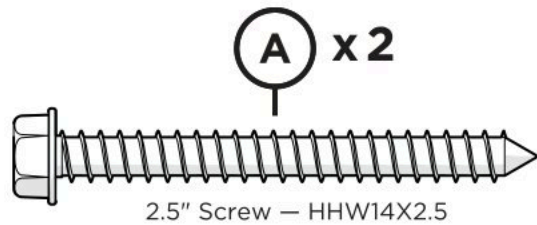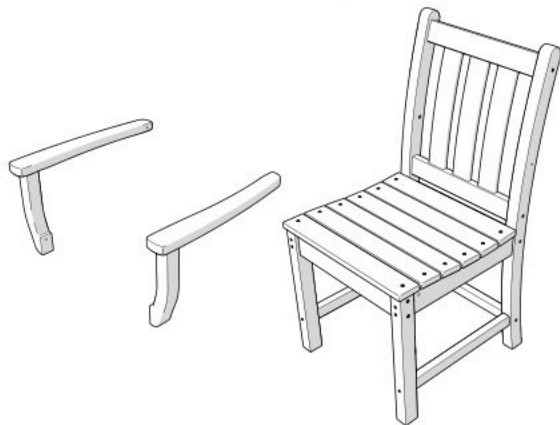


2.5" Screw — HHW14X2.5

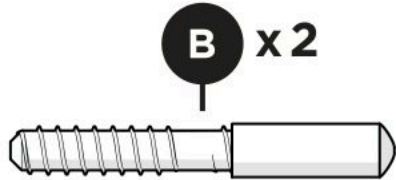


Cap Dowel Screw — HD.25X2+P11420

1


Twist dowel screw into arm until
finger-tight, remove protective cap

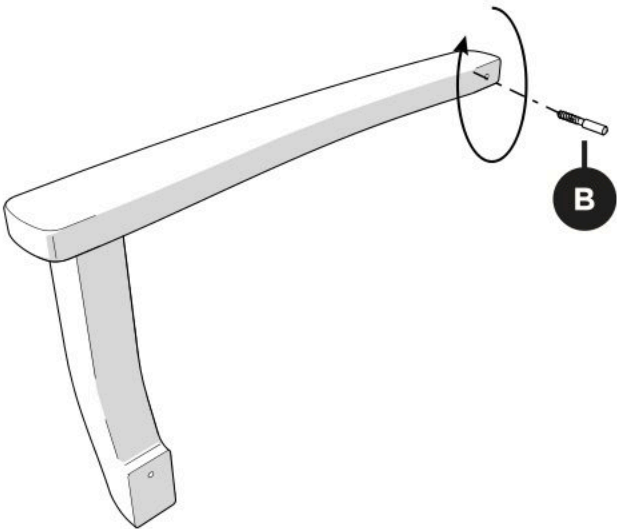


2

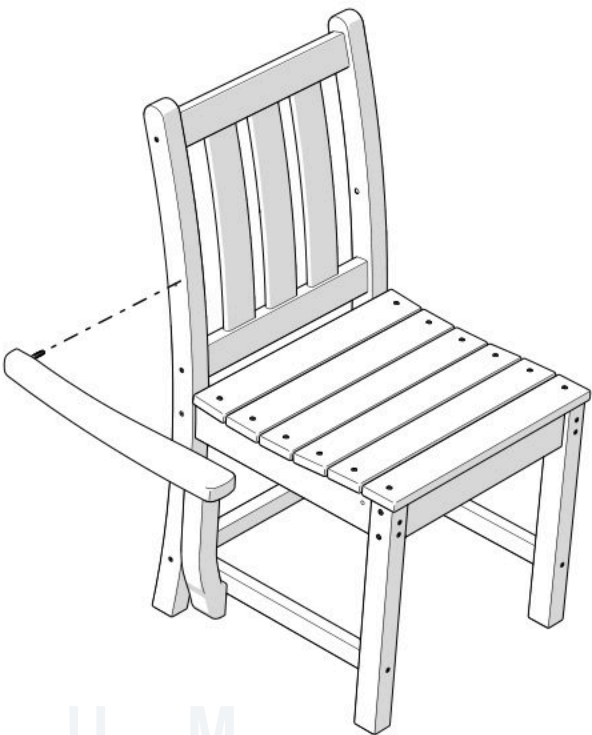

3

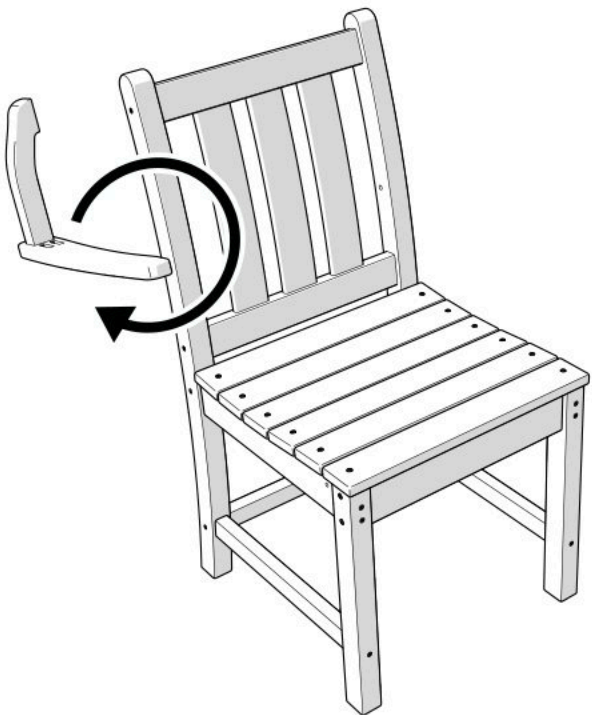

4

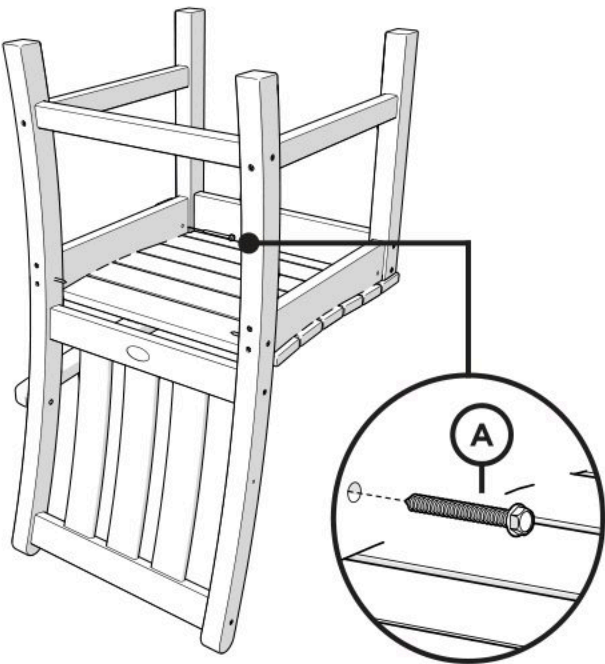


Repeat Steps 1 Thru 3
On Opposite Side


PREMIUM
POLY PATIOS



CDD200

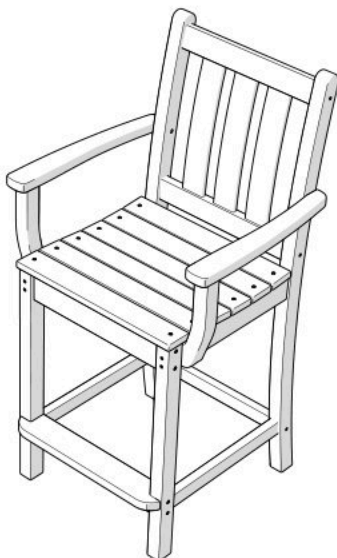

CDD201

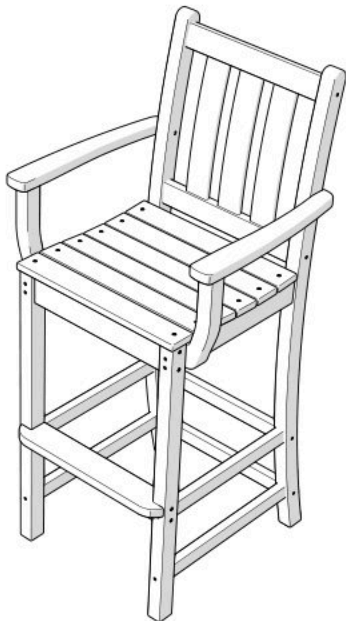

CDD202



20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



Cleaning Tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions

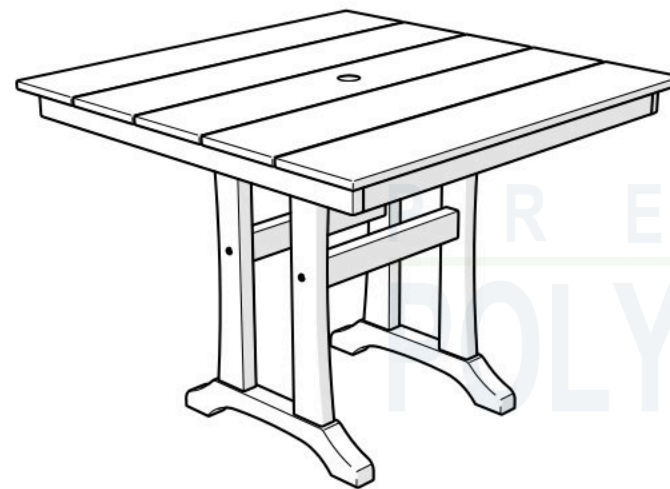


L1D81, L1R81,


L1B81

For Use With Small Plank
Table-PL81

TOOLS




3/8" wrench
(not included)

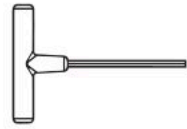


4mm T-handle
hex key (included)

PARTS

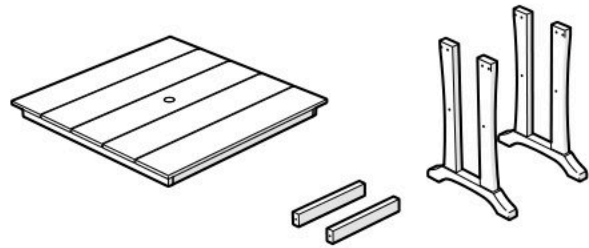


A x 8



2" Screw — HHW14X2


B x 4




3" Screw — H.27X3

1


Align each screw with a
pilot hole and partially
thread by hand before
fully tightening

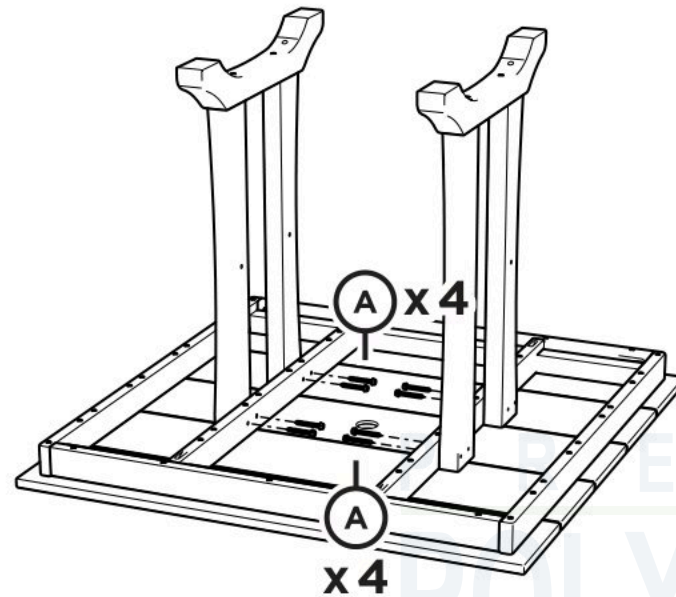


If legs have
relaxed during
transit, they
may be guided
into pilot hole
alignment

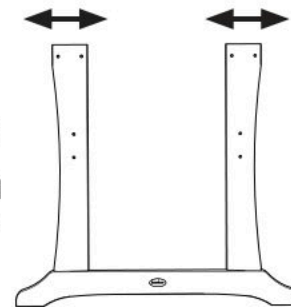

2

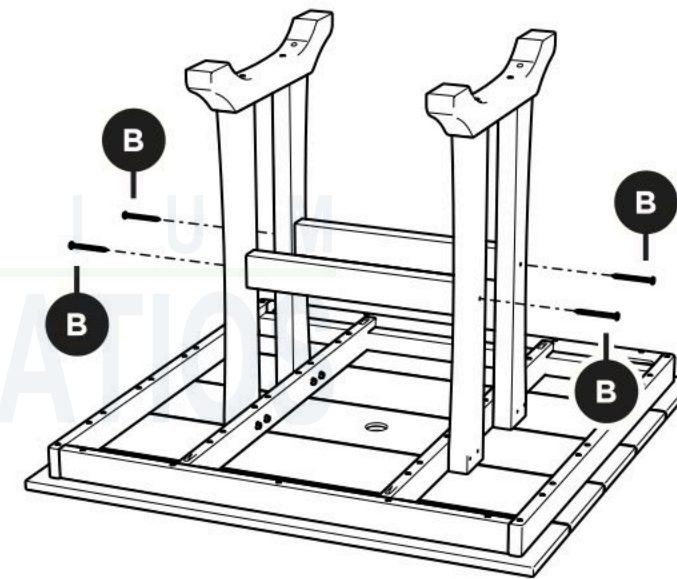

Removable table
plug included

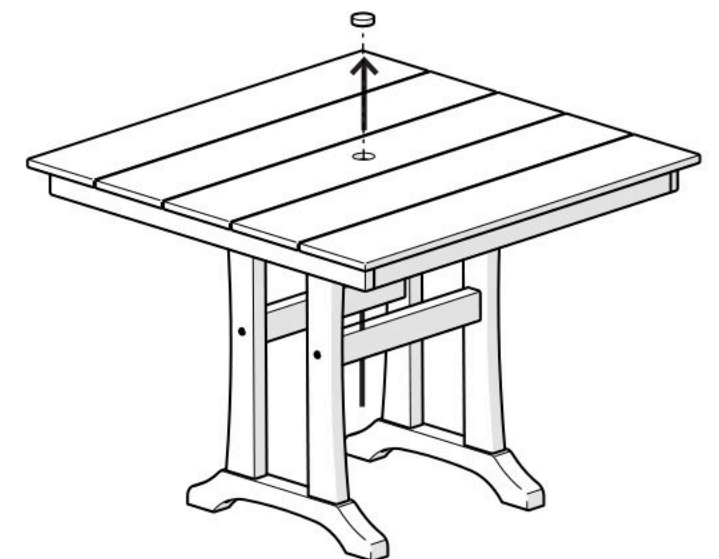

Remove protective plastic
film from the logo medallion.