20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:

Cleaning Tips


For a Quick Clean:
Simply wipe down with soap and water.

For a Deep Clean:
Wipe on ⅓ bleach and ⅔ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:
Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ⅓ bleach and ⅔ water solution and scrub with a soft bristle brush. Hose down to rinse.


POLYWOOD®

Assembly Instructions

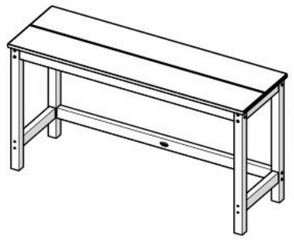

BT1855

Studio Balcony Table

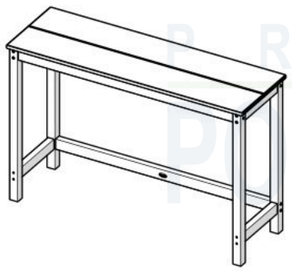

BRT1855

Studio Balcony Counter Table




BBT1855

Studio Balcony Bar Table


PREMIUM POLY PATIOS


View this product online at Premium Poly Patios




4mm T-handle
hex key (included)

PARTS

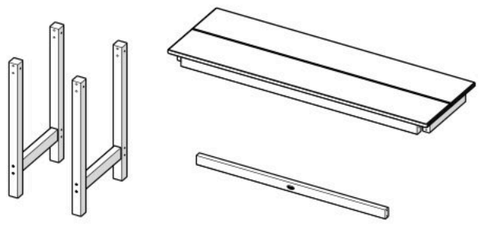


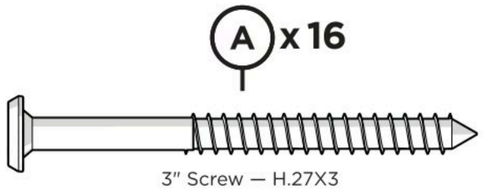



3" Screw — H.27X3

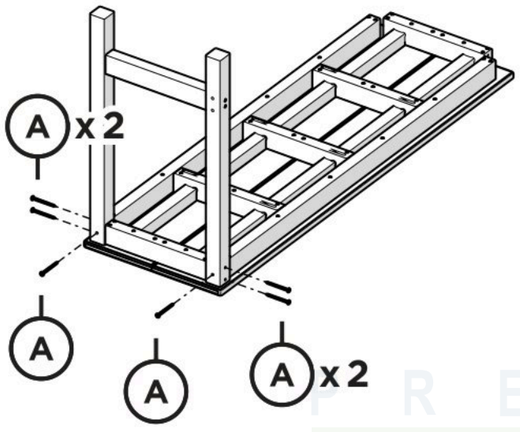


3

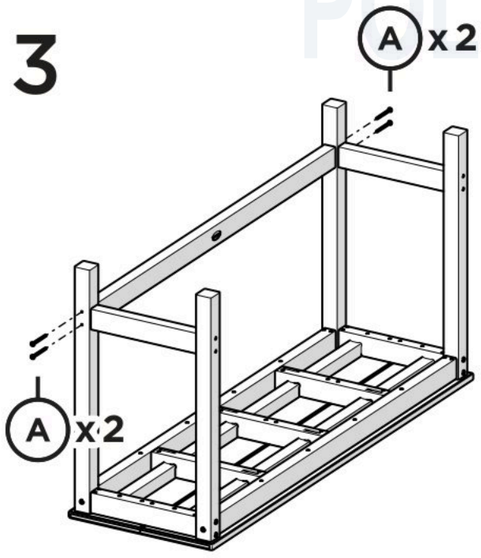

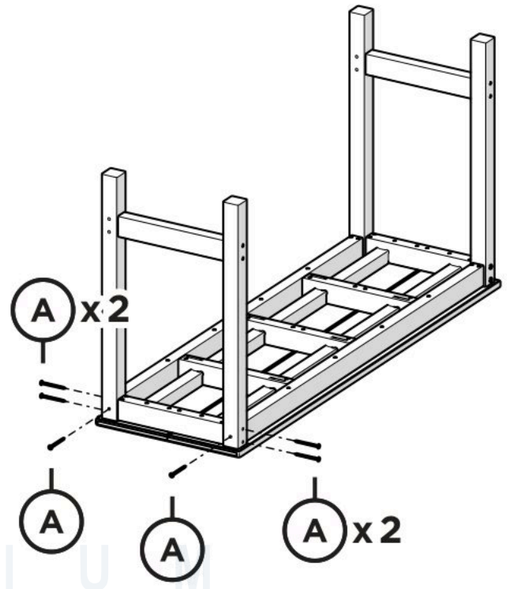

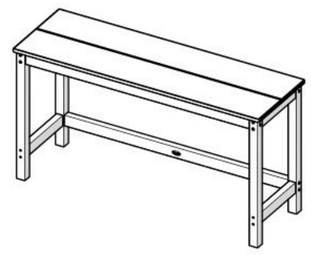

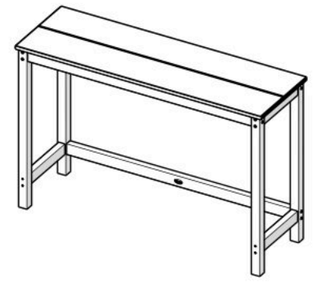



Remove protective plastic
film from the logo medallion.

PREMIUM POLY PATIOS

20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:

Cleaning Tips


For a Quick Clean:
Simply wipe down with soap and water.

For a Deep Clean:
Wipe on ⅓ bleach and ⅔ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:
Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ⅓ bleach and ⅔ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions

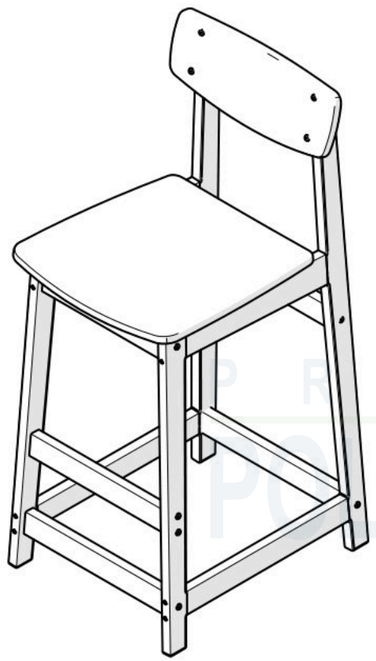


1122

Modern Studio Urban Bar Chair

PREMIUM POLY PATIOS


View this product online at Premium Poly Patios

TOOLS




4mm T-handle
hex key (included)

PARTS

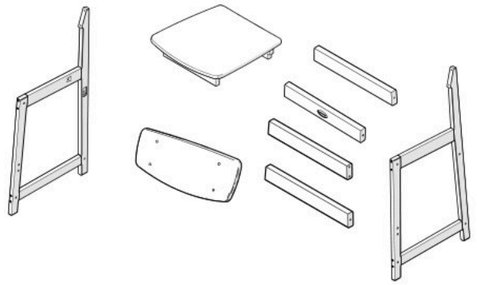




1.3" Screw — H.345X1.312

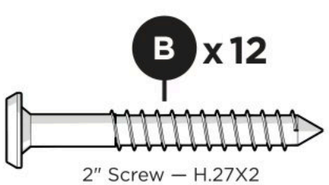

2" Screw — H.27X2


1

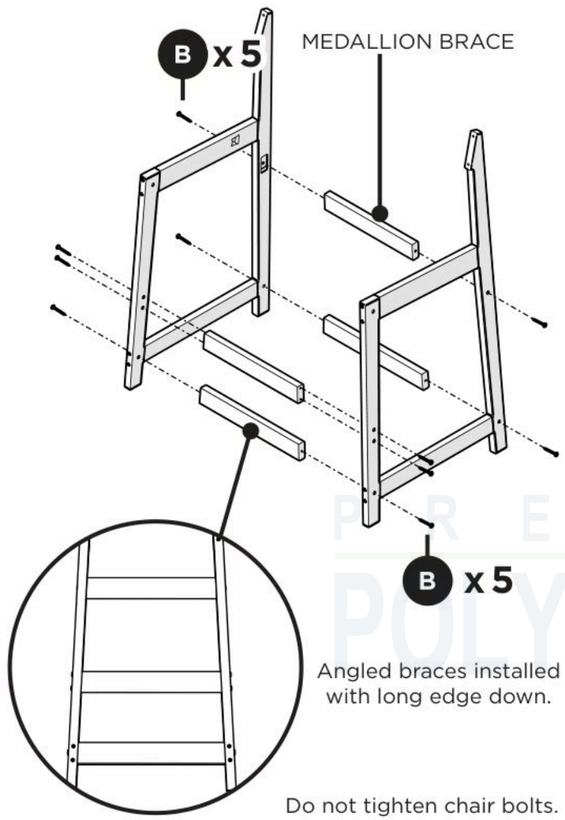

Angled braces installed with long edge down.


Do not tighten chair bolts.

2

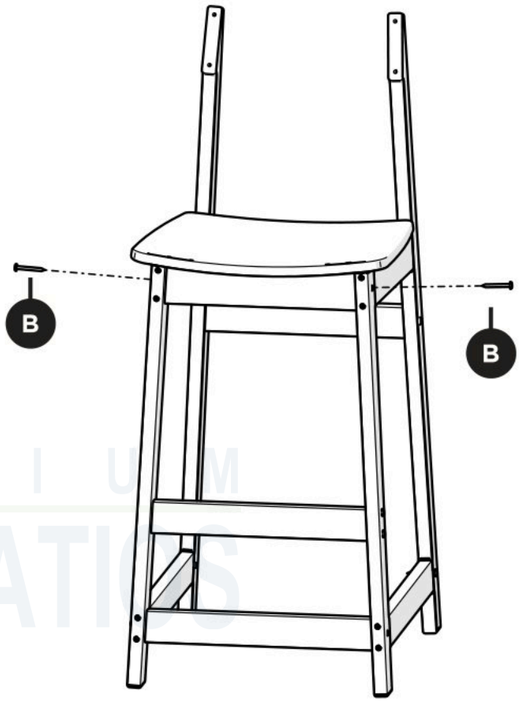

Tighten chair bolts.

3

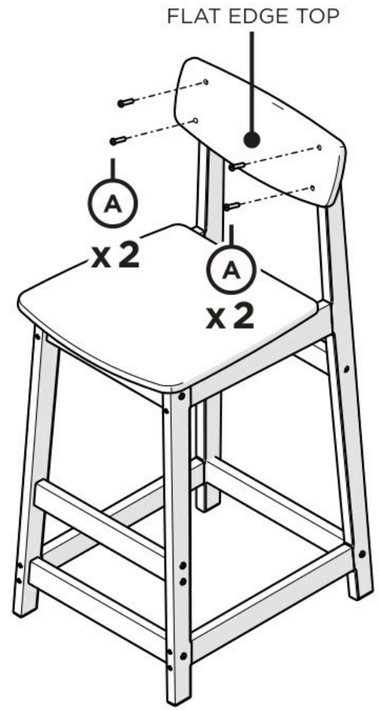

Remove protective plastic film from the logo medallion.

PREMIUM POLY PATIOS

View this product online at Premium Poly Patios