



BRYTON PARK®

Assembly Instructions

Poly Swivel Bar Chair



Thank you for choosing  BRYTON PARK®
We hope that this piece brings you many years of enjoyment!

PARTS (included)

(A) Swivel Seat & Leg Assembly (1)

(B) Backrest(1)

(C) Right Arm (1)

(D) Left Arm (1)



HARDWARE (included)

(a) 1 $\frac{3}{4}$ " Bolts (10)

(b) Allen Wrench (1)



STEP 1

Attach the backrest to the seat. Insert four 1 $\frac{3}{4}$ " bolts through the backrest & screw into the threaded inserts in the seat. (See photos 1 & 2.) **Do NOT fully tighten the bolts until Step 2 is completed.**

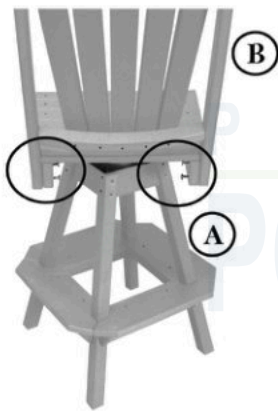


photo 1



photo 2

STEP 2

Attach the arms to the chair. Find the predrilled holes in the seat & the back of the arms. (See photo 3.) Insert the 1 $\frac{3}{4}$ " bolts through the holes & screw into the threaded inserts. (See photos 4 & 5.) Tighten all the bolts with the included Allen wrench.

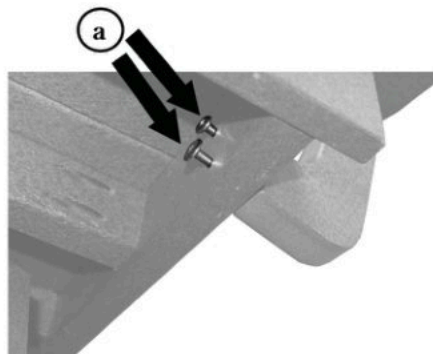
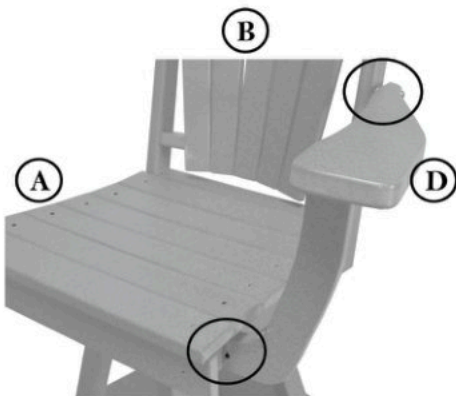


photo 4

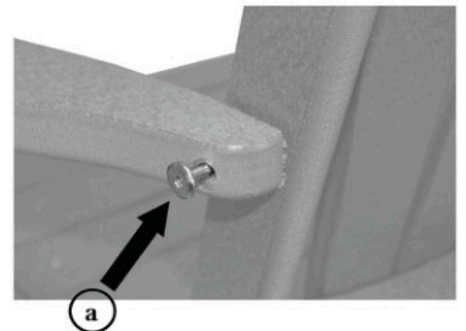


photo 5