
BRYTON PARK®

Assembly Instructions

44in. Round or Square Table

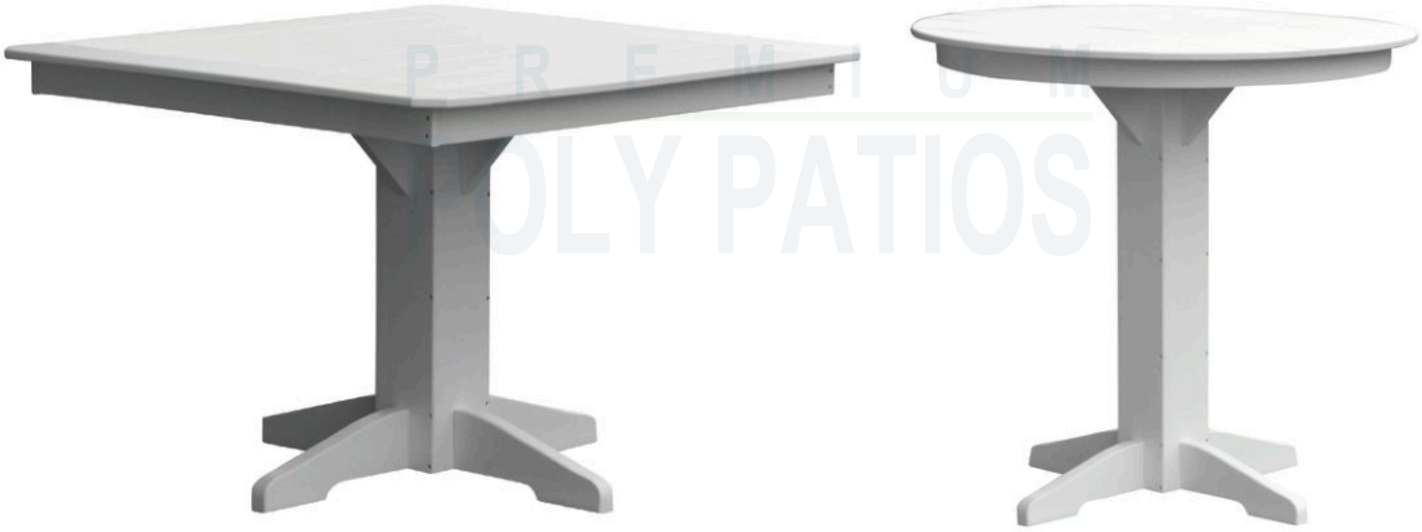


Thank you for choosing BRYTON PARK®

We hope that this piece brings you many years of enjoyment!

View this product online at Premium Poly Patios

PARTS (included)

- (A) Table Top (1) (Round or Square)
- (B) Pedestal (1)
- (C) Table Feet (4)
- (D) Table Braces (4)

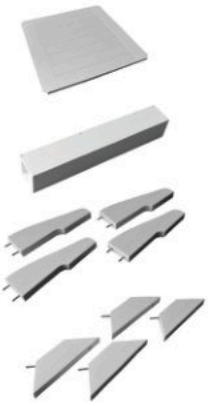

HARDWARE (included)

- (a) ¼ x 1½" Lag Screws (4)
- (b) ¼" Flange Nuts (12)
- (c) ¼" Flat Washers (4)
- (d) 2" Poly Screws (4)
- (e) Square Drive Bit (1)



TOOLS NEEDED

Screwgun

$^{7}/_{16}$" Wrench or Socket

STEP 1

Attach the table braces to the pedestal. The table braces will have hanger bolts attached on one side. Insert the bolts through the predrilled holes in the pedestal & put a ¼" flange nut on each bolt. Tighten with a $^{7}/_{16}$" wrench or socket. (See photos 1 & 2.)

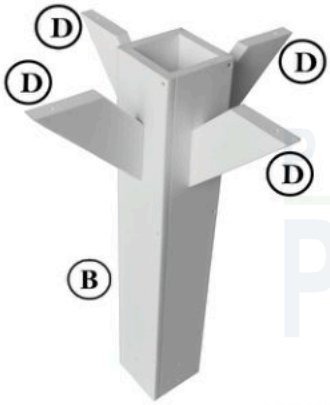


photo 1

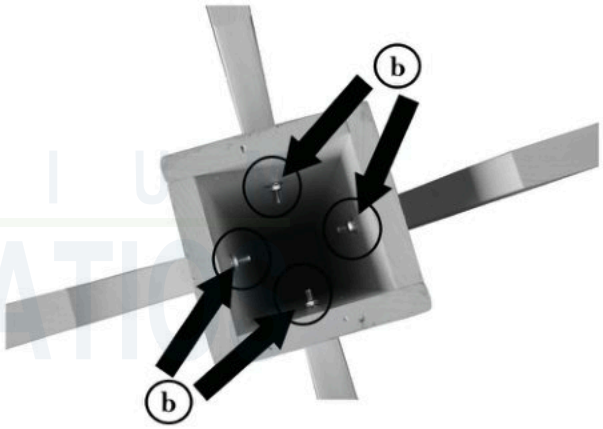


photo 2

STEP 2

Lay the table top upside down on a piece of cardboard or foam. Place the pedestal in the 6" square in the center of the table top. Make sure the braces & pedestal are seated squarely on the table. Insert the four 1½" lag screws & the 4 flat washers in the predrilled holes in the braces, then insert the 2" poly screws in the predrilled holes in the frame against the pedestal. Tighten the poly screws with a screwgun & square drive bit. Tighten the 4 lag screws with a $^{7}/_{16}$" wrench or socket. (See photos 3 & 4.) **Note: Do not over-tighten any of these screws.**

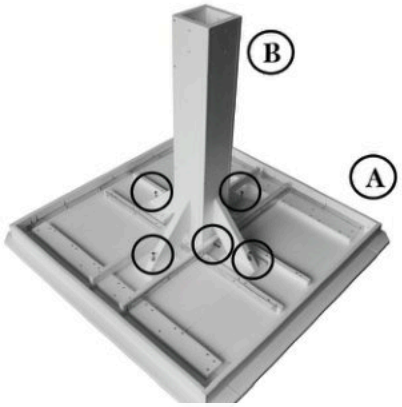


photo 3

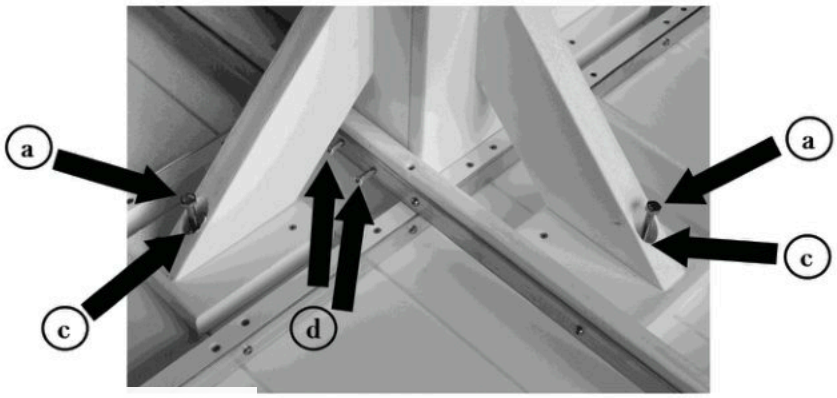


photo 4

View this product online at Premium Poly Patios

STEP 3

Insert the hanger bolts in the feet into the predrilled holes in the pedestal. Put the ¼" flange nuts on the inside of the pedestal & tighten with a $^{7}/_{16}$" wrench or socket. (See photos 5 & 6.)

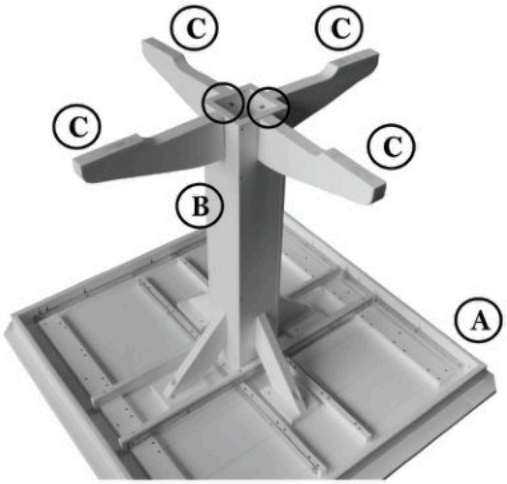


photo 5

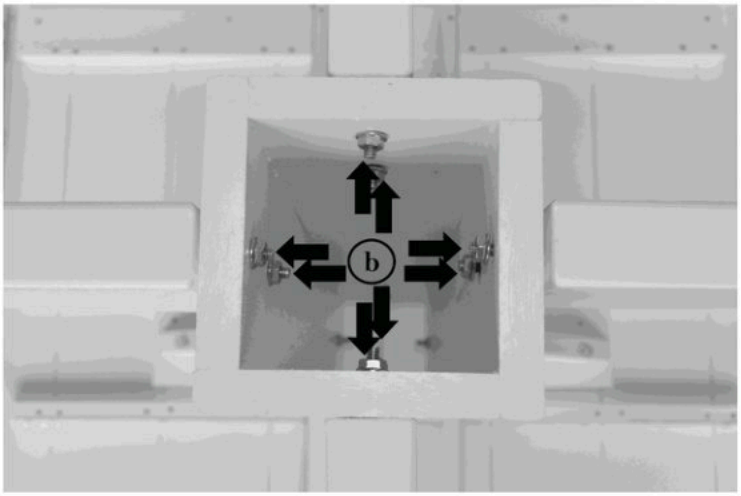


photo 6

PREMIUM
POLY PATIOS