BRYTON PARK®

Assembly Instructions

Poly Table with Attached Benches



Thank you for choosing BRYTON PARK®

We hope that this piece brings you many years of enjoyment!

View this product online at Premium Poly Patios

PARTS (included)

- (A) Table Top (1)
- (B) Bench Top (2)
- (C) Right Legs (2)
- (D) Left Legs (2)
- (E) Top Leg Brace (2)
- (F) Bottom Leg Brace (2)
- (G) Table Brace (2)



HARDWARE (included)

- (a) 2¼" Bolts (28)
- (b) Lags (2)
- (c) Washers (2)
- (d) Screws (4)
- (e) Square Drive Bit (1)
- (f) Allen Wrench (1)



TOOLS NEEDED

Screwgun/powerdrill

$^{7}/_{16}$" Socket

STEP 1

Lay a right & left leg on a piece of cardboard or foam with the aluminum angle facing down & the metal inserts facing up. Then lay the top leg brace & the bottom leg brace legs with the aluminum facing down. (See photo 1.) Insert the 2¼" bolts through the predrilled holes in the braces & screw into the metal inserts in the legs. Tighten with the Allen wrench. (See photos 1 & 2.)

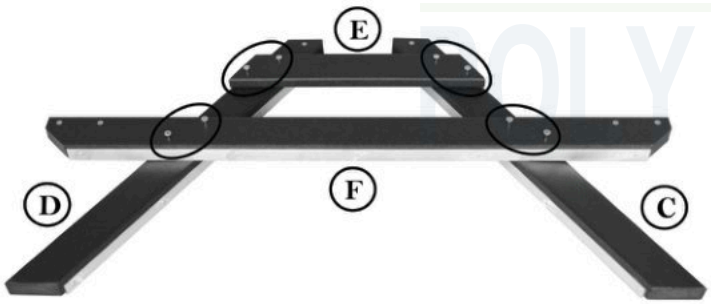


Photo 1

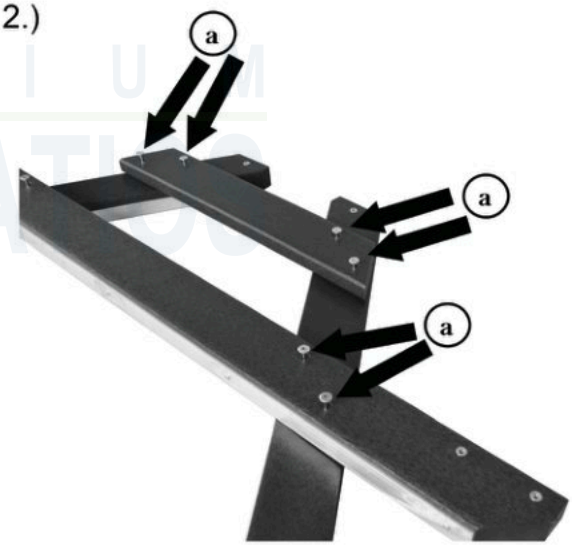
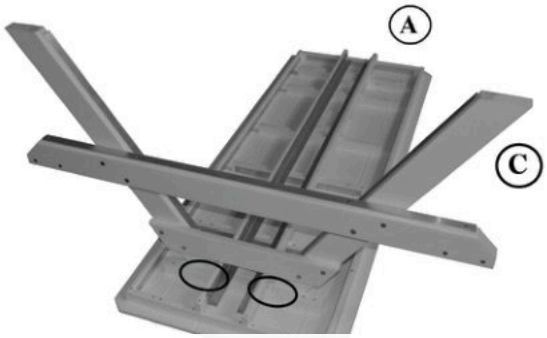


Photo 2

STEP 2

Lay table top upside down on a clean flat surface and attach leg as shown in photo 1 and 2. Tighten the bolts using the included Allen wrench.



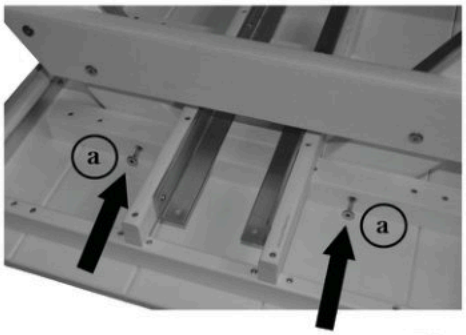


Photo 4

View this product online at Premium Poly Patios

STEP 3

Attach the table braces as shown. (See photo 5.) Slip a washer on each lag (photo 6) and insert the lag into the countersunk hole in the brace. (See photo 7.) Use the $^{7}/_{16}$" socket to tighten the lag. Use the screws to fasten the brace to the table leg. (See photo 8.) Tighten with the included square drive bit using your screwgun/power drill.

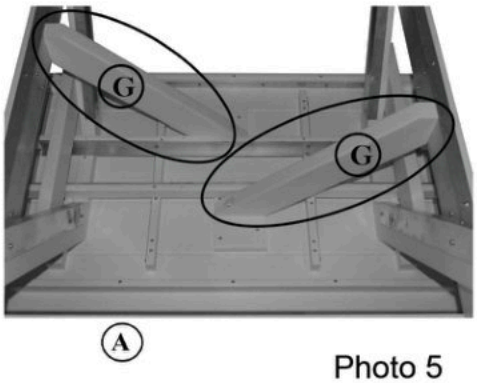


Photo 5

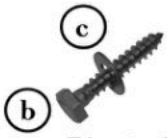


Photo 6

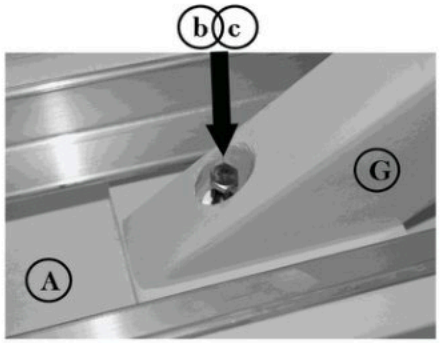


Photo 7

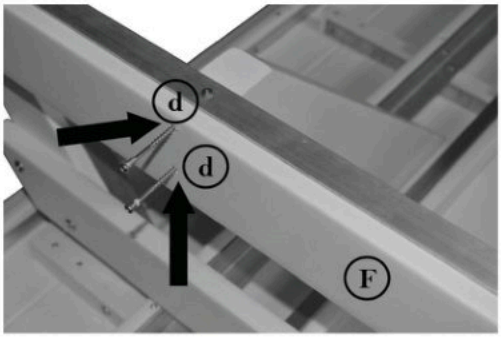


Photo 8

STEP 4

Set the table upright. (See photo 9.) Attach bench tops as shown. (See photo 10.) Insert 2¼" bolts through the table legs and tighten using the Allen wrench. (See photo 9.)



Photo 9



Photo 10

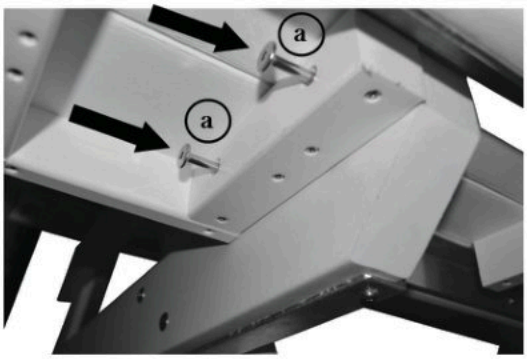


Photo 11

View this product online at Premium Poly Patios