



BRYTON PARK®

Assembly Instructions

Poly Classic Rocker



Thank you for choosing  **BRYTON PARK®**

We hope that this piece brings you many years of enjoyment!

PARTS (included)

- Ⓐ Seat (1)
- Ⓑ Backrest (1)
- Ⓒ Left Arm/Leg (1)
- Ⓓ Right Arm/Leg (1)
- Ⓔ Rockers (2)



HARDWARE (included)

- Ⓐ 1/4" x 2 1/4" Bolts (4)
- Ⓑ 1/4" x 1 3/4" Bolts (6)
- Ⓒ 2 1/2" Screws (4)
- Ⓓ Square Drive Bit (1)
- Ⓔ Allen Wrench (1)



TOOLS NEEDED

Screwgun

STEP 1

Place the seat on edge with the front slat facing down. Put the arm & leg on each side. (The curved side of the arm belongs on the outside.) Align the inserts in the legs with the holes in the side of the seat. Insert the 2 1/4" bolts through the seat in through the inserts in the legs. Semi-tighten only. Do not fully tighten until the back is attached. (See photo 1.)

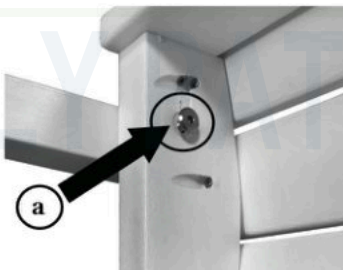


photo 1

STEP 2

Place the back between the arms. Align the holes in the back of the arms with the inserts in the side of the back. Fasten each side with a 1 3/4" bolt. Attach the bottom of the back to the back of the seat with the four 2 1/2" screws in the predrilled holes. There are no predrilled holes needed in the back of the seat as screws are self-drilling. (See photos 2 & 3.)

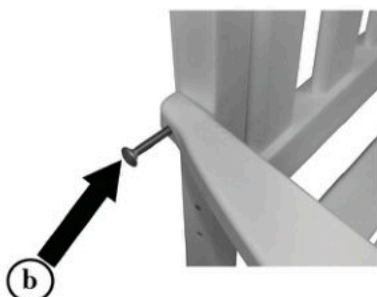


photo 2

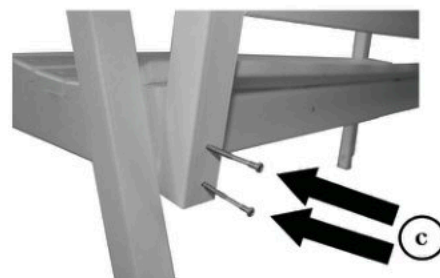


photo 3

STEP 3

Align the inserts in the rocker piece with the holes on the bottom of the legs and fasten with four 1 $\frac{3}{4}$ " bolts. (See photo 4.)

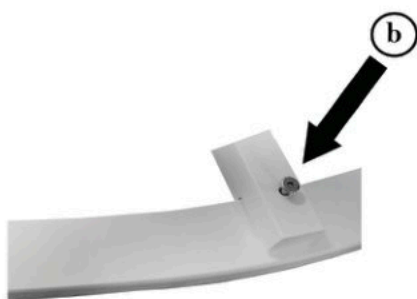


photo 4

P R E M I U M
POLY PATIOS