BRYTON PARK®

Assembly Instructions

Poly Chair & Garden Bench



Thank you for choosing BRYTON PARK®

We hope that this piece brings you many years of enjoyment!

View this product online at Premium Poly Patios

PARTS (included)

Ⓐ Seat (1)



Ⓑ Backrest (1)



Ⓒ Left Arm/Leg (1)



Ⓓ Right Arm/Leg (1)



HARDWARE (included)



ⓐ ¼" x 4" Bolts (2)

ⓑ ¼" x 2¼" Bolts (4)

ⓒ ¼" x 1¾" Bolts (2)

ⓓ ¼" Flange Nuts (2)

ⓔ Allen Wrench (1)

TOOLS NEEDED

$^{7}/_{16}$" Wrench or Socket

STEP 1

Lay out and identify all the parts and pieces. Bolt the seat and back together with the 4" long bolts. Put a flange nut on the bolt. Tighten with the $^{7}/_{16}$" wrench or socket. (See photos 1, 2 & 3.)

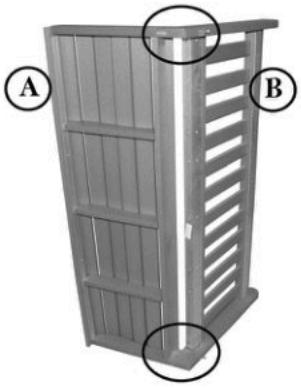


photo 1



photo 2

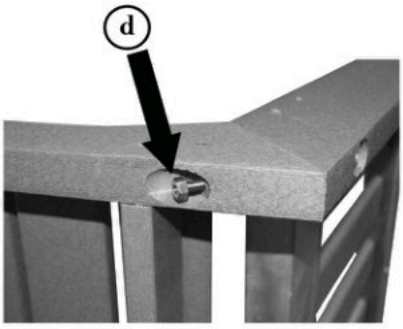


photo 3

STEP 2

Take the right arm/leg assembly and find the threaded inserts in the legs. Align with the predrilled holes on the side of the seat and insert two 2¼" bolts. (See photo 4.) Align the predrilled hole on the back of the arm with the insert on the back and insert a 1¾" bolt. (See photo 5.) Fasten the other arm in the same manner. Note: You might need to push or pull slightly on the back to align all the holes. Once the other leg is attached, fully tighten all bolts. The curved side of the arm belongs on the outside of the glider.

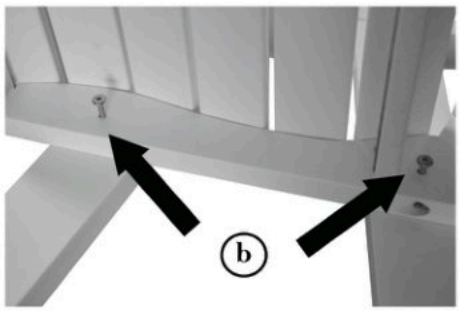


photo 4

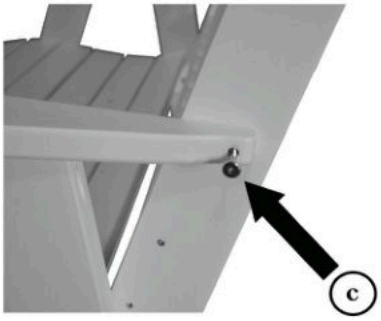


photo 5

View this product online at Premium Poly Patios