BRYTON PARK®

Assembly Instructions

Poly Adirondack Glider Chair



Thank you for choosing BRYTON PARK®

We hope that this piece brings you many years of enjoyment!

View this product online at Premium Poly Patios

PARTS (included)



- (A) Seat (1)
- (B) Backrest (1)
- (C) Left Arm/Leg (1)
- (D) Right Arm/Leg (1)
- (E) Feet (2)
- (F) Braces (2)

HARDWARE (included)



- (a) 3" Lag Screws (2)
- (b) 1¾" Bolts (4)
- (c) 1¼" Bolts (8)
- (d) 2" Screws (10)
- (e) Glider Hangers (4)
- (f) Square Drive Bit (1)
- (g) Allen Wrench (1)

TOOLS NEEDED

Screwgun

STEP 1

Lay out and identify all the parts and pieces. Fasten the arm assembly to the seat by lining up the inserts in the legs with the holes on the side of the seat. Insert the 1¾" bolts into the holes and tighten with the Allen wrench. (See photos 1 & 2.)

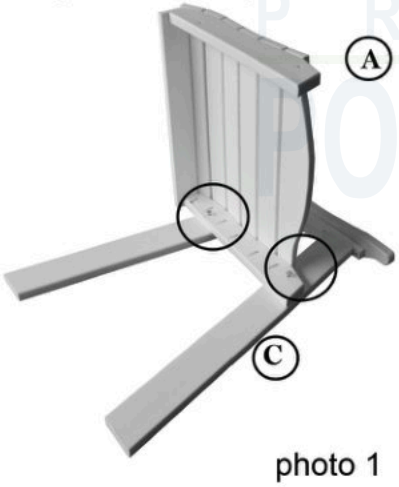


photo 1

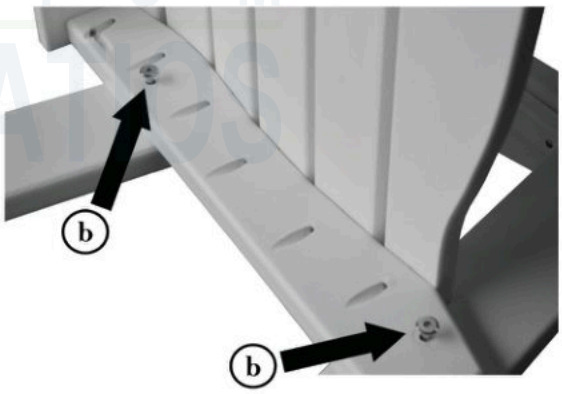


photo 2

STEP 2

Set the backrest on the chair and insert the 3" lag screws through the predrilled holes in the arm & screw into the middle brace on the backrest. (See photos 3 & 4.)



photo 3



photo 4

View this product online at Premium Poly Patios

STEP 3

Insert the 2” screws through the predrilled holes in the bottom brace on the backrest & screw into the seat using a screwgun & the square drive bit. (See photos 5 & 6.)



photo 5

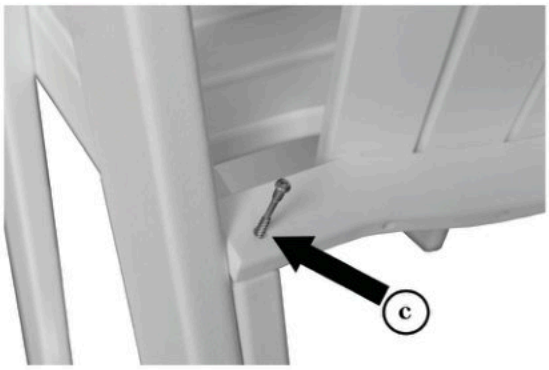


photo 6

STEP 4

Insert the screws into the braces and screw into the feet using a screwgun & square drive bit. (See photos 7 & 8.)

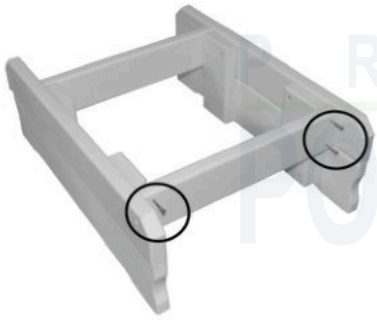


photo 7

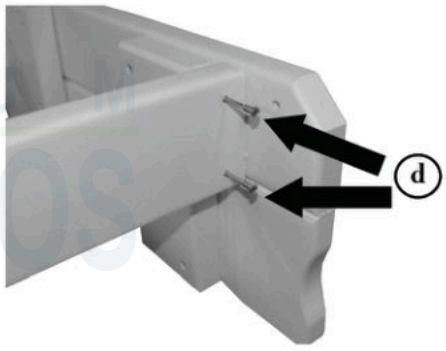


photo 8

STEP 5

Attach the glider hangers to the legs & the feet. Note: The threaded insert in the feet closest to the edge belong in the front of the glider. Insert the 1¼” bolts through the hangers & into the feet & legs and tighten with Allen wrench. (See photos 9 & 10.)



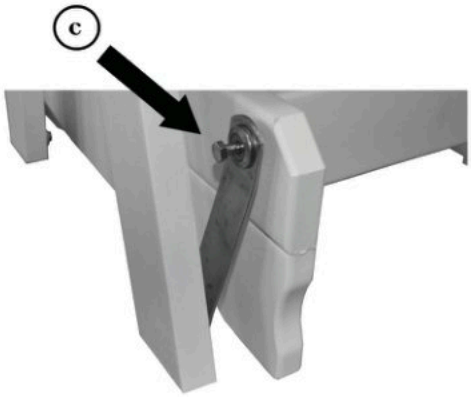


photo 10

View this product online at Premium Poly Patios