



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please visit

with our Customer Experience



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions



ADR600

Vineyard Curveback Adirondack Rocking Chair



ADR610


Nautical Curveback Adirondack Rocking Chair



ADR620

Modern Curveback Adirondack Rocking Chair

TOOLS

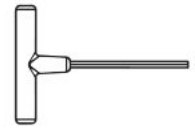


4mm T-handle
hex key (included)



7/16" wrench
(not included)

PARTS

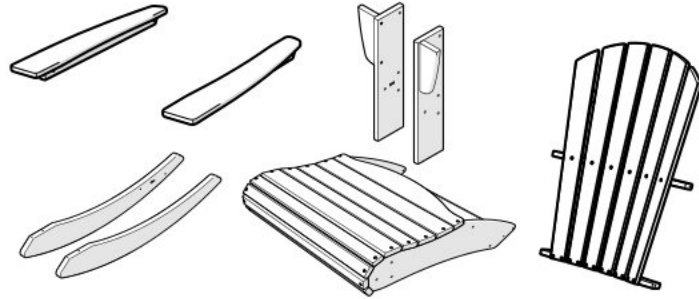

A x 6
1.875" Bolt — H.25-20X1.875

B x 2
2.25" Bolt — H.25-20X2.25

C x 4
1.5" Screw — H.27X1.5


D x 4
2" Screw — H.27X2

E x 8
Flange Nylon Lock Nut
HN.25-20FN

F x 2
Cap Dowel Screw — HD.25X2+P11420

1


Twist dowel screw into rocker until
finger-tight, remove protective cap

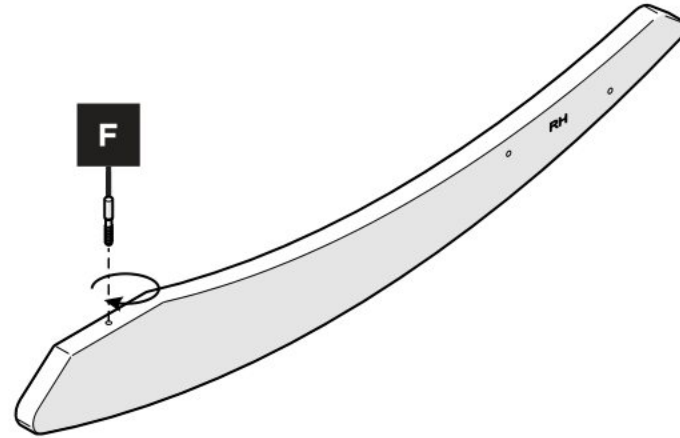

Repeat other side


2

Match RH leg with RH rocker

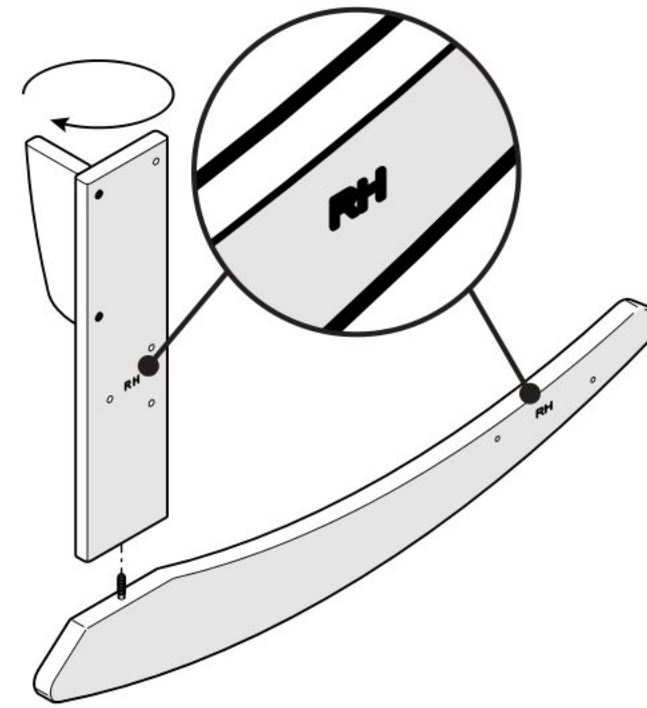


Repeat with LH parts


3

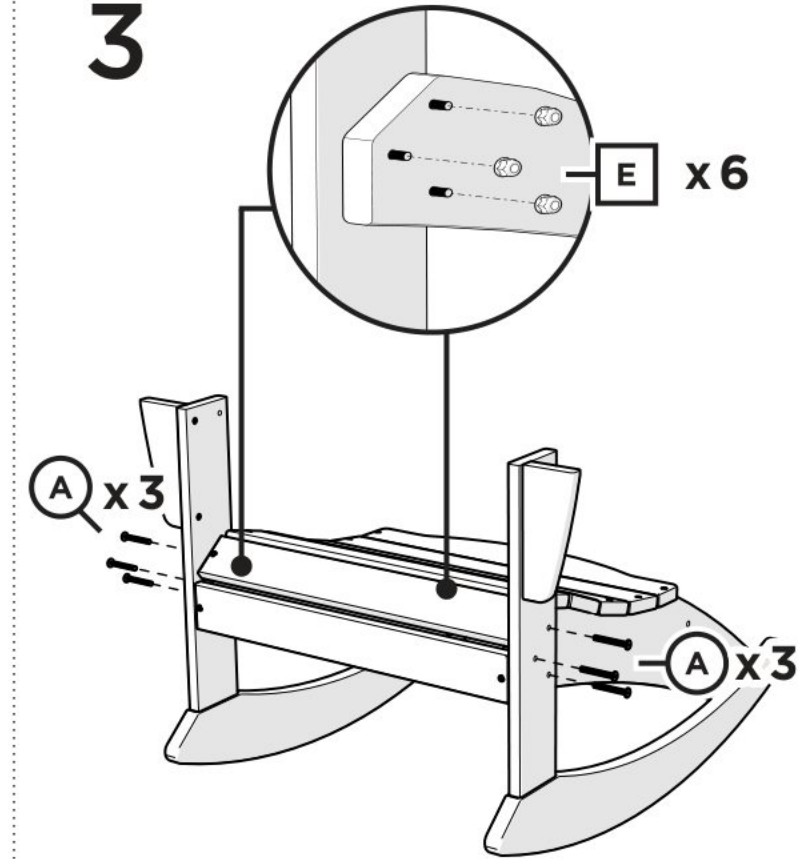

4

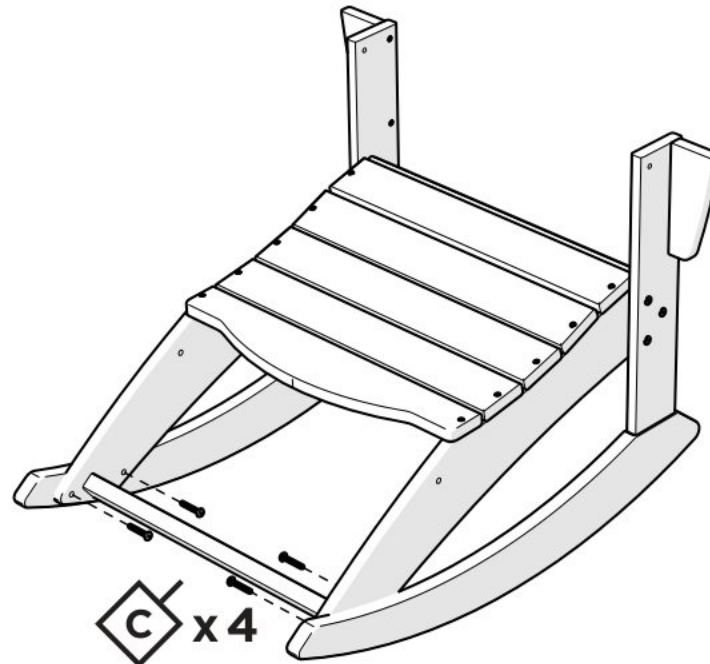

5

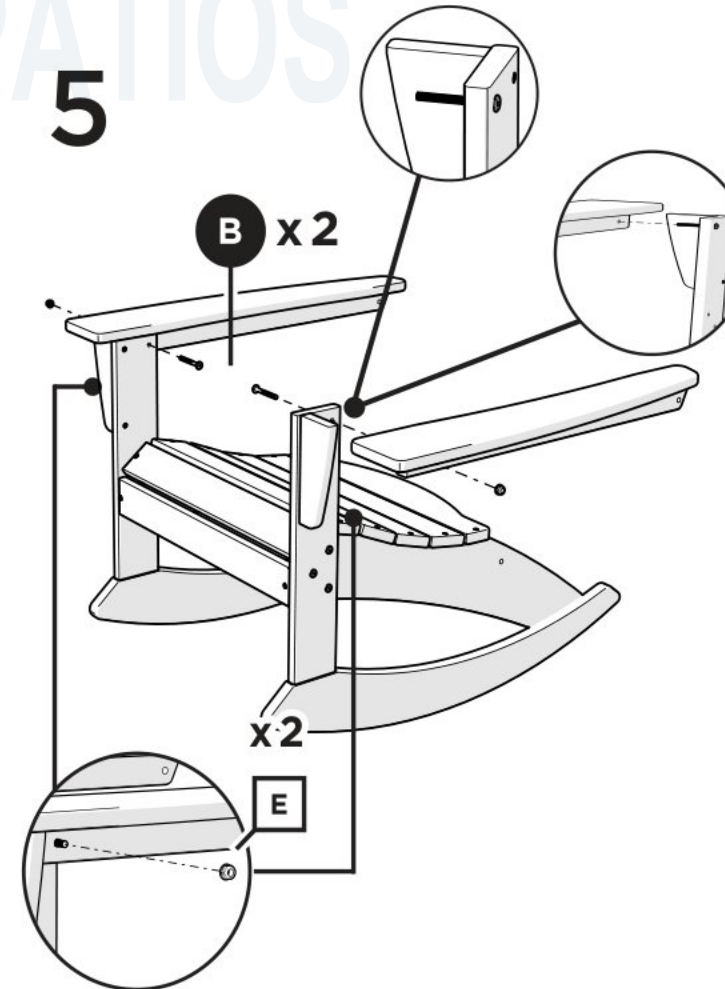

6

