

POLYWOOD

Assembly Instructions



20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft-bristle brush. Hose down to rinse.




**L1D83, L1R83,
L1B83**

**For Use With Rectangle
Plank Table-PL83**

TOOLS






3/8" wrench
(not included)

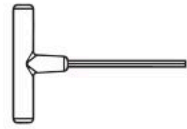


4mm T-handle
hex key (included)

PARTS

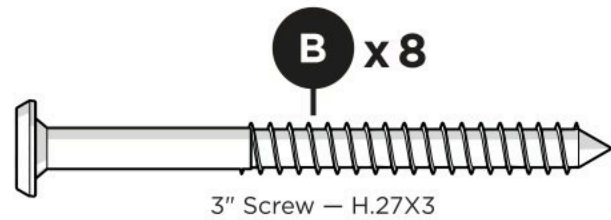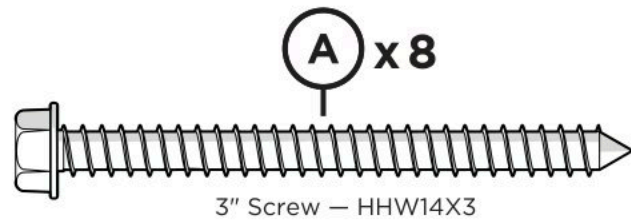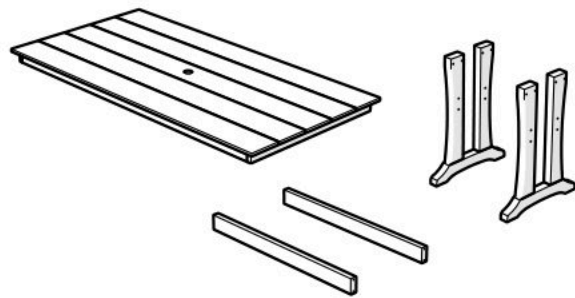


1



Align each screw with a
pilot hole and partially
thread by hand before
fully tightening

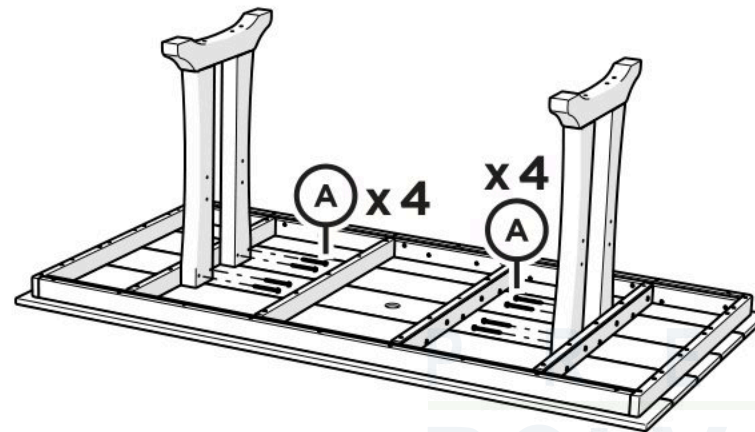

If legs have
relaxed during
transit, they
may be guided
into pilot hole
alignment

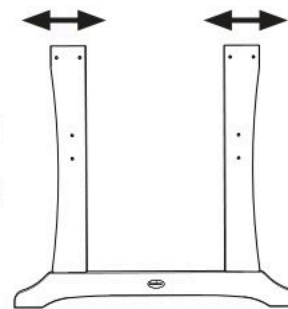

2

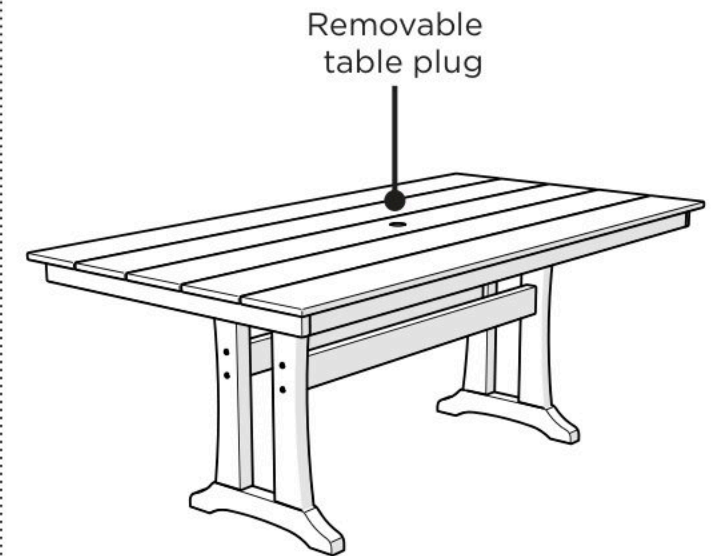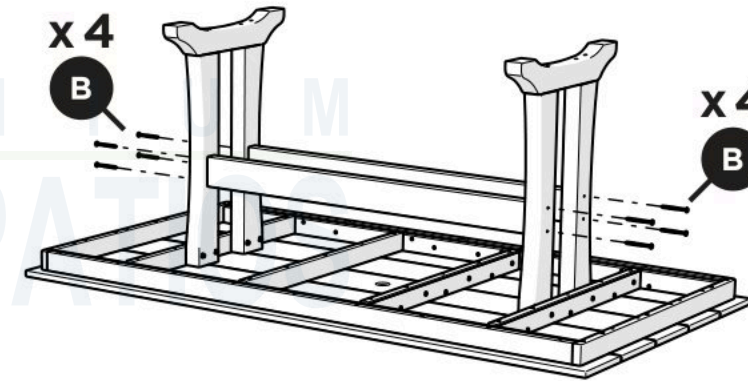

Removable
table plug



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:


Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD

Assembly Instructions

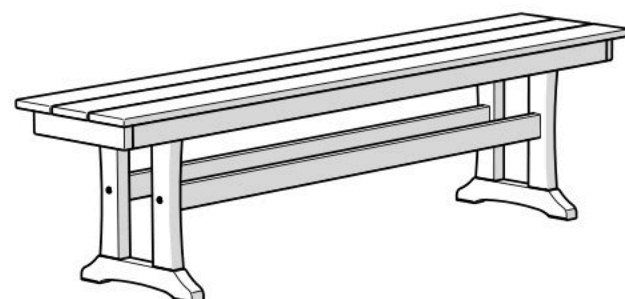


PL36-T1L1
Farmhouse Trestle
65" Bench

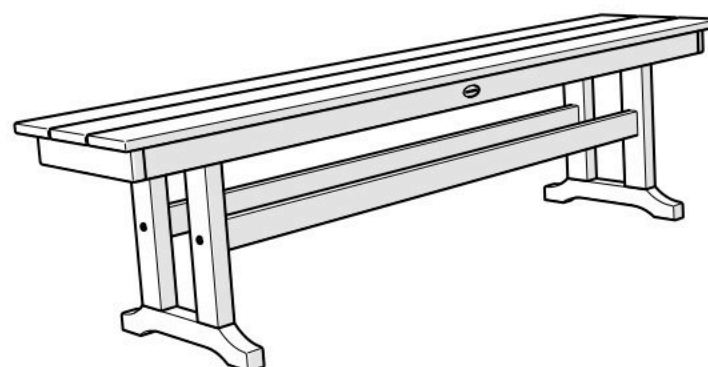


PL36-T1L3
Farmhouse 65"
Side Bench


TOOLS

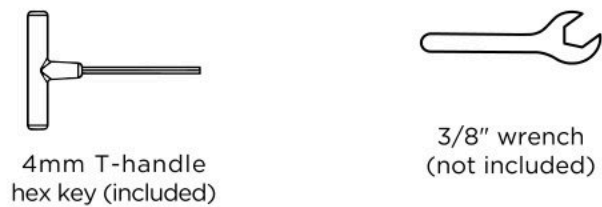








PARTS

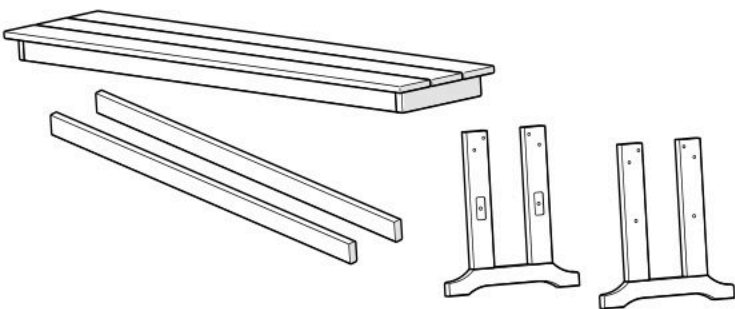

A x 8

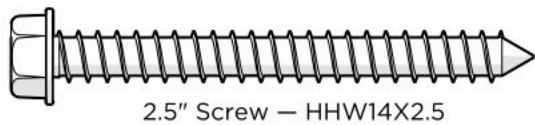

B x 4

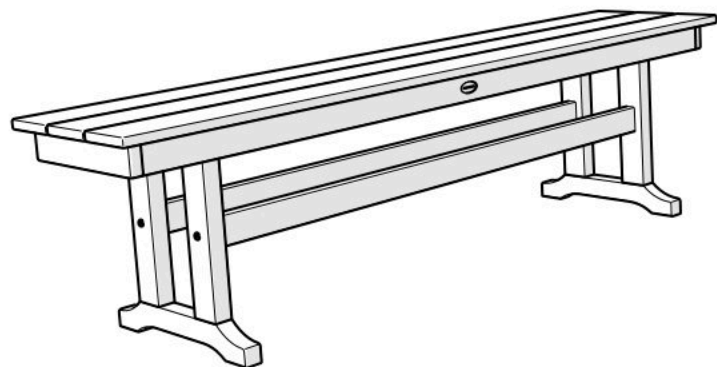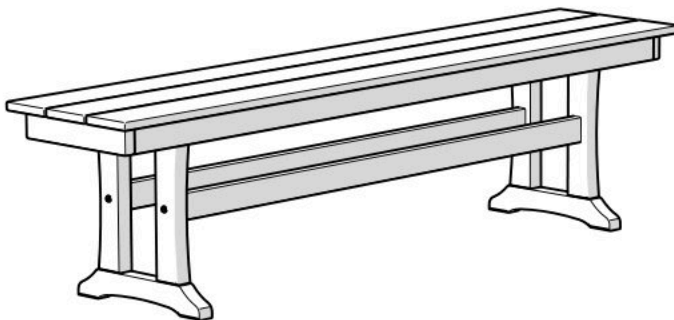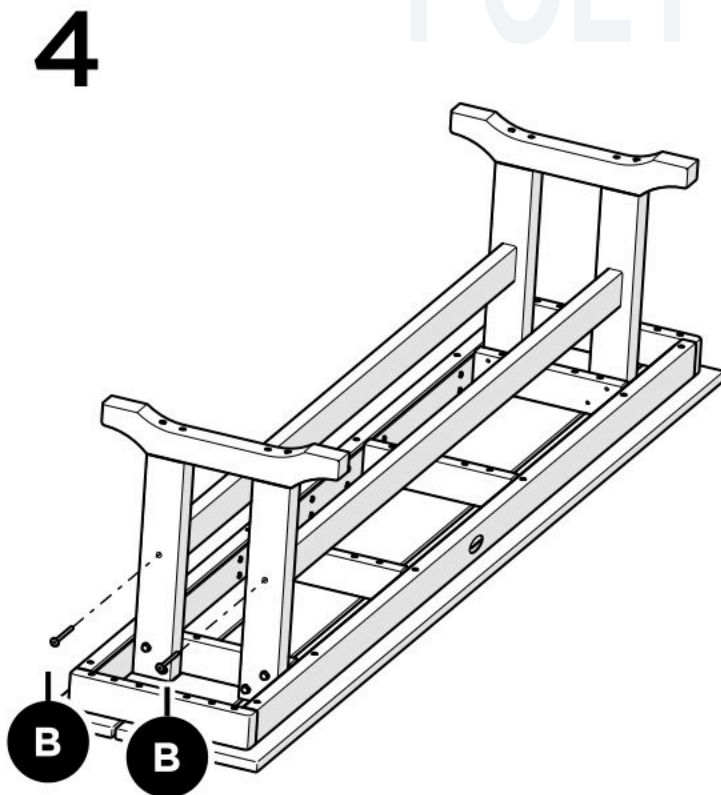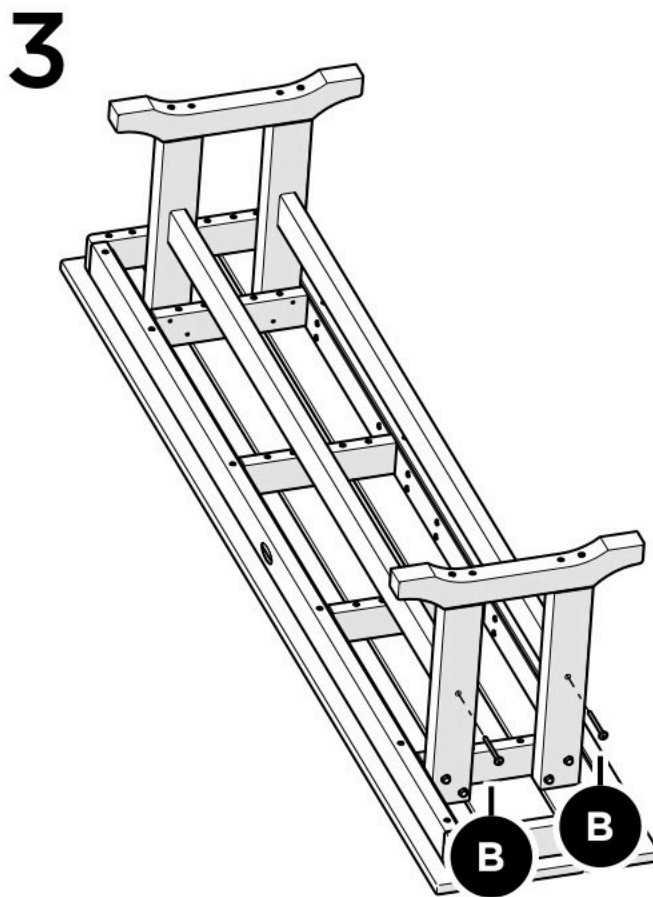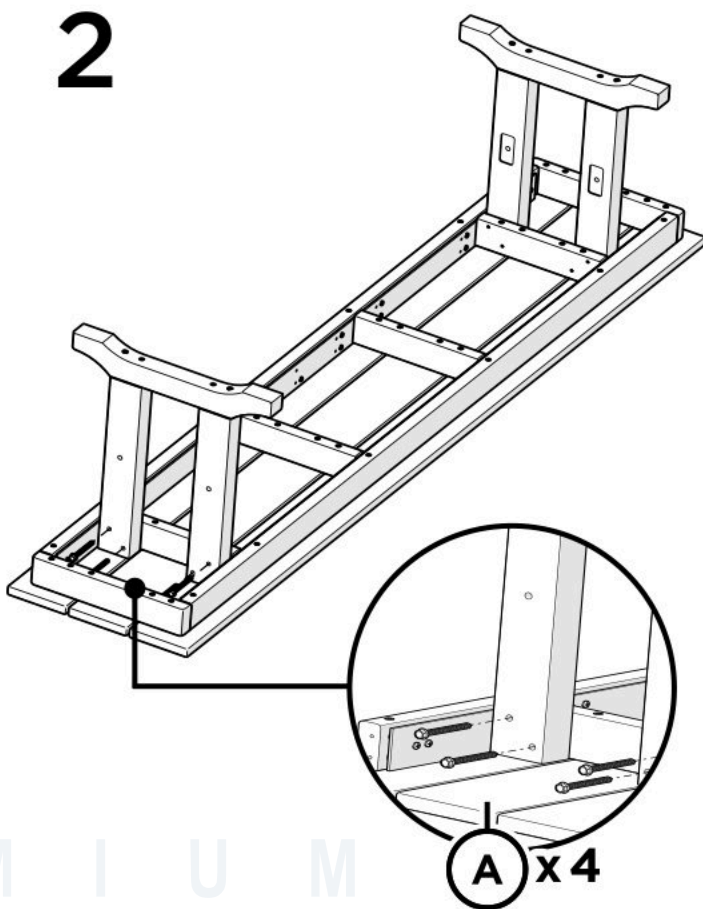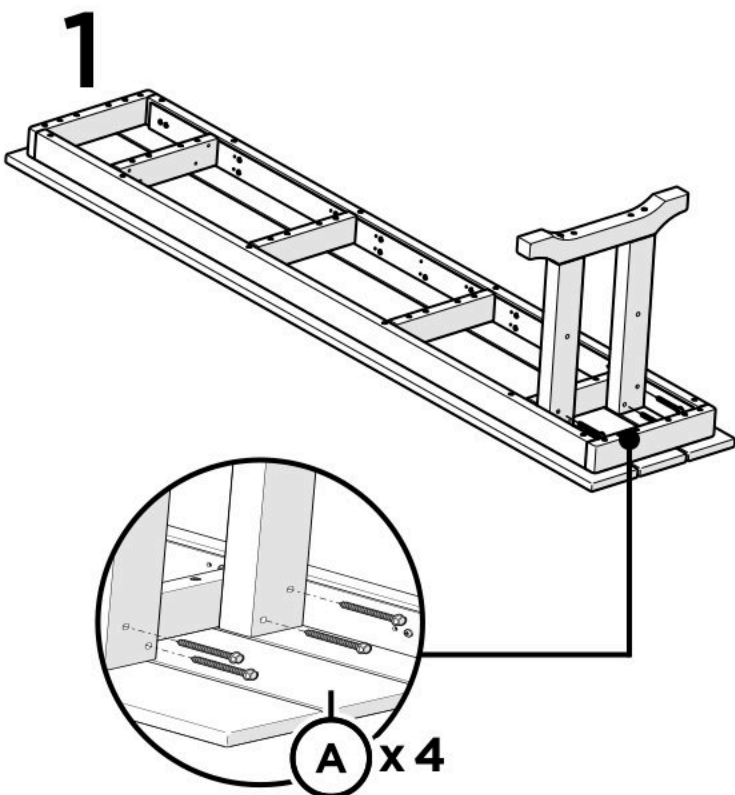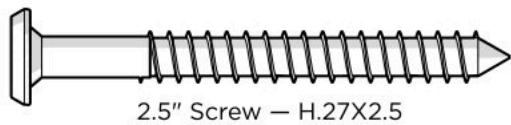



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD

Assembly Instructions



ADD600


Vineyard Curveback Adirondack Dining Chair



ADD620


Modern Curveback Adirondack Dining Chair

TOOLS

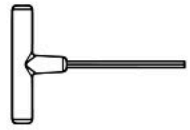


4mm T-handle
hex key (included)

PARTS

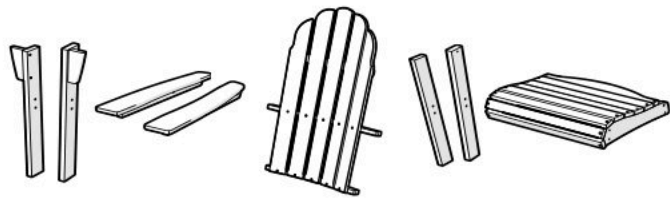


A x 10

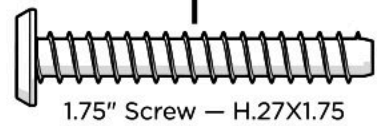


1.75" Screw — H.27X1.75

B x 2




2" Screw — H.27X2

C x 2




3" Screw — H.27X3


1

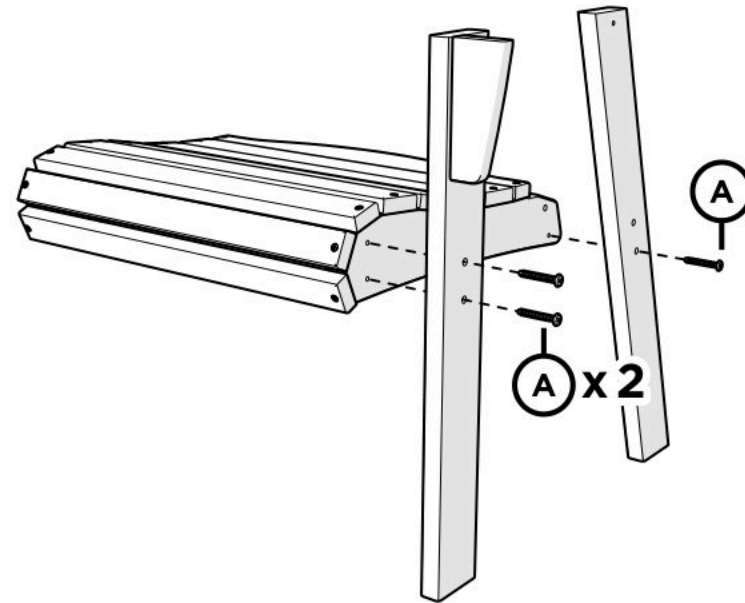


2

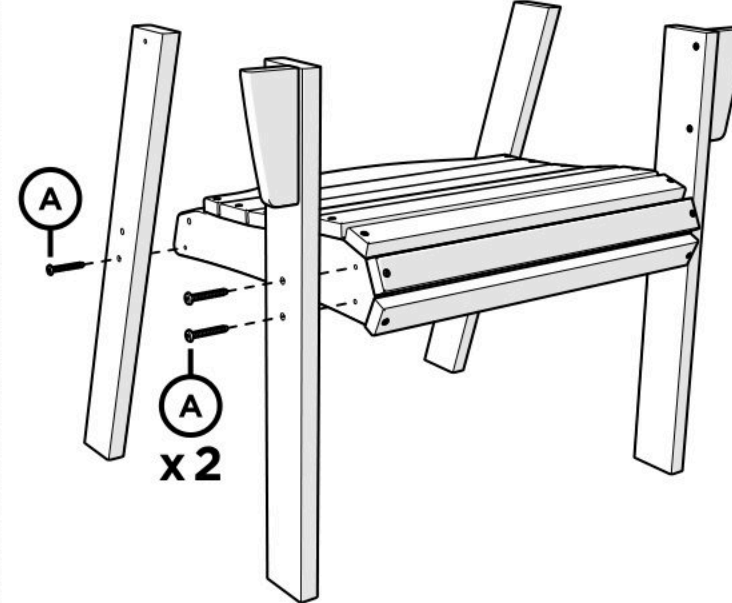



3

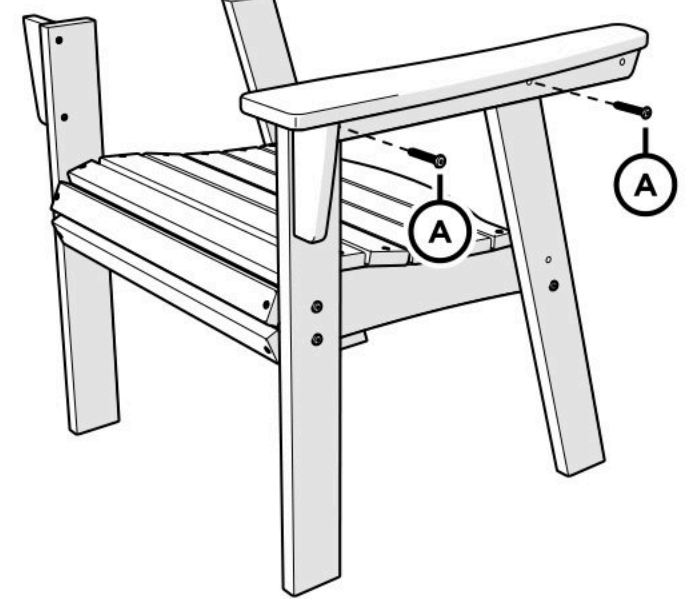

4

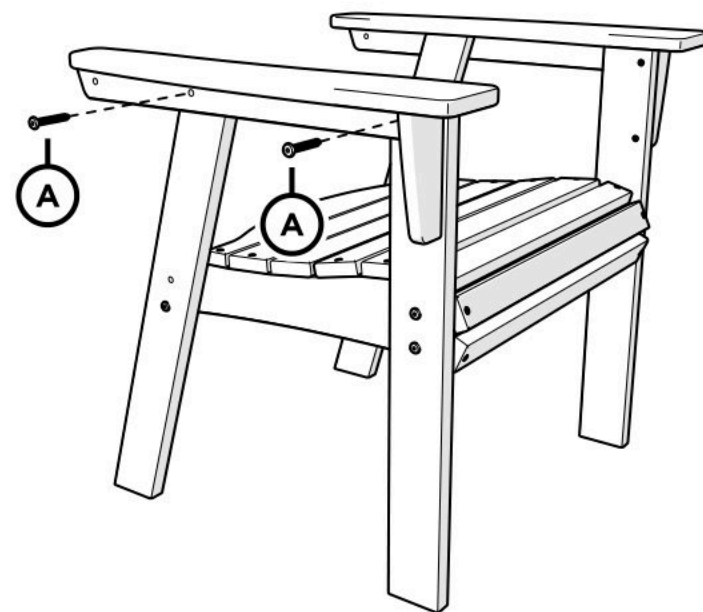

5

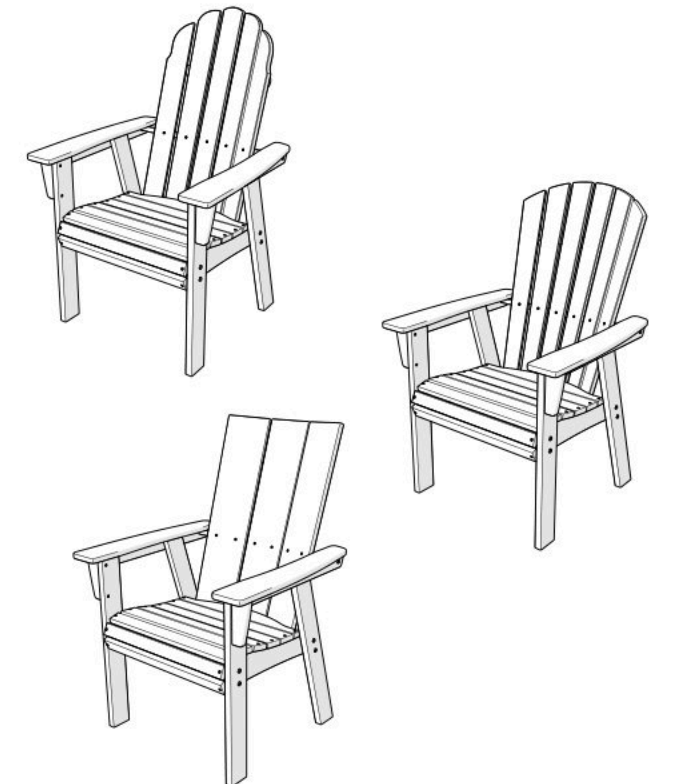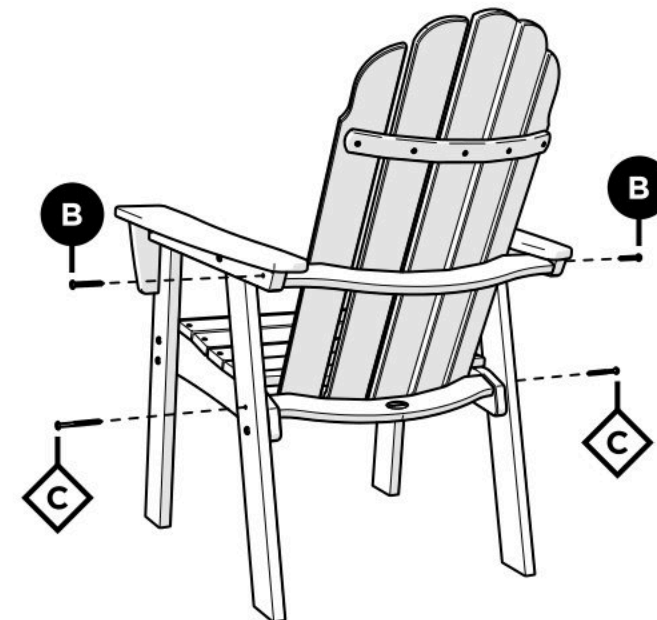

POLYWOOD