



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.


POLYWOOD

Assembly Instructions



SBT18, SBT26

South Beach Side Table

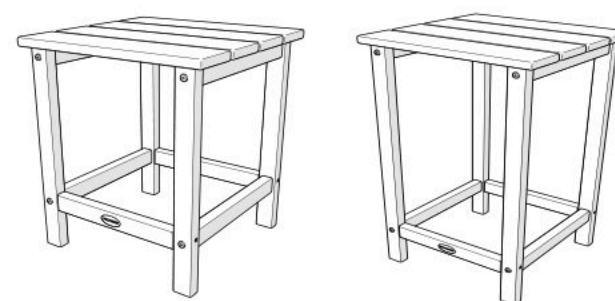

ECT18, ECT26



Long Island Side Table

TOOLS




4mm hex key
(included)


PARTS

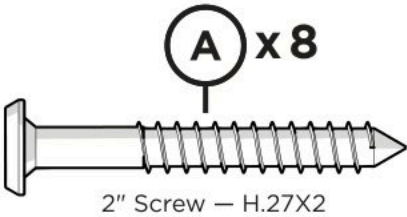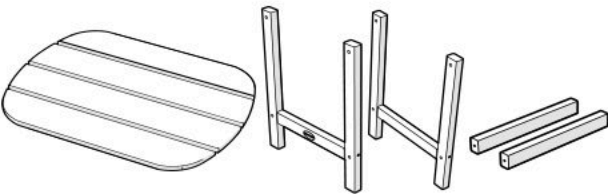


1

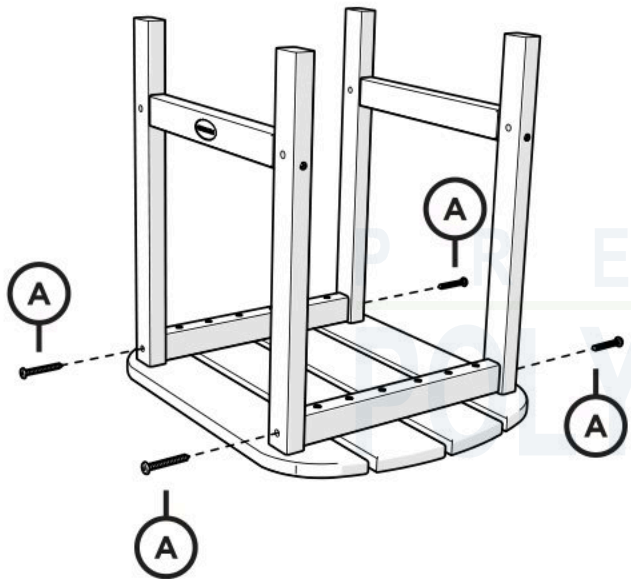

2

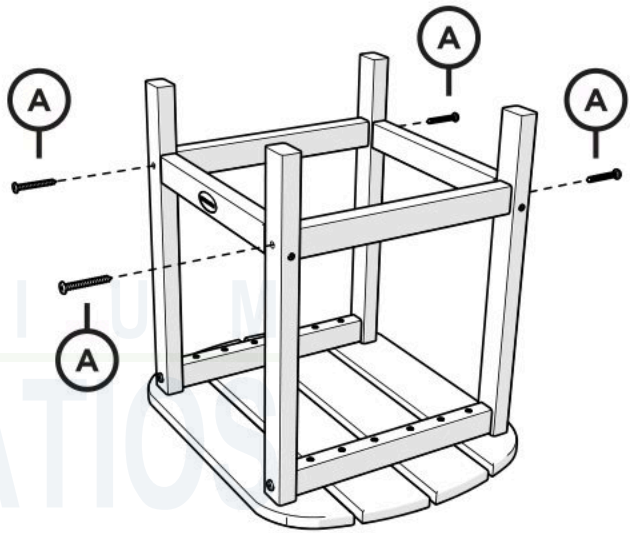


SBT18

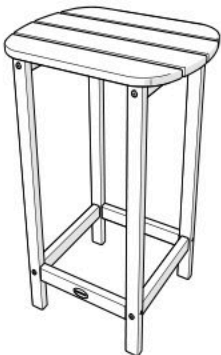

SBT26



ECT18

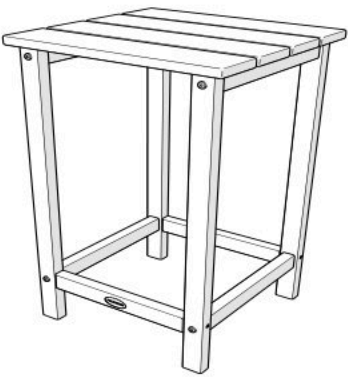

ECT26

POLYWOOD



20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



Cleaning Tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions




CLC2280
Cottage Chaise with
Arms



CLCW2280
Cottage Chaise with
Arms and Wheels

TOOLS

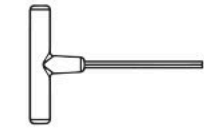


4mm T-handle
hex key (included)




4mm hex key
(included)

PARTS

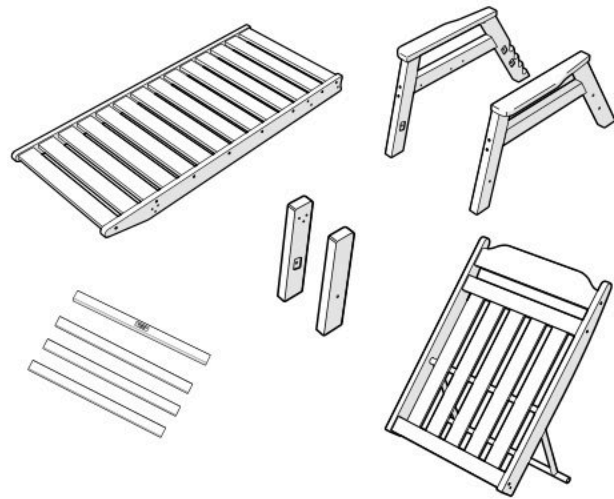


A x 12



2" Screw — H.27X2

B x 8




2.5" Screw — H.27X2.5


1

Assembly Video


Some may find this easier
to assemble with a friend

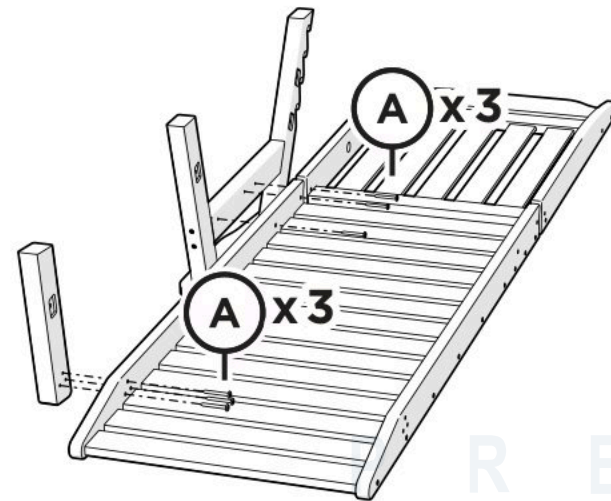

2

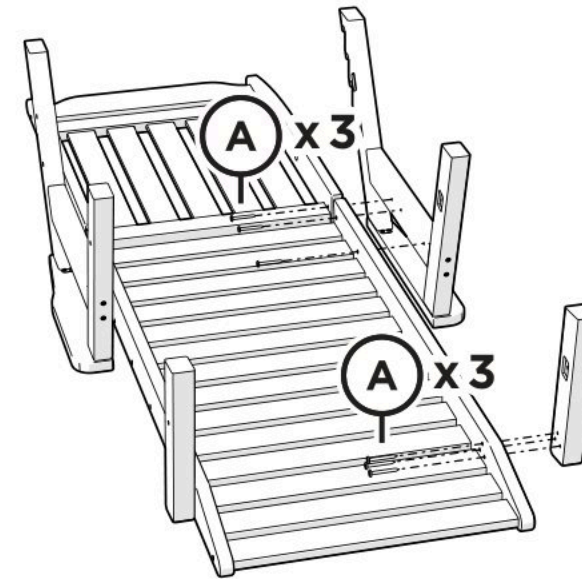


3

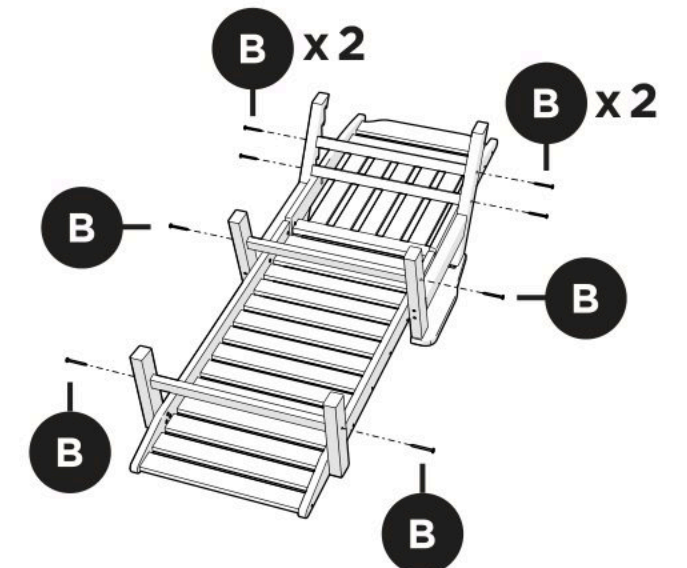

4



Remove protective plastic
film from the logo medallion.

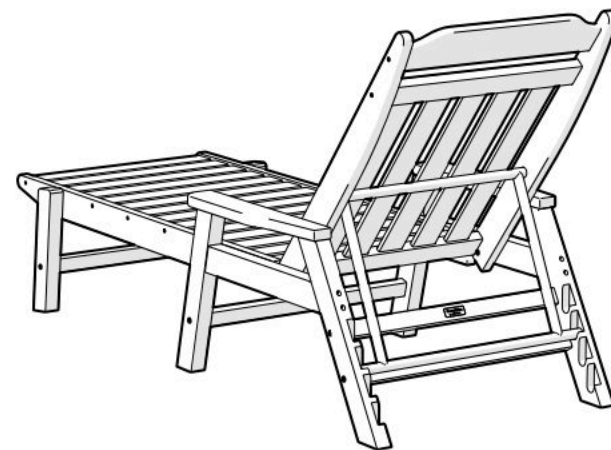

Install the Medallion
Brace in the upper
Pocket on the back leg



Front legs will have s
until weight is a

