

Assembly Directions for Counter and Bar Chairs



#PECC2131, #PEBC2135, #PZCC2131, #PZBC2135



*Cozi-Back
Counter Chair*



*Comfo-Back
Bar Chair*

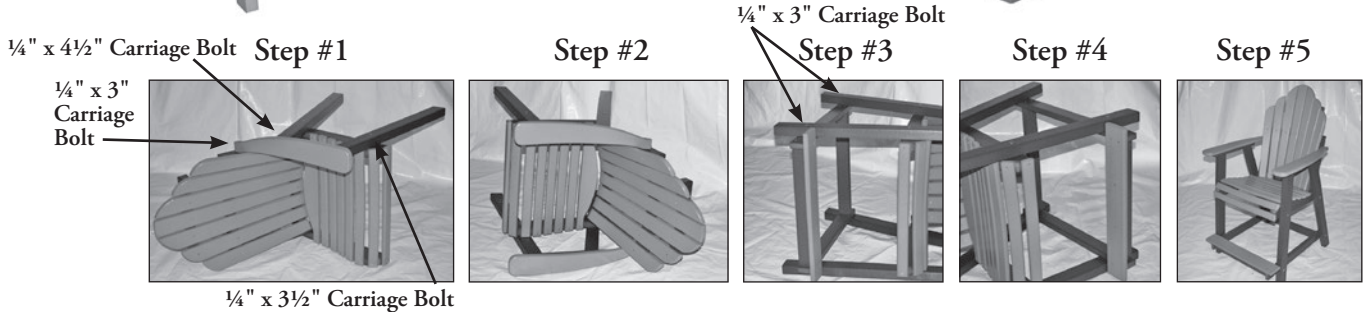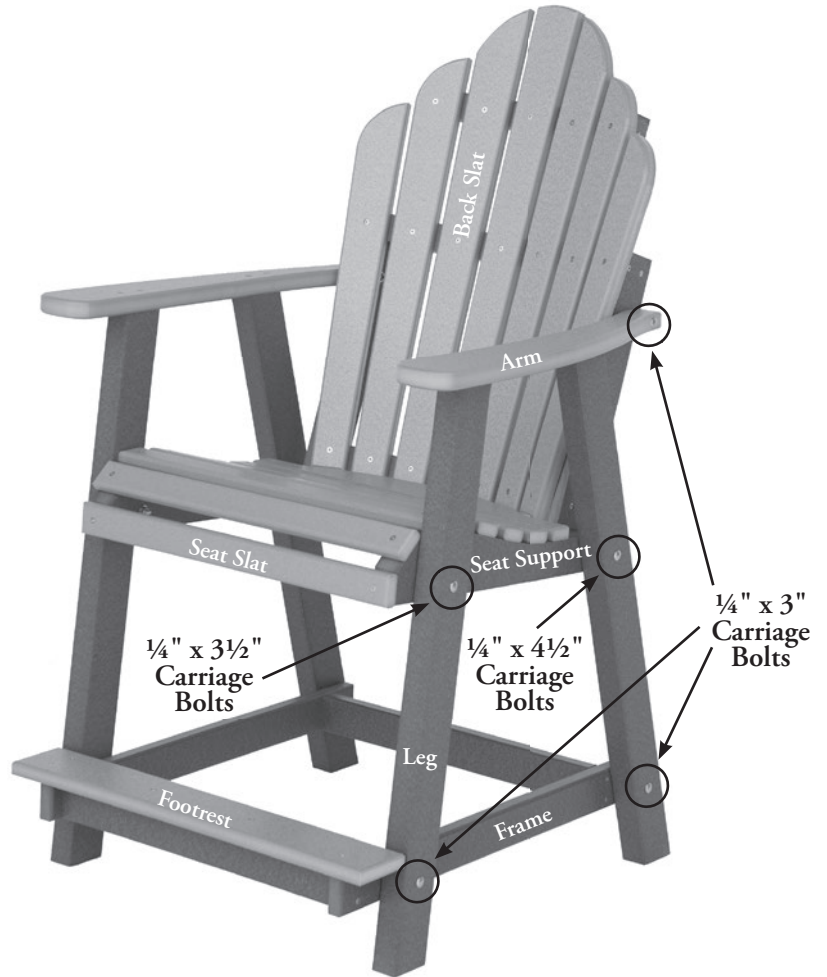

PACKAGE CONTENT


- | | |
|--------------------|----------------|
| 1 Seat | 2 Arms w/ Legs |
| 1 Back | 1 Footrest |
| 1 Hardware Package | |

TOOLS NEEDED:

Hammer &
7/16" Wrench

HARDWARE PACKAGE

- 6 1/4" x 3" Carriage Bolts
- 2 1/4" x 3 1/2" Carriage Bolts
- 2 1/4" x 4 1/2" Carriage Bolts
- 10 1/4" Flange Nuts
- 4 1/4" Acorn Nuts



Use to measure bolts

