



4' Adirondack Poly Swing


- (A) - Seat Assembly
(B) - Back Assembly
(C) - Back Slats
(D) - Armrest Assemblies

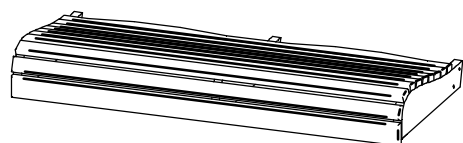


A.

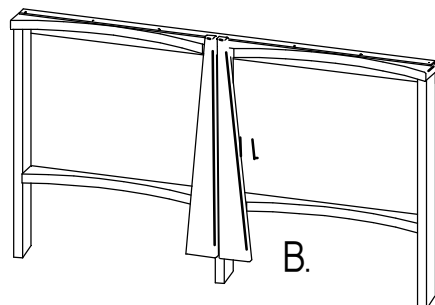

B.

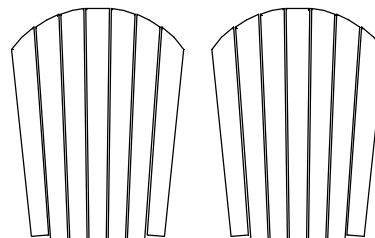

C.

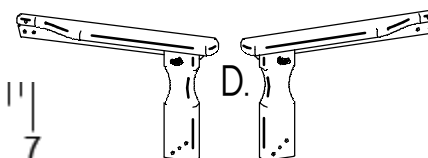


D.

Hardware

- 2 - 5/16" x 3 1/2" Bolts
- 8 - 5/16" x 2 1/2" Bolts
- 14 - Nuts (5/16")
- 28 - Washers
- 4 - 2" Screws
- 60 - 1 1/2" Screws
- 1 - Set Swing Chains




1. Attach (C) Back Slats to (B) Back Assembly using fifty-six 1 1/2" Screws. "Be sure to match all letters and/or numbers"

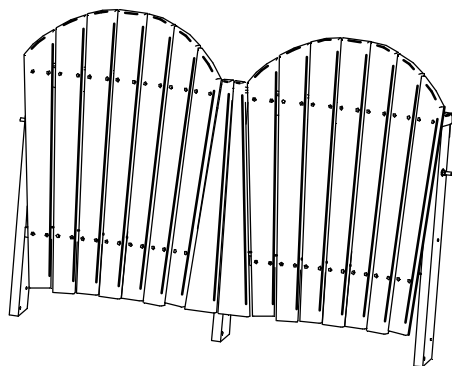


2. Attach (A) Seat Assembly to (B) Back Assembly using six 2 1/2" Bolts.


"Hex Head Bolt require 2 Washers - between bolt head - product & nut - product."

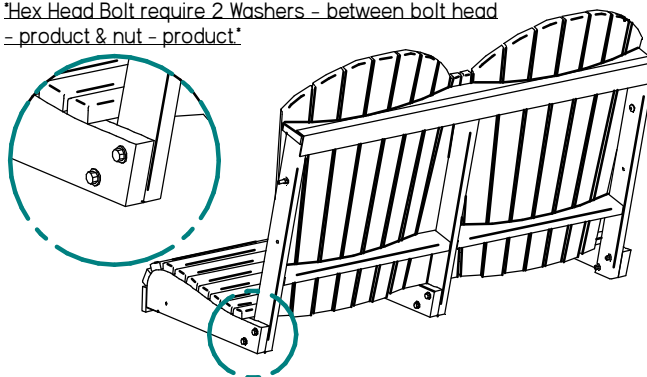


3. Attach (D) Armrest Assemblies using one 3 1/2" Bolt in front bottom hole and one 2 1/2" Bolt on back of each Armrest.

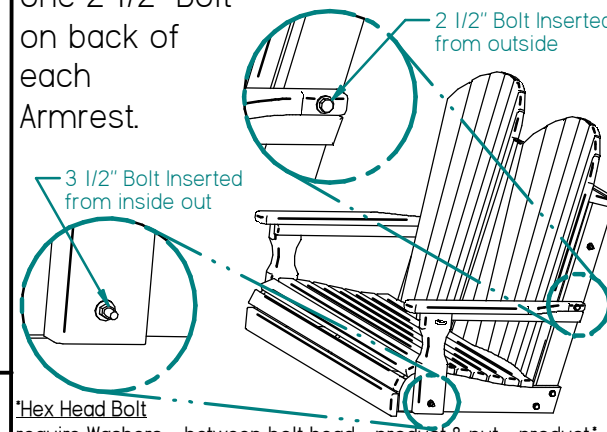

4. Install 2" Screws to Front Upright and 1 1/2" Screws to back of Armrest on each side.

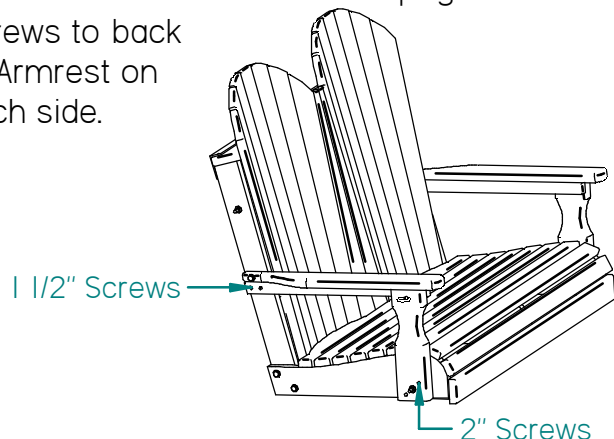

5. Attach short end of Chain to Back and long end through screw eye to bottom of front upright. Washer - Chain - Washer - Nut

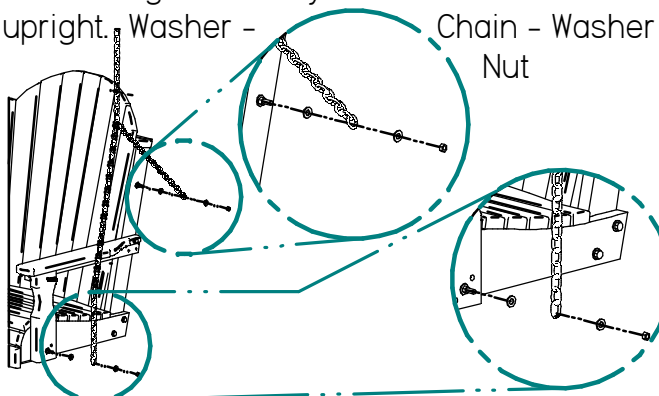

"Hex Head Bolt require Washers - between bolt head - product & nut - product."

Premium Poly Patios

Eco-Friendly Furniture For a "World of Difference!"

Toll Free 1-877-904-1234

www.Poly-Lumber-Furniture.com