


## 4' Classic Poly Bench


- 1-(A) Seat Assembly
- 1-(B) Back Assembly
- 2-(C) Armrest & Leg Assembly
- 1-(D) Headboard

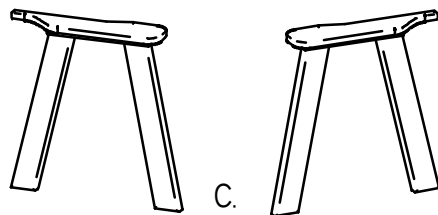

## Hardware

- 2 - 5/16" x 4" Hex Head Bolts
- 2 - 5/16" x 3" Hex Head Bolts
- 6 - 5/16" x 2 1/2" Hex Head Bolts
- 20 - 3/8" Washers
- 10 - 5/16" Nuts
- 8 - 2" Screws
- 8 - 1/2" Screws


1. Attach (D) Headboard to (B) Back Assembly using eight 1/2" Screws on the backside. "Be sure to always match letters and/or numbers"

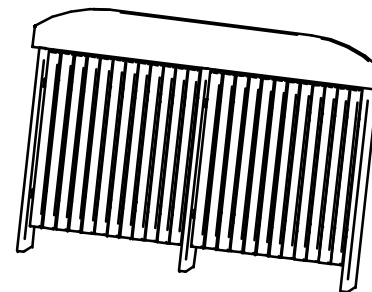

2. Assemble (A) Seat Assembly to (B) Back Assembly with four 2 1/2" bolts.


Put two in center and one in top hole on each end. Always use Washer between bolt head and product. Secure Bolt with washer and Nut.

"Be sure to always match letters and/or numbers"


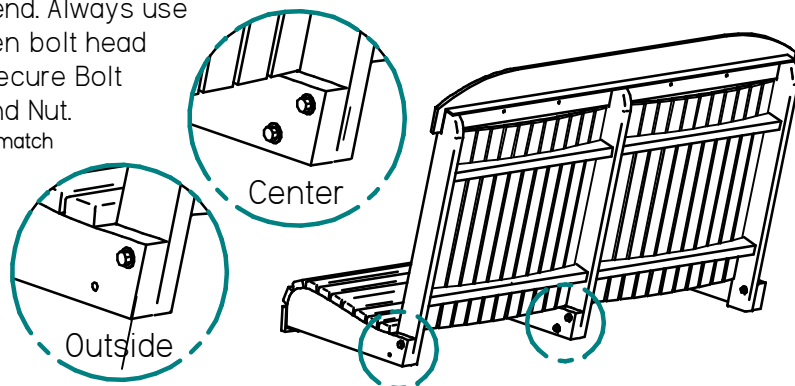


3. Attach Armrest & Leg Assembly to each side using 3" Bolt in front leg, 4" Bolt in back leg, and 2 1/2" Bolt in armrest. Always use a Washer between Bolt head and product. Secure each Bolt with washer and nut.

"Be sure to always match letters and/or numbers"

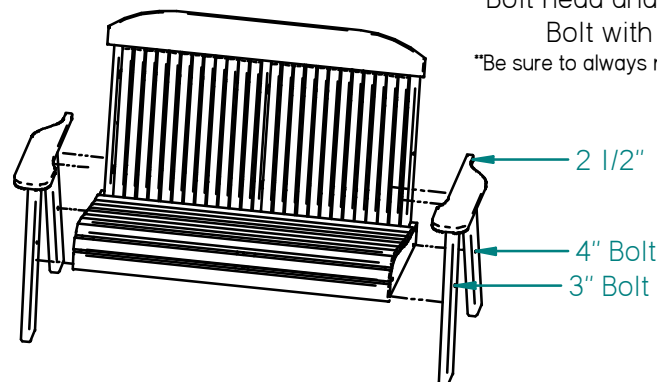

4. Install four 2" Screws on each side.

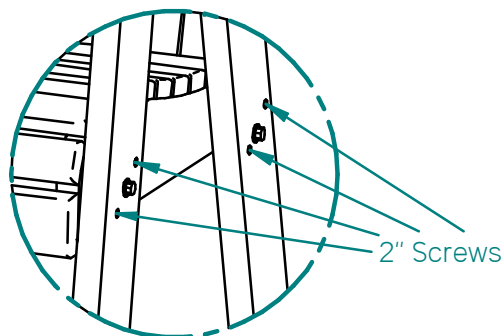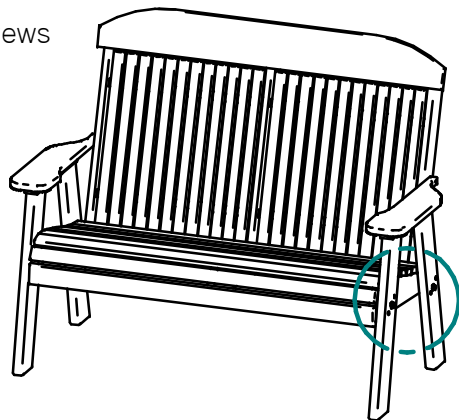

**Premium Poly Patios**

Eco-Friendly Furniture For a "World of Difference!"

Toll Free 1-877-904-1234

[www.Poly-Lumber-Furniture.com](http://www.Poly-Lumber-Furniture.com)

