


5' Classic Poly Swing

- (A) - Seat Assembly
- (B) - Back Assembly
- (C) - Headboard
- (D) - Armrest Assembly right side
- (E) - Armrest Assembly left side


Hardware

- 2- 5/16" x 3 1/2" Hex Head Bolt
- 10 - 5/16" x 2 1/2" Hex Head Bolt
- 16 - Nuts (5/16")
- 32 - Washers
- 4 - 2" Screws
- 4 - 1 1/2" Screws
- 8 - 1/2" Screws
- 1 - Set Swing Chains

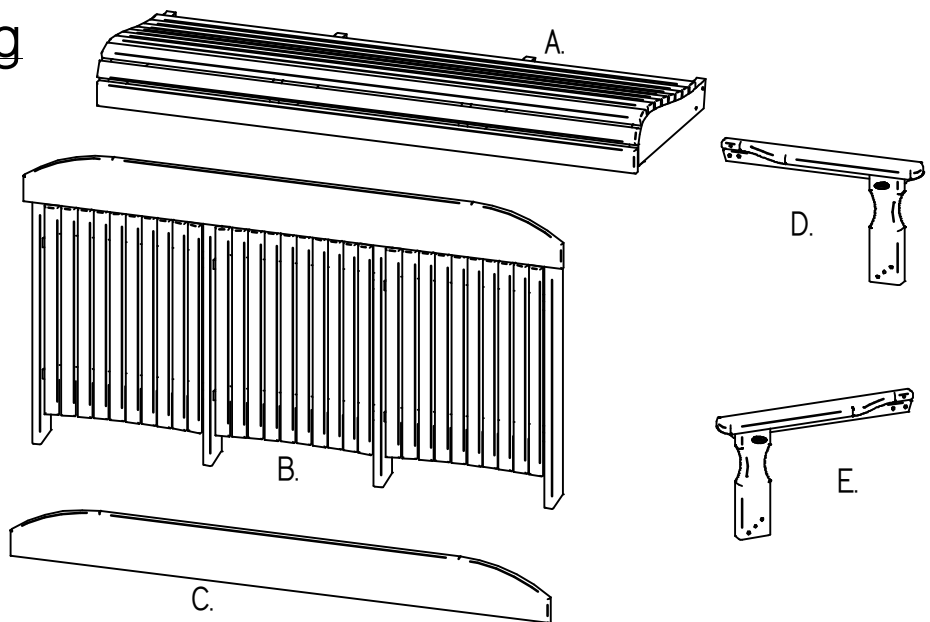


1. Attach (C) Headboard to (B) Back Assembly using eight 1/2" Screws on the back side.

"Be sure to match all letters and/or numbers"

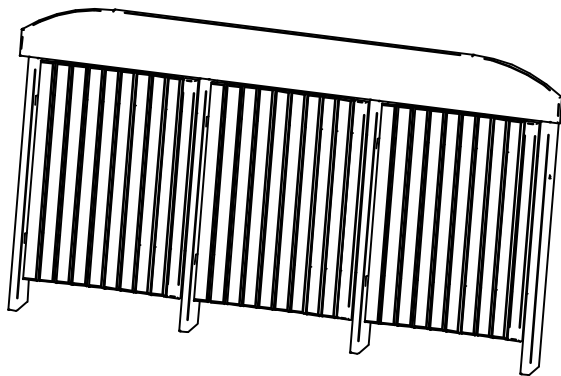

2. Attach (A) Seat Assembly to (B) Back Assembly using eight 2 1/2" Hex Head Bolts.



"Be sure to match all letters and/or numbers"

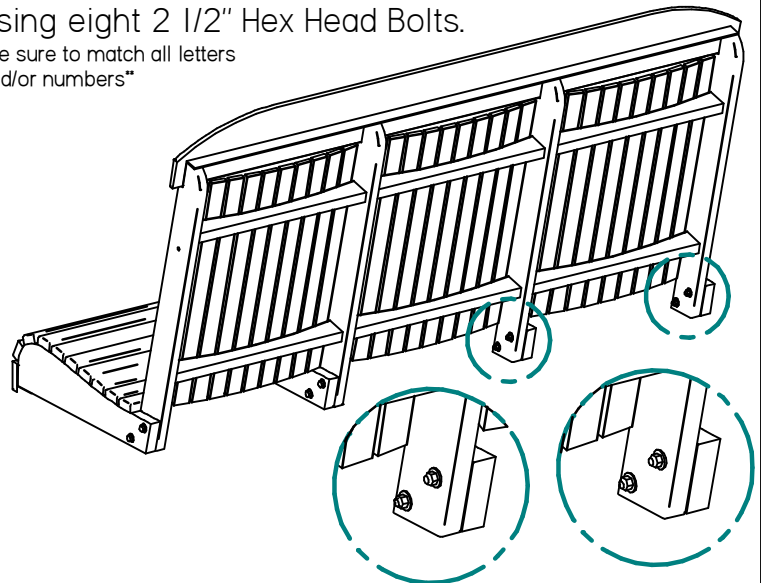

Hex Head Bolt require 2 Washers - between bolt head - product & nut - product.

3. Attach Armrest Assemblies to each side using 3 1/2" Hex Head Bolt in bottom front hole inserted from the inside out.



"Be sure to match all letters and/or numbers"

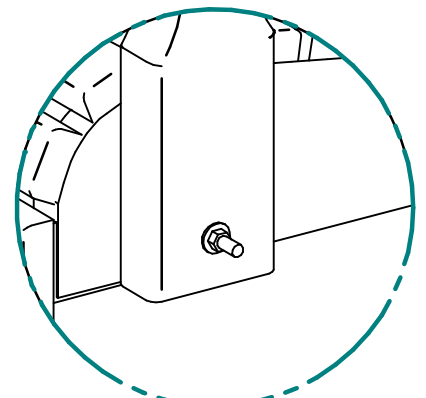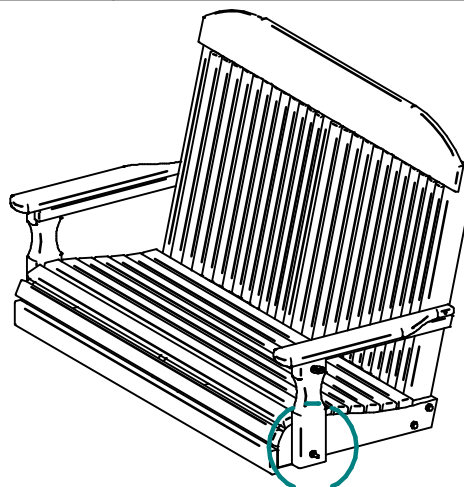

Hex Head Bolt require 2 Washers - between bolt head - product & nut - product.

4.



Attach Armrest to Back Support using 2 1/2" Hex Head Bolt on each side. "Insert bolt from outside"

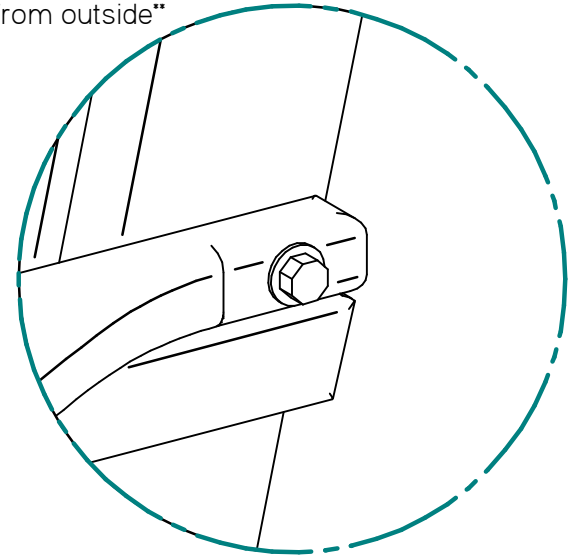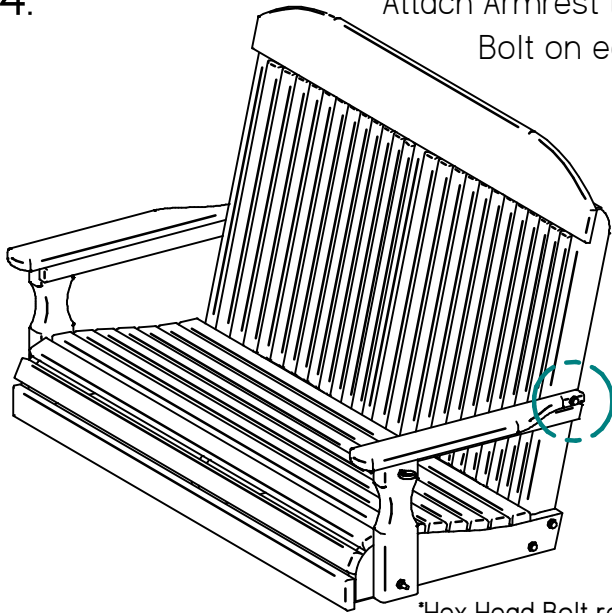

Hex Head Bolt require 2 Washers - between bolt head - product & nut - product

5.

Install 2" Screws in Front Upright and 1 1/2" Screws to back of Armrest.

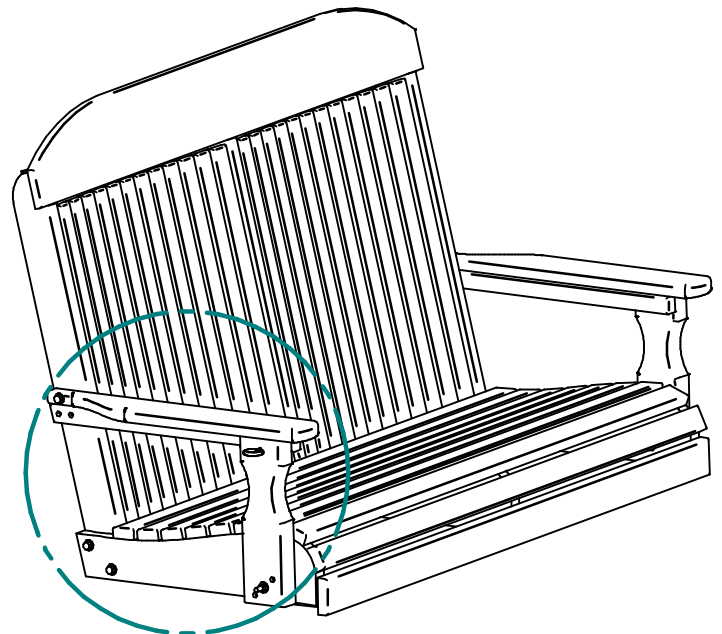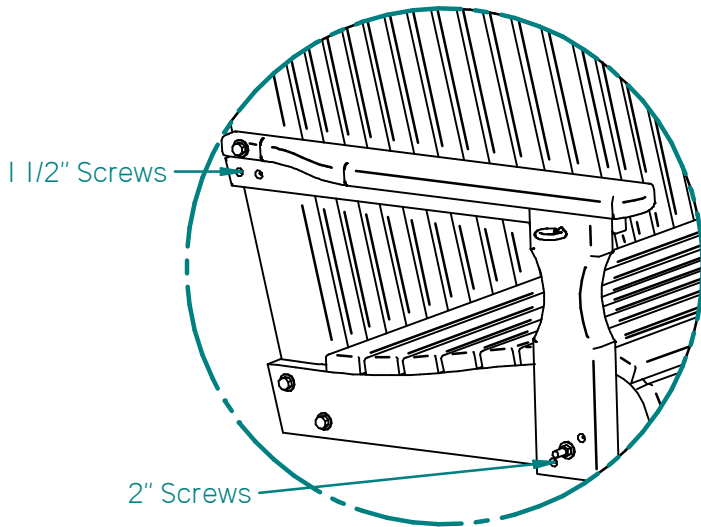

6.

Attach short end of Chain to Back and long end through screw eye to bottom of front upright. Washer - Chain - Washer - Nut

