
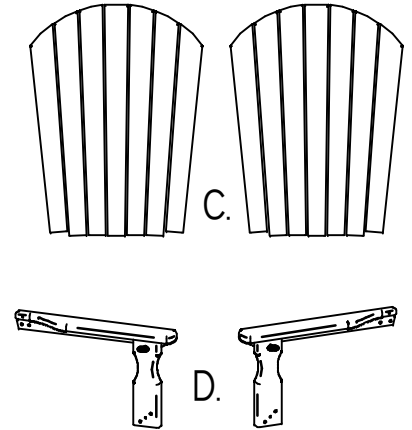


5' Adirondack Poly Swing


- (A) - Seat Assembly
- (B) - Back Assembly
- (C) - Back Slats
- (D) - Armrest Assemblies

Hardware

- 2 - 5/16" x 3 1/2" Bolts
- 10 - 5/16" x 2 1/2" Bolts
- 16 - Nuts (5/16")
- 32 - Washers
- 4 - 2" Screws
- 60 - 1 1/2" Screws
- 1 - Set Swing Chains

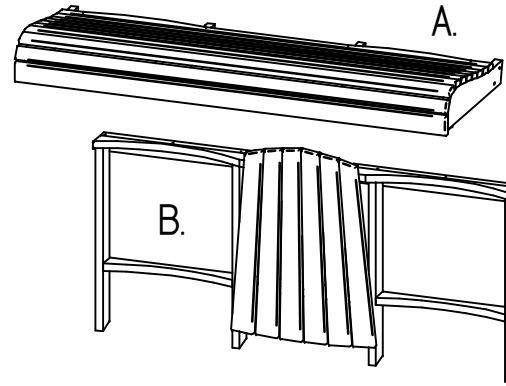


1. Attach (C) Back Slats to (B) Back Assembly using fifty-six 1 1/2" Screws. "Be sure to match all letters and/or numbers"

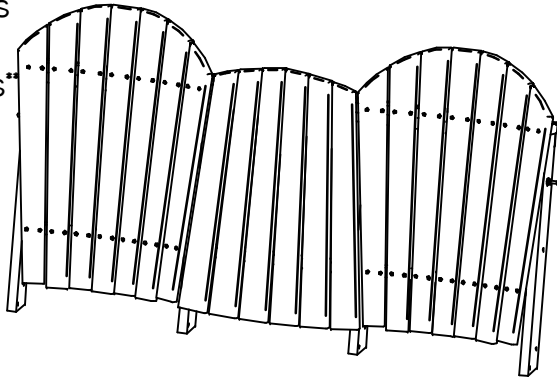


2. Attach (A) Seat Assembly to (B) Back Assembly using eight 2 1/2" Bolts.


"Hex Head Bolt require 2 Washers - between bolt head - product & nut - product"

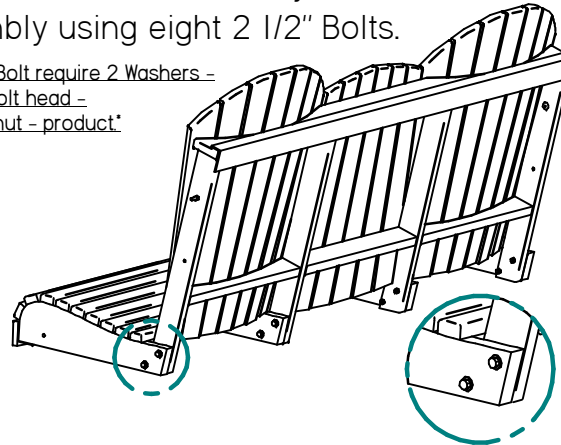


3. Attach (D) Armrest Assemblies using one 3 1/2" Bolt in front bottom hole and one 2 1/2" Bolt on back of each Armrest.

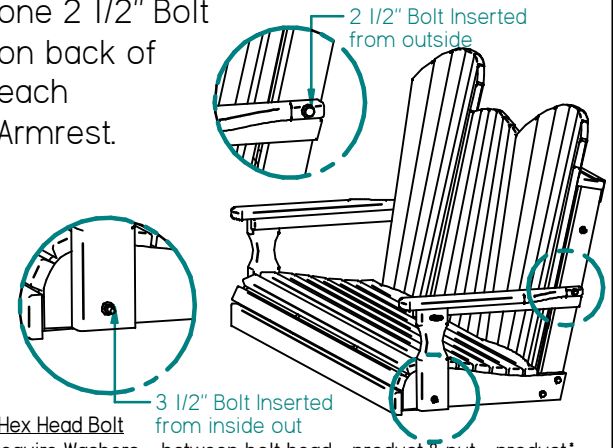

4. Install two 2" Screws to Front Upright and two 1 1/2" Screws to back of Armrest on each side.

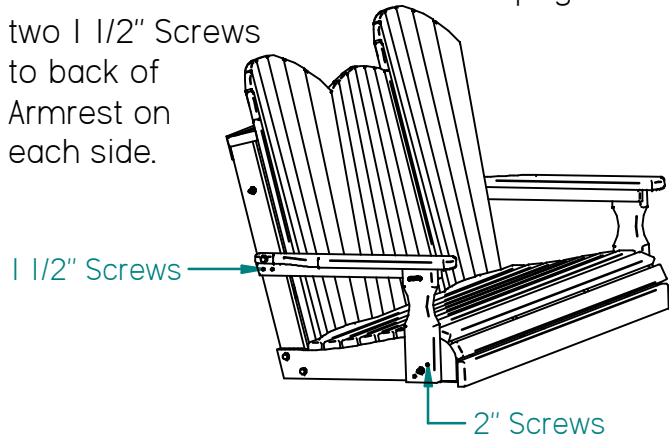

5. Attach short end of Chain to Back and long end through screw eye to bottom of front upright. Washer - Chain - Washer - Nut

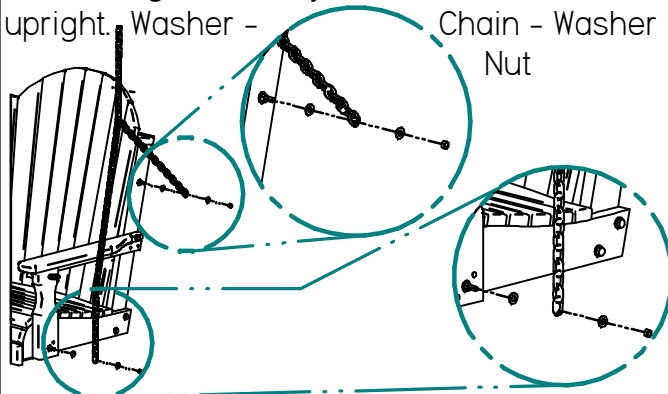

"Hex Head Bolt require Washers - between bolt head - product & nut - product"