
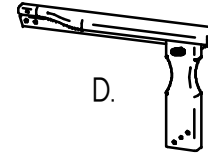
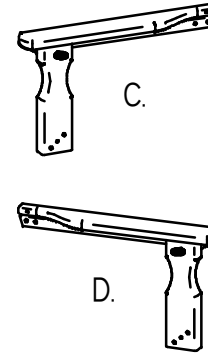
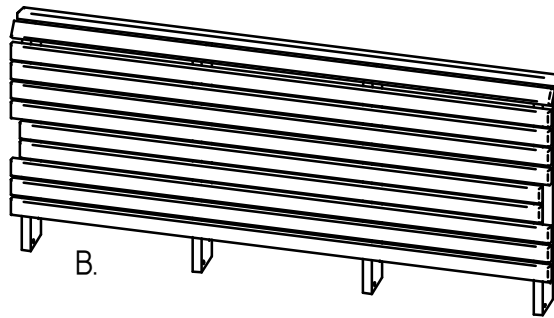


# 5' Plain Poly Swing

- (A) Seat Assembly  
(B) - Back Assembly  
(C) - Armrest Assembly left side  
(D) - Armrest Assembly right side

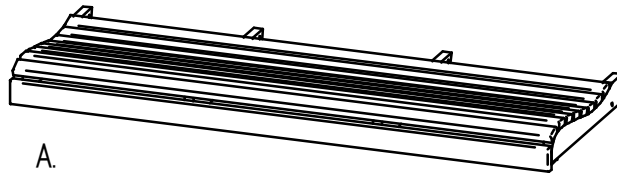


## Hardware

- 2 - 5/16" x 3 1/2" Bolt
- 2 - 5/16" x 3" Bolt
- 8 - 5/16" x 2 1/2" Bolt
- 16 - Nuts (5/16")
- 32 - Washers
- 4 - 2" Screws
- 4 - 1 1/2" Screws
- 1 - Set Swing Chains




1. Attach (A) Seat Assembly to (B) Back Assembly using eight 2 1/2" Bolts.

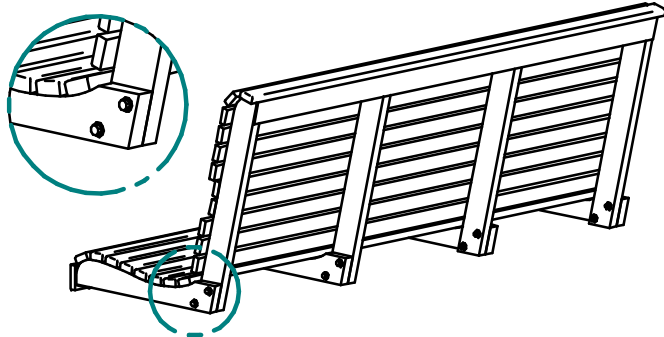


\*Hex Head Bolt require 2 Washers - between bolt head - product & nut - product\*

2. Attach Armrest Assemblies to each side using 3 1/2" Bolts in front hole.  
\*\*Insert bolt from inside out\*\*

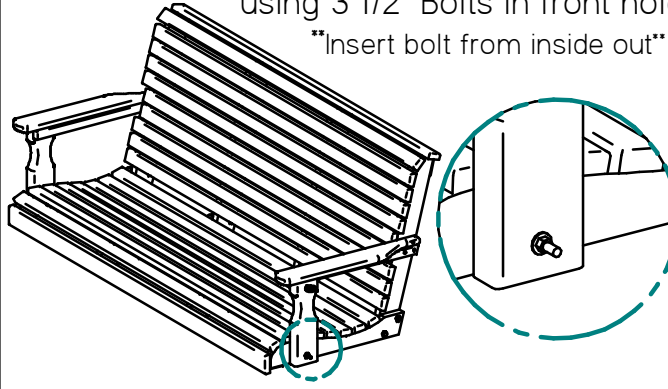


\*Hex Head Bolt require 2 Washers - between bolt head - product & nut - product\*

3. Attach Armrest to Back Support using 3" Bolt on each side.  
\*\*Insert bolt from inside out\*\*

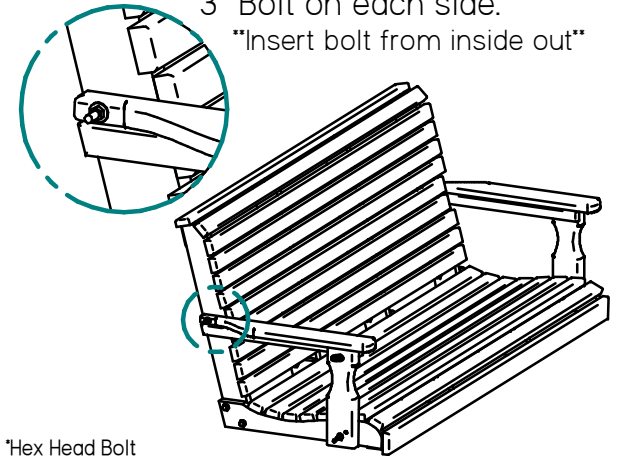


\*Hex Head Bolt require 2 Washers - between bolt head - product & nut - product\*

4. Install 2" Screws to Front Upright and 1 1/2" Screws to back of Armrest.

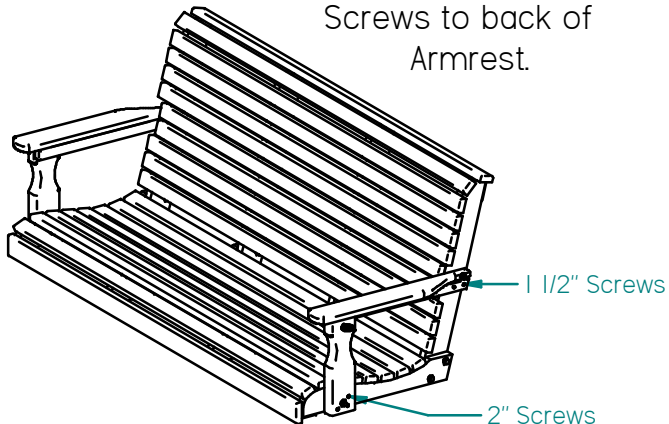

5. Attach short end of Chain to Back and other end through screw eye to bottom of front upright.  
Washer - Chain - Washer - Nut

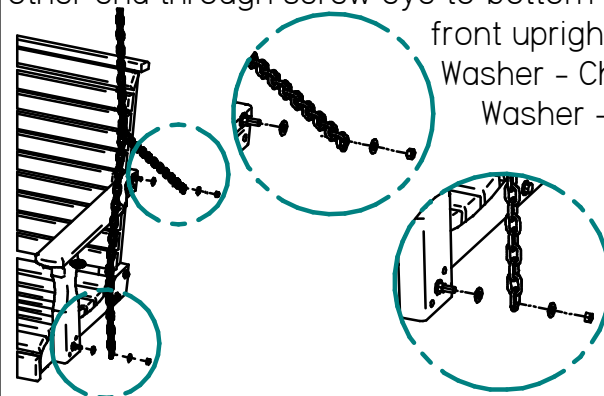

## Premium Poly Patios

Eco-Friendly Furniture For a "World of Difference!"

Toll Free: 877-904-1234

Email: [customerservice@poly-lumber-furniture.com](mailto:customerservice@poly-lumber-furniture.com)

[www.Poly-Lumber-Furniture.com](http://www.Poly-Lumber-Furniture.com)