


#414 4' Easy Swing



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16 & 9/16 Socket or 7/16 or 9/16 Wrench

Included Hardware

A		8 1/4" x 3" Carriage Bolt
B		8 1/4" Nut
C		2 5" Eye Bolt
D		2 3/8" Nuts

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, set the seat upright. (Illustration 2)
3. Set the back into the seat. Align the pre-drilled holes. Fasten using 6 (A) 1/4" x 3" Carriage Bolts & 6 (B) 1/4" Nuts. (Illustration 3)
4. Next fasten the arm of the arm/leg combo to the back using a 1 (A) 1/4" x 3" Carriage Bolts & 1 (B) 1/4" Nut. (Illustration 4) Repeat on the other side.
5. Fasten the leg of the arm/leg combo using a (C) 5" Eye Bolt & (D) 3/8" Nuts. (Illustration 5). Repeat on the other side.



Illustration 2



Illustration 3

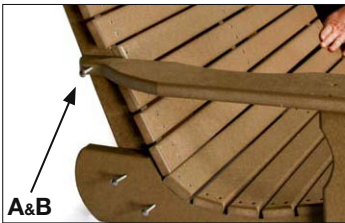


Illustration 4



Illustration 5